

# **ICESat (GLAS) Science Processing Software Document Series**

## **GSAS User's Guide Version 2.0**

**Jeffrey Lee/Raytheon ITSS  
Observational Science Branch  
Laboratory for Hydrospheric Processes  
NASA/GSFC Wallops Flight Facility  
Wallops Island, Virginia 23337**

**November 2001**

### **ICESat Contacts:**

**H. Jay Zwally, ICESat Project Scientist  
NASA Goddard Space Flight Center  
Greenbelt, Maryland 20771**

**Bob E. Schutz, GLAS Science Team Leader  
University of Texas Center for Space Research  
Austin, Texas 78759-5321**

**David W. Hancock III, Science Software Development Leader  
NASA/GSFC Wallops Flight Facility  
Wallops Island, Virginia 23337**





## **Foreword**

This document contains the GLAS Science Algorithm Software (GSAS) User's Guide. This document is developed under the structure of the NASA STD-2100-91, a NASA standard defining a four-volume set of documents to cover an entire software life cycle. Under this standard a section of any volume may, if necessary, be rolled out to its own separate document. This document is a roll-out of the user guide within the Product Specification Volume.

The GEOSCIENCE LASER ALTIMETER SYSTEM (GLAS) is a part of the EOS program. This laser altimetry mission will be carried on the spacecraft designated EOS ICESat (Ice, Cloud and Land Elevation Satellite). The GLAS laser is a frequency-doubled, cavity-pumped, solid state Nd:YAG laser.

This document was prepared by the Observational Science Branch at NASA GSFC/WFF, Wallops Island, VA, in support of B. E. Schutz, GLAS Science Team Leader for the GLAS Investigation. This work was performed under the direction of David W. Hancock, III, who may be contacted at (757) 824-1238, hancock@osb.wff.nasa.gov (e-mail), or (757) 824-1036 (FAX).

The following GLAS Team members contributed to the creation of this document:

Raytheon/Kristine Barbieri

Raytheon/Suneel Bhardwaj

Raytheon/Anita Brenner

972/David W. Hancock, III

Raytheon/Peggy Jester

Raytheon/Steve McLaughlin

Raytheon/Carol Purdy

Raytheon/Lee Anne Roberts



# Table of Contents

Foreword .....	iii
Table of Contents .....	v
List of Figures .....	ix
List of Tables .....	xi

## Section 1 Introduction

1.1 Identification of Document .....	1-1
1.2 Scope of Document .....	1-1
1.3 Purpose and Objectives of Document .....	1-2
1.4 Document Organization .....	1-2
1.5 Document Change History .....	1-2

## Section 2 Related Documentation

2.1 Parent Documents .....	2-1
2.2 Applicable Documents .....	2-1
2.3 Information Documents .....	2-1

## Section 3 Overview

3.1 Purpose .....	3-1
3.2 Environment .....	3-1
3.3 Functions .....	3-1
3.4 Restrictions and Limitations .....	3-3

## Section 4 Installation and Initialization

4.1 Unpack the Tarfile .....	4-1
4.2 Compilation .....	4-2
4.3 Verification .....	4-3

## Section 5 Common Functionality

5.1 Control Files .....	5-1
5.2 Processing Controls .....	5-3
5.3 ANC07 Constants Files .....	5-4
5.4 Invalid Values and Error/Status Reporting .....	5-7
5.5 ANC06 Metadata/Log File .....	5-12

## Section 6 GLAS\_L0proc

6.1 Function .....	6-1
6.2 Input Files .....	6-1
6.3 Output Files .....	6-2
6.4 Processing and Reprocessing Scenarios .....	6-3
6.5 Startup and Termination .....	6-3
6.6 Error and Warning Messages .....	6-4
6.7 Recovery Steps .....	6-4

6.8	Sample GLAS_L0proc Control File .....	6-4
-----	---------------------------------------	-----

**Section 7      GLAS\_L1A**

7.1	Function .....	7-1
7.2	Input Files.....	7-1
7.3	Output Files .....	7-2
7.4	Execution Scenarios .....	7-4
7.5	Startup and Termination.....	7-4
7.6	Error and Warning Messages .....	7-5
7.7	Recovery Steps .....	7-5
7.8	Sample GLAS_L1A Control File .....	7-6

**Section 8      GLAS\_Alt**

8.1	Function .....	8-1
8.2	Input Files.....	8-1
8.3	Output Files .....	8-4
8.4	Processing and Reprocessing Scenarios .....	8-4
8.5	Startup and Termination.....	8-7
8.6	Error and Warning Messages .....	8-8
8.7	Recovery Steps .....	8-8
8.8	Sample GLAS_Alt Waveform Control File .....	8-9
8.9	Sample GLAS_Alt Elevation Control File.....	8-13

**Section 9      GLAS\_Atm**

9.1	Function .....	9-1
9.2	Input Files.....	9-1
9.3	Output Files .....	9-3
9.4	Processing and Reprocessing Scenarios .....	9-3
9.5	Startup and Termination.....	9-6
9.6	Error and Warning Messages .....	9-7
9.7	Recovery Steps .....	9-7
9.8	Sample GLAS_Atm Control File .....	9-7

**Section 10      GLAS\_Reader**

10.1	Function .....	10-1
10.2	Input Files.....	10-1
10.3	Output Files .....	10-3
10.4	Startup and Termination.....	10-3
10.5	Error and Warning Messages .....	10-4
10.6	Recovery Steps .....	10-4
10.7	Sample GLAS_Reader Control File.....	10-4

**Section 11      MET Utility**

11.1	Function .....	11-1
11.2	Input Files.....	11-1
11.3	Output Files .....	11-2
11.4	Startup and Termination.....	11-2

11.5	Error and Warning Messages.....	11-3
11.6	Recovery Steps.....	11-4
11.7	Sample met_util Control File.....	11-4

## Section 12      Reformat Orbit Utility

12.1	Function.....	12-1
12.2	Input Files.....	12-1
12.3	Output File .....	12-2
12.4	Startup and Termination .....	12-2
12.5	Error and Warning Messages.....	12-3
12.6	Recovery Steps.....	12-4
12.7	Sample reforbit_util Control File.....	12-4

## Section 13      Create Granule Utility

13.1	Function.....	13-1
13.2	Input Files.....	13-2
13.3	Output Files.....	13-3
13.4	Startup and Termination .....	13-3
13.5	Error and Warning Messages.....	13-4
13.6	Recovery Steps.....	13-5
13.7	Sample createGran_util Control File (REFORB) .....	13-5
13.8	Sample createGran_util Control File (PREDORB) .....	13-6

## Section 14      Atmosphere Ancillary Utility

14.1	Function.....	14-1
14.2	Input Files.....	14-1
14.3	Output Files.....	14-2
14.4	Startup and Termination .....	14-3
14.5	Error and Warning Messages.....	14-4
14.6	Recovery Steps.....	14-5
14.7	Sample atm_anc Control File.....	14-6

## Appendix A      GLAS File Summary

A.1	GLAS Production File Naming Convention.....	A-1
A.2	EDOS L0 File Naming Convention .....	A-2
A.3	GLAS File Types .....	A-3
A.4	GLAS File Associations.....	A-5

## Appendix B      ANC07 Format, Files and Contents

B.1	ANC07 Format .....	B-1
B.2	ANC07 Files.....	B-2
B.3	ANC07 Contents .....	B-2

## Appendix C      GSAS ANC06 File Content

C.1	ANC06 Overview.....	C-1
C.2	ANC06 Example and Description.....	C-1

**Appendix D GSAS Error and Status Codes**

D.1	General Errors .....	D-1
D.2	Waveform Errors .....	D-6
D.3	Atmosphere Errors .....	D-7
D.4	Elevation Errors .....	D-9
D.5	HP Runtime Error Codes .....	D-12
	Abbreviations & Acronyms .....	AB-1
	Glossary .....	GL-1

## **List of Figures**

Figure 1-1	I-SIPS Software Top-Level Decomposition.....	1-1
Figure 5-1	Error Ancillary File Format .....	5-8



## List of Tables

Table 1-1	Document Change History .....	1-2
Table 3-1	GSAS PGEs.....	3-2
Table 4-1	GSAS Directory Structure .....	4-1
Table 5-1	Required Single-Instance Keywords .....	5-2
Table 5-2	Optional Multiple-Instance Keywords .....	5-2
Table 5-3	ANC07 files .....	5-5
Table 5-4	Invalid Values .....	5-7
Table 5-5	Error String Format.....	5-8
Table 5-6	Error Sections.....	5-9
Table 5-7	Error Severity Codes.....	5-9
Table 5-8	Result Codes .....	5-11
Table 6-1	GLAS_L0proc Inputs .....	6-1
Table 6-2	GLAS_L0proc Outputs.....	6-2
Table 7-1	GLAS_L1A Inputs.....	7-1
Table 7-2	GLAS_L1A Control Flags .....	7-2
Table 7-4	GLAS_L1A Execution Flags and Requisite Output Products ...	7-3
Table 7-3	GLAS_L1A Outputs .....	7-3
Table 8-1	GLAS_Alt Inputs.....	8-1
Table 8-2	GLAS_Alt Control Flags .....	8-3
Table 8-3	GLAS_Alt Outputs .....	8-5
Table 8-4	GLAS_Alt Execution Flags and Output Products .....	8-6
Table 9-1	GLAS_Atm Inputs .....	9-1
Table 9-2	GLAS_Atm Control Flags .....	9-3
Table 9-3	GLAS_Atm Outputs.....	9-4
Table 9-4	GLAS_Atm Execution Flags and Output Products .....	9-5
Table 10-1	GLAS_Reader Inputs .....	10-1
Table 10-2	GLAS_Reader Control Flags.....	10-2
Table 11-1	met_util Inputs .....	11-1
Table 11-2	met_util Outputs.....	11-2
Table 11-3	Error Resolution .....	11-4

Table 12-1	reforbit_util Inputs .....	12-1
Table 12-2	reforbit_util Keywords.....	12-2
Table 12-3	reforbit_util Outputs.....	12-2
Table 12-4	Error Resolution .....	12-4
Table 13-1	Segment Description.....	13-1
Table 13-2	createGran_util Inputs .....	13-2
Table 13-3	createGran_util Keywords.....	13-2
Table 13-4	Error Resolution .....	13-5
Table 14-1	atm_anc Inputs .....	14-2
Table 14-2	atm_anc Outputs.....	14-3
Table 14-3	Error Resolution .....	14-5
Table A-1	GLAS File Naming Keys .....	A-1
Table A-2	EDOS L0 File Naming Keys .....	A-2
Table A-3	GLAS File Types .....	A-3
Table A-4	GSAS File Associations .....	A-5
Table B-1	ANC07 Granule Names and Contents.....	B-2

# Section 1

## Introduction

### 1.1 Identification of Document

This document is identified as the GLAS Science Algorithm Software (GSAS) User's Guide. The unique document identification number within the GLAS Ground Data System numbering scheme is TBD. Successive editions of this document will be uniquely identified by the cover and page date marks.

### 1.2 Scope of Document

The GLAS I-SIPS Data Processing System, show in Figure 1-1, provides data processing and mission support for the Geoscience Laser Altimeter System (GLAS). I-SIPS is composed of two major software components - the GLAS Science Algorithm Software (GSAS) and the Scheduling and Data Management System (SDMS). GSAS processes raw satellite data and creates EOS Level 1A/B and 2 data products. SDMS provides for scheduling of processing and the ingest, staging, archiving and cataloging of associated data files. This document is the User's Guide.

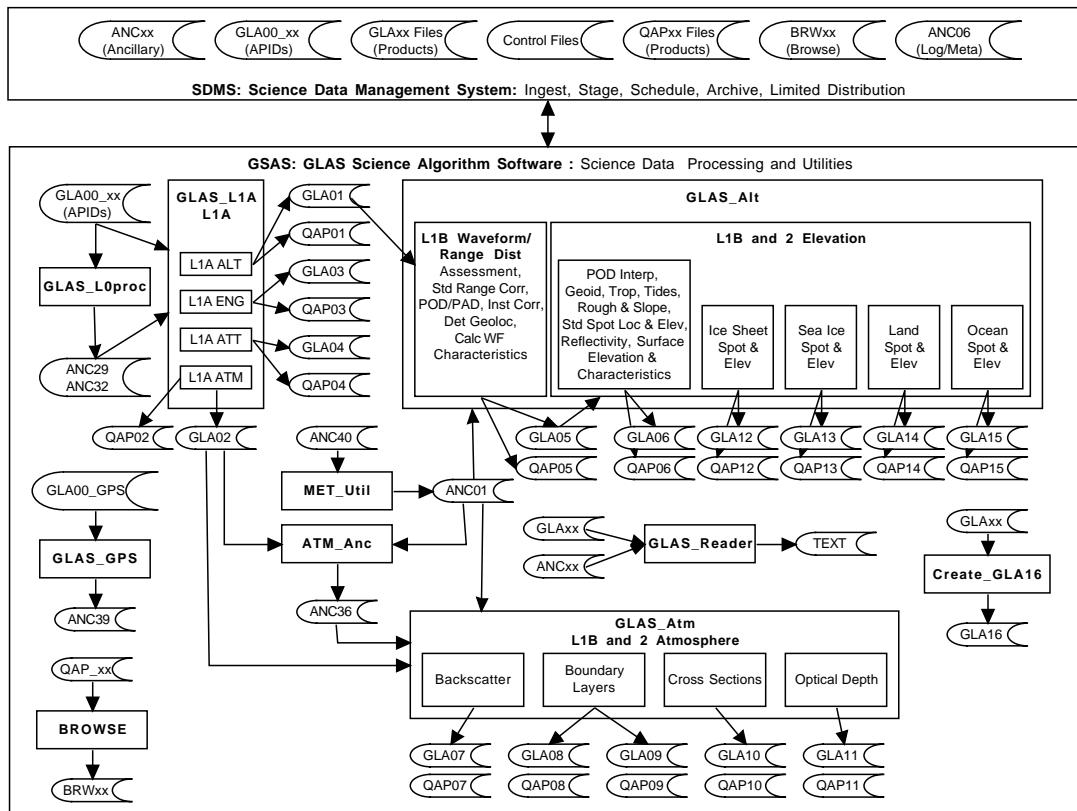


Figure 1-1 I-SIPS Software Top-Level Decomposition

### 1.3 Purpose and Objectives of Document

The purpose of this document is to provide the GSAS end users with instructions explaining how to operate the software effectively.

### 1.4 Document Organization

This document's outline is assembled in a form similar to those presented in the NASA Software Engineering Program [Information Document 2.3a].

### 1.5 Document Change History

**Table 1-1 Document Change History**

<b>Document Name: GLAS Science Algorithm Software Users' Guide</b>		
<b>Version Number</b>	<b>Date</b>	<b>Nature of Change</b>
Version 0	August 1999	Original Version.
Version 1	November 2000	Revised for V1 software.
Version 2	November 2001	Revised for V2 software.

**Section 2**  
**Related Documentation**

## **2.1 Parent Documents**

Parent documents are those external, higher-level documents that contribute information to the scope and content of this document. The following GLAS documents are parent to this document.

- a) *GLAS Science Software Management Plan* (GLAS SSMP), Version 3.0, August 1998, NASA Goddard Space Flight Center, NASA/TM-1999-208641/VER3/VOL1.

The GLAS SSMP is the top-level Volume 1 (Management Plan Volume) document of the four volumes of NASA software engineering documentation [Applicable Reference 2.2c]. It dictates the creation and maintenance of the Product Specification Volume (Volume 2). This document is a roll out of the Product Specification Volume.

## **2.2 Applicable Documents**

- a) NASA Software Documentation Standard Software Engineering Program, NASA, July 29, 1991, NASA-STD-2100-91.
- b) GLAS Science Algorithm Software Detailed Design Document (GSAS DD), Version 2.0, November 2001, NASA Goddard Space Flight Center.
- c) GLAS Science Algorithm Software Version Description Document (GSAS VDD), Version 2.0, November 2001, NASA Goddard Space Flight Center.
- d) GLAS ISIPS Operational Procedures Manual, TBD.

## **2.3 Information Documents**

- a) GLAS Level 0 Instrument Data Product Specification, Version 2.2, March 17, 1998, NASA Goddard Space Flight Center Wallops Flight Facility, GLAS-DPS-2610.
- b) GLAS Standard Data Products Specification - Level 1, Version 4.0, November 2001, NASA Goddard Space Flight Center Wallops Flight Facility, GLAS-DPS-2621.
- c) GLAS Standard Data Products Specification - Level 2, Version 4.0, November 2001, NASA Goddard Space Flight Center Wallops Flight Facility, GLAS-DPS-2641.
- d) GLAS Science Data Management Plan (GLAS SDMP), Version 45.0, October 2001, NASA Goddard Space Flight Center Wallops Flight Facility, GLAS-DMP-1200.



## Section 3

# Overview

### **3.1 Purpose**

GSAS generates the GLAS Standard Data Products and associated metadata describing the products and their quality. The software uses GLAS telemetry and ancillary data to produce the products using algorithms defined by the GLAS Instrument and Science Teams.

GSAS is delivered as a set of libraries and PGEs (Product Generation Executables). A PGE is an executable program which performs a specific function. The ‘core’ PGEs perform specific portions of the GLAS data processing and generate deliverable GLAS Data Products (Products). The core PGEs are accompanied by a set of utility PGEs which perform such functions as creating ancillary data files, performing quality assurance and generating browse products.

Throughout this document, files are referenced as one of two types: GLA or ANC. GLA files are fixed-length, integer-binary format product files containing Level 0-2 GLAS science data. Level 3 science data is provided with the HDF-EOS formatted GLA16. GLA files are both input and output to GSAS. ANC files are multi-format ancillary files which are required for processing. A list of the GLA and ANC files is supplied in Appendix A. These files are detailed in the GLAS Data Management Plan and GLAS Standard Data Product Specifications Documents.

### **3.2 Environment**

GSAS software is developed for and delivered on the UNIX platform. This document assumes that the reader is familiar with UNIX operating system conventions. The software is currently developed, tested and supported on HP/UX 11.0 with Fortran 2.3.

### **3.3 Functions**

The functionality of the PGEs is grouped into four major categories: L1A processing, Altimetry processing, Atmosphere processing, and utility functions.

L1A processing uses Level-0 data and L1A science algorithms to create Level-1A products (GLA01-04).

Altimetry processing uses L1A data and waveform/elevation science algorithms to create Level-1B waveform (GLA05) and Level-1B/2 elevation (GLA06, GLA11-15) products.

Atmosphere processing uses L1A data and atmosphere science algorithms to create Level 1-B and 2 (GLA07-11) atmosphere products.

The utilities perform functions which are ancillary to the main data processing process. This includes such tasks as data reformatting, ancillary file creation, browse product creation, and data validation.

In order to perform these functions, PGEs are designed to reflect a natural division in GLAS data processing. Table 3-1 lists the name, category, and function of each of these executables.

**Table 3-1 GSAS PGEs**

PGE	Category	Functionality
GLAS_L0proc	Utility	Creates an ancillary file from Level-0 APIDs which contains timing and data alignment information.
GLAS_L1A	L1A	Reads the GLAS_L0proc ancillary file and associated APID files to create Level-1A GLAS data.
GLAS_Alt	Altimetry	Reads altimetry-related Level-1A data files to create Level-1B and 2 GLAS altimetry files.
GLAS_Atmos	Atmosphere	Reads atmosphere-related Level-1A data files to create Level1b and 2 GLAS atmosphere files.
GLAS_Reader	Utility	Reads specified GSAS ancillary and/or product files and creates a text-based, human-readable representation of the data.
atm_anc	Utility	Reads atmosphere Level-1 products and creates atmosphere calibration files.
met_util	Utility	Reads and subsets standard Meteorological files, creating GSAS ancillary MET files.
reforbit_util	Utility	Reads Reference Orbit files to create ascending equatorial crossings.
createGran_util	Utility	Reads Predicted Orbit files, creating all ascending equatorial crossings, and +/- 50 degree latitude crossings.

The GSAS design allows a significant amount of commonality among the executables. This is beneficial from both a software maintenance and ease-of-use point of view. Common functionalities include:

- Use of a control file for dynamic processing information.
- Ability to perform partial processing.
- Ability to perform selective processing based on input and output time specification.
- Use of change-controlled ancillary files which contain changeable Science Team-supplied parameters.
- Input data time synchronization
- Creation of metadata which contains a full processing history.

- Use of a standardized error/message reporting facility with user-defined options available.

### **3.4 Restrictions and Limitations**

GSAS has the following limitations:

- GSAS is supported on HP/UX 11.0 with HP Fortran 2.3.

Refer to the appropriate version of the GSAS Version Description document for additional information.



**Section 4**  
**Installation and Initialization**

This section will detail installation instructions for GSAS. As GSAS will be delivered with HP/UX 11.0 binaries, recompilation is not required, but recommended. Additionally, instructions are provided in case the user wishes to recompile using debug or optimization options. Recompilation is not supported on different architectures since GSAS has only been tested under HP/UX 11.0/F90 2.3.

**Note:** Throughout this document, the text refers to directory names preceded by a “\$” and typed in all capital letters. This means that the directory path is local to the specific installation and not hard-coded within the GSAS. (This document uses standard UNIX ‘sh’ variable conventions to indicate such.) Other pathnames are specified relative to the local directories and only the relative relationship is important.

## 4.1 Unpack the Tarfile

Create a production directory for the GLAS\_Exec program. This directory is designated \$GLAS\_HOME.

```
mkdir $GLAS_HOME
```

Copy the delivered tar file into GLAS\_HOME and untar it. We will refer the tar file as ‘gsas.tar’, but the actual delivery file may be named differently. Designate \$DIST\_DIR as the source of the gsas.tar tarfile.

```
cd $GLAS_HOME  
cp $DIST_DIR/gsas.tar .  
tar xf gsas.tar
```

The untar process will create the directory structure described in Table 4-1.

**Table 4-1 GSAS Directory Structure**

Directory	Description
\$GLAS_HOME/bin	GSAS executables. Executables should always be linked from this directory.
\$GLAS_HOME/lib	GSAS shared libraries. (The user should always set the SHLIB_PATH environmental variable to this directory or link the libraries from this directory into the working directory.)
\$GLAS_HOME/cc_util	Contains makefile utilities.
\$GLAS_HOME/idl	Contains IDL code (if delivered).
\$GLAS_HOME/data	Contains sample control and ancillary files.
\$GLAS_HOME/src	Contains Fortran90 and C source code.
\$GLAS_HOME/test	Contains test data and scripts to verify proper operation of the software.

## 4.2 Compilation

Change to the production directory and perform the following makes:

```
cd $GLAS_HOME  
make clean  
make all
```

After this process is complete, all object files, libraries, and executables will have been re-created and installed in the appropriate directories. This is the recommended mode of compilation. It is the method used to create the distribution binaries and for final integration and acceptance testing.

### 4.2.1 Debugging

The debug option signal that the compiler should produce code which performs bounds checking, floating point exception checking, runtime error trapping and allows for use of a symbolic debugger.

If debug checking is desired, the software must be recompiled with the “debug” flag.

```
cd $GLAS_HOME  
make clean  
make debug  
make install
```

After this process is complete, all object files, libraries, and executables will have been re-created with the debug option and installed in the appropriate directories.

### 4.2.2 Optimization

The optimization option signal that the compiler should produce optimized code. These optimizations include such things as full level-3 optimization, automatic parallelization, array reordering, and subroutine inlining. Note that compiling with optimization takes a significant amount of time. Given that optimization is a “risky” process, refer to the appropriate version of the GSAS Version Description Document for additional information.

If optimization is desired, the software must be recompiled with the “fast” flag.

```
cd $GLAS_HOME  
make clean  
make fast  
make install
```

After this process is complete, all object files, libraries, and executables will have been re-created, optimized with the “fast” option and installed in the appropriate directories.

## 4.3 Verification

GSAS includes a suite of data and scripts to verify proper operation of the software. This suite is a subset of the GSAS Acceptance test. The test runs each of the GSAS PGEs with approximately 600 seconds of test data. The test should take less than 20 minutes to complete.

Assuming the software has been successfully compiled and installed, verify its operation as follows:

```
cd $GLAS_HOME/test  
.verify.sh
```

The following shows a successful verification test. Contact the GSAS development team if your results differ

```
GSAS Verification Test  
Cleaning up...  
Testing GLAS_L0proc...  
    Passed.  
Testing GLAS_L1A...  
    Passed.  
Testing reforbit_util...  
    Passed.  
CreateGran_util...  
    Passed  
Testing met_util...  
    Passed.  
Testing atm_anc...  
    Passed.  
Testing GLAS_Atm...  
    Passed.  
Testing GLAS_Alt (Waveforms)...  
    Passed.  
Testing GLAS_Alt (Elevation)...  
    Passed.
```

After successful completion, the newly created data may be removed by running the following command:

```
cd $GLAS_HOME/test  
./cleanup.sh
```

## Section 5

# Common Functionality

GSAS code was designed to maximize software reuse capabilities. As such, it provides for a great deal of common functionality among its PGEs. GSAS uses standardized control files, constants files, and error/status reporting facilities. This makes GSAS easier to use since, for example, a control file for one PGE is basically the same style as a control file for other PGEs.

### **5.1 Control Files**

Control files are the interface between GSAS and the user (or controlling process). Control files provide dynamic control information to PGEs. Static information is provided by ancillary constants files (ANC07). A single control file can provide instructions for more than one PGE. Section breaks are used to delimit those instructions of significance to the specific PGE.

#### **5.1.1 Use**

The name of the control file is passed as a command-line argument during each invocation of the PGE. Most PGEs will terminate with a fatal error if the command-line argument is missing, the specified file does not exist, or the file is unreadable. The exception to this rule is GLAS\_Reader, which provides a rudimentary user-interface when invoked without a control file name.

#### **5.1.2 Format**

GSAS control files are designed to be part of a larger control file used by one or more PGE. As such, it specifies sections that identify the PGE that will perform the task requiring the inputs contained in the section. Each section is bounded by an "=" sign in column 1, followed by the PGE name that requires the control inputs. Exact section names will be shown in the PGE-specific control file section of this document.

All GSAS control files are created in standard GSAS “keyword=value” format. This format is text-based and consists of a line containing a keyword/value pair delimited by an equal sign (=). The ordering of the keywords is not relevant but should follow a convention for consistency. Multiple instances of certain keywords are allowed. The keyword is not case sensitive. Spaces are allowed, but not required. Comment lines must be prepended by a “#” character. The keyword is limited to 25 characters; the value is limited to 229 characters.

#### **5.1.3 Content**

PGE sections within a control file contain both common and process-specific information. The process-specific portions of control files will be provided within the documentation for each specific executable. This section will document common elements of the PGE control files.

Within a control file section, some information is required, other is optional. Required single-instance keywords include:

**Table 5-1 Required Single-Instance Keywords**

Keyword	Value
TEMPLATE_NAME=	Name of the control file template.
EXEC_KEY=	Unique (per day) execution key
DATE_GENERATED=	Date the control file was generated.
OPERATOR=	Operator who generated the control file.

Optional multiple-instance keywords include:

**Table 5-2 Optional Multiple-Instance Keywords**

Keyword	Value
CYCLE=	Cycle of data [number start_time stop_time]
REV=	Revolution of data [number start_time stop_time]
TRACK=	Track [number start_time stop_time]
INPUT_FILE=	Input file [filename start_time stop_time]
OUTPUT_FILE=	Output file [filename start_time stop_time]

#### 5.1.4 Input/Output File Specification

Input and Output files are required to be designated using the GSAS-standard naming convention defined in Appendix A. The type of each file specified is determined by parsing specific components of the filename which are required by all of the naming methods defined in the specification. These common components of all filenames are:

HHHxx\_mmm...ff.eee

(where: HHH is the type identification, xx is the type id number, mmm is the release number, ff is the file sub-type, and eee is the file extension.)

GSAS software uses the type identification, the type id number and the file sub-type to determine what type of file is specified in the control file. The filetype-parsing routines are not case-sensitive when determining the type of file specified. However, the filenames are case-sensitive during file opening and creation.

All files are required to be delimited by start and stop times. These times are floating point numbers. On both input and output, records are skipped until the time in the current record is greater than or equal to the specified start-time and less than or equal to the specified stop-time. Static ancillary files are required to have start-times and stop-times present for consistency, but these are currently ignored.

Files with INPUT\_FILE and OUTPUT\_FILE keywords must be listed in chronological order based on start and stop times. The start time of one file may overlap the stop time of another. In this case, data within the overlapping range will be written to the first file and not the second. These rules apply to CYCLE, TRACK, and REV keywords, as well.

### 5.1.5 Example

Following is a partial control file which highlights elements common to all GSAS control files. Examples of specific control files will be provided within the documentation for each specific PGE.

```
#-----Start of Control File
#
# <description of control file>
#
#-----Execution Information
#
=GLAS_L1A
TEMPLATE=<template name>
EXEC_KEY=<unique execution key>
DATE_GENERATED=<date/time control file was generated>
OPERATOR=<operator name/uid>
#
#-----Static ANC Files
#
# Common Input ANC07 Files: 00=error, 01=global
#
INPUT_FILE=<anc0700_error_filename starttime stoptime>
INPUT_FILE=<anc0701_global_filename starttime stoptime>
#
#-----Output ANC06 File
#
# Output ANC06
#
OUTPUT_FILE=<anc06_filename starttime stoptime>
```

### ***{processing scenario-specific elements}***

```
#-----End of Control File
#
=End of Control File
```

## 5.2 Processing Controls

The core PGEs (GLAS\_L1A, GLAS\_Atm, GLAS\_Alt) provide for flexible methods of processing GLAS data. All controls are specified via the control file. Methods of controlling data processing include:

- Input data time selection
- Output data time selection

- Execution control

The detailed documentation for each PGE will identify what respective types of processing controls are available.

### **5.2.1 Input Data Time Selection**

As seen in the Control File section, all input files are required to be delimited by start and stop times on their control file entry. PGEs which support time selection will skip that data which are outside the limits defined by start and stop times. This data will be read, but not processed. Additionally, given the case of multiple input files of the same type, the PGE will seemlessly skip from one file to the next when all data from the current file have been read (or skipped via time selection).

Certain input ancillary files do not support input time selection but require, none the less, start and stop times in their control file entry. The recommended method of delimiting time in the case is to use the minimum-to-maximum range of input dynamic data time for these entries.

### **5.2.2 Output Data Time Selection**

As with input files, all output files are required to be delimited by start and stop times on their control file entry. PGEs which support time selection will not write that data which are outside the limits defined by start and stop times. Additionally, given the case of multiple output files of the same type, the PGE will seemlessly skip from one file to the next when the current data time falls outside the range of the current output file. It is important to note that input data time selection and output data time selection are completely independent of one another. There is, however, a practical relationship between the two, since output data for a particular time cannot be written if no input data for that time is read (or specified).

### **5.2.3 Execution Scenarios**

Most core PGEs permit multiple execution scenarios. Certain sets of computations have been grouped together by the software designers. Execution of these sets can be specified via specific execution flags with the PGE control file. The detailed documentation for each PGE specifies what execution flags are available and the processes they control. Additionally, there are dependencies between input file type, output file type, and the execution flags. These dependencies define execution scenarios, which will be described in the respective PGE detailed documentation.

## **5.3 ANC07 Constants Files**

ANC07 files are used to provide GSAS with change-controlled parameters provided by the Science Team and used during processing of GLAS data. These parameters were carefully selected such that the values could be modified without forcing a recompilation of the processing software. It is critical that these files are tightly change-controlled since unapproved modification could result in erroneous data being generated during the creation of the GLAS Products.

There are several types of ANC07 files. These types include a global constants file, an error file, and constants files specific to each of the science algorithm categories. The error file is detailed in the error section of this document. The science-algorithm specific constants files will be detailed in the respective documentation for those particular executables. This section will document the global constants file and the commonalities of all these files.

### 5.3.1 Use

The constants files are specified as input files within a particular executable's control file. The global constants file and the error constants file are required for all executables. Table 5-3 shows the naming convention of each ANC07 file and a description of its content. (*mmm* is the release number for process that created the file and is the version number of the file itself within the *mmm* release).

**Table 5-3 ANC07 files**

Naming Convention	Content
anc07_mmm_nn_00.dat	Error/Status constants
anc07_mmm_nn_01.dat	Global constants
anc07_mmm_nn_02.dat	Atmosphere constants
anc07_mmm_nn_03.dat	Elevation constants
anc07_mmm_nn_04.dat	Waveform constants
anc07_mmm_nn_05.dat	L1A constants
anc07_mmm_nn_06.dat	Utility constants

### 5.3.2 Format

GSAS ANC07 files are delimited by section identifiers which differ (by design) from control files section identifiers. Each section is bounded by the section name and an '='. The section delimiters are defined as follows:

```
BEG_OF_STATUS=
...Status section contents...
END_OF_STATUS=

BEG_OF_ERROR=
...Error section contents...
END_OF_ERROR

BEG_OF_GLOBALS=
...Global constants section contents...
END_OF_GLOBALS

BEG_OF_ATM=
...Atmosphere constants section contents...
END_OF_ATM
```

---

```
BEG_OF_ELEV=
...Elevation constants section contents...
END_OF_ELEV
```

```
BEG_OF_L1A=
...L1A constants section contents...
END_OF_L1A
```

All GSAS ANC07 files are created in standard GSAS “keyword=value” format. This format is text-based and consists of a line containing a keyword/value pair delimited by an equal sign (=). The ordering of the keywords is not relevant but should follow a convention for consistency. Multiple instances of keywords are not allowed. The keyword is not case sensitive. Spaces are allowed, but not required. Comment lines must be prepended by a “#” character. The keyword is limited to 25 characters; the value is limited to 229 characters.

### 5.3.3 Global Constants File Content

The ANC07 global constants file contains very-high level constants that are be used by more than one PGE. A sample global constants file follows:

```
##
# GLAS ANC07 Constants File
#
# 06/07/99 PLJ Corrected the elevation status messages
# 1999 September 22 JLee, Updated GLAS_Error where error < 0
# 09/27/99 GMM Updated the error list to include entries from ATM, WF, ELEV
#           subsystems and made error codes negative.
# 1999 October   18 JLee, Fixed error code.
# 1999 November  01 JLee, Integrated ATM constants
# 2000 March     13 JLee, Updated
# 2001 April     13 JLee, Added DEM constants from Elevation
# 2001 May       16 PJester, Added GPS to UTC offset
# 2001 June      08 JLee, MOdified GPS to UTC offset to match Donghui's data
# 2001 August    22 JLee, Moved calibration coeffs from L1A to here so that
#                   both WF and L1A can use them
#
# Constants Mod Entries
#
BEG_OF_GLOBALS = -----
GLOB_VERS = ANC07 Globals v2.0 October 2001
#
# Mean Ellipsoid Radius
#
ELLIPAE = 6378136.49d0
#
# Inverse of Ellipsoid Flattening
#
ELLIPF = 298.25645d0
#
# delta lat for DEM grid
#
DEMdLat = 0.0083333333333d0
#
# delta lon for DEM grid
#
```

---

```

DEMdLon = 0.008333333333d0
#
# Start latitude on the DEM grid
#
DEMLAT_BEG = 90.004166666667d0
#
# Start longitude on the DEM grid
#
DEMOLON_BEG = -0.004166666667d0
#
# The offset from the GPS reference time (00:00 Jan 1, 1980)
# to the UTC reference time (12:00 Jan 1, 2000)
#
GPStoUTCoffset = -2001.10980499199991
#
# Max PAD offset allowed (max off-nadir pointing angle)
#
MAXPADOFF = 0.5d0
#
# 1064 energy Calibration coefficient for Received WFs
#
gd_calibcoefrec = 0.002351d0
#
# 1064 energy Calibration coefficient for transmitted WFs
#
gd_calibcoeftr = 0.00018d0
#
END_OF_GLOBALS = -----
#
END_OF_ANC07_FILE = -----

```

---

## 5.4 Invalid Values and Error/Status Reporting

This section documents the use of standardized methods of dealing with invalid data and error/status conditions.

### 5.4.1 Invalid Values

Not all data received from GLAS will be suitable for science processing. In addition, given the nature of the raw telemetry packets, some data may be missing. The concept of an “invalid value” is used to signify that data is invalid or missing and should not be used for processing. Invalid values are datatype-specific values which are defined in the GLAS global constants module. These variables are assigned to Product variables in order to indicate invalid or missing data. These values are defined in Table 5-4.

**Table 5-4 Invalid Values**

Datatype	Invalid Value
1 byte integer	127
2 byte integer	32767
4 byte integer	2147483647

**Table 5-4 Invalid Values (Continued)**

Datatype	Invalid Value
4 byte real	3.40282E+38 x7F7FFFFFF
8 byte real	1.797693094862316E+308 x7FEFFFFFFFFFFFFF

## 5.4.2 Error and Status Codes

GSAS uses a common error/status reporting facility. This ensures that error/status reporting is handled in a consistent manner throughout the software. This facility is based on the ANC07 error file and is configurable by the user.

### 5.4.2.1 ANC07 Error File Format

The ANC07 error file is in standard GSAS “keyword=value” format. See Section 5.3.2 for details of the format. As with other ANC07 files, the sections for error and status must be delimited by section identifiers. Identifiers for each section are listed below.

```
BEG_OF_STATUS=
...Status section contents...
END_OF_STATUS=

BEG_OF_ERROR=
...Error section contents...
END_OF_ERROR
```

The format of the error/status content is defined in Figure 5-1. The keyword can have

KEYWORD=nnnnnnxttxsfffff

**Figure 5-1 Error Ancillary File Format**

the value of “ERROR” or “STATUS”. This identifies if the line contains an error or status entry. The value is a text string with the specific format defined in Table 5-5.

**Table 5-5 Error String Format**

Character	Positions	Description
n	1-6	Error code (must be sequential within a section)
x	7,58,60	Space character (delimiter)
t	8-57	Message
s	59	Error severity (see Table 5-7)
f	61-66	Frequency of reporting (message is reported on 1st occurrence, then every f'th time)

There is a specific error number for each error/status value. Within the ANC07 file, these error numbers are numerically split into multiple sub-sections. Errors have negative numeric designations; status messages have positive designations.

Each major portion of the GSAS software supported by the specific error file begins at a different subsection number. Within a subsection, error numbers must be consecutive. The use of sub-sectioning is optional for a simple error file. The GSAS ANC07 error file has 5 subsections. Table 5-6 lists each of the subsections and their starting error/status number.

**Table 5-6 Error Sections**

Starting Numbers	Description
-10001/10001	General error/status.
-20001/20001	L1A error/status.
-30001/30001	Waveform error/status
-40001/40001	Atmosphere error/status
-50001/50001	Elevation error/status.

#### 5.4.2.2 Use

GLAS error messages are designed to inform a user when the software has encountered a problem. GLAS status messages are designed to assist the user in observing the flow of the processing. Status messages usually alert the user when the software begins execution of a subroutine. A great deal of flexibility was designed into this software in order to allow the user to customize the error/status display.

The user may modify error and status entries in order to configure the severity of the error and frequency of printout. The user is cautioned to seek GLAS change-control board approval before modifying the severity of an error. GSAS software will terminate processing upon receipt of a fatal severity code. Thus, modifying the severity may enable the software to execute in a non-tested mode.

The severity column controls how the GLAS software reacts when an error occurs. The 4 levels of severity are described in Table 5-7. GLAS software will terminate on a Fatal error. The frequency column controls how often an error message is printed out. The first instance of a specific error is always printed. Subsequent instances are printed out at the frequency specified. All instances are counted and the number of occurrences printed in an output summary.

**Table 5-7 Error Severity Codes**

Severity	Description
0	No error
1	Information/status

**Table 5-7 Error Severity Codes (Continued)**

Severity	Description
2	Warning
3	Fatal

**5.4.2.3 Error/Status File Content**

GLAS Error/Status messages and explanatory text are found in Appendix D of this document. HP Runtime error listings are found in Appendix D, as well.

**5.4.2.4 Sample ANC07 Error/Status File**

Following is a sample ANC07 error/status file. It has been trimmed down significantly for brevity.

```

#
# GLAS ANC07 Error File
#
# STATUS Section
#
BEG_OF_STATUS= -----
STAT_VERS = ANC07 Status VERSION #
#
# Exec
#
#STATUS=nnnnnnxaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaxnxxxxxxx
STATUS=10001 Number of Records Processed: 0 10
STATUS=10002 Number of Records Read: 0 10
#
# L1A
#
#STATUS=nnnnnnxaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaxnxxxxxxx
STATUS=20001 L_Alt subroutine status 0 10
STATUS=20002 L_Atm subroutine status 0 10
#
# Waveform
#
#STATUS=nnnnnnxaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaxnxxxxxxx
STATUS=30001 W_Assess subroutine status 0 9000
STATUS=30002 W_FunctionalFt subroutine status 0 9000
#
# Atmosphere
#
#STATUS=nnnnnnxaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaxnxxxxxxx
STATUS=40001 A_aer_lays subroutine status 0 7000
STATUS=40002 A_aer_opt_prop subroutine status 0 7000
#
# Elevation
#
#STATUS=nnnnnnxaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaxnxxxxxxx
STATUS=50001 In E_CalcLoadTd subroutine status 0 1000
STATUS=50002 IN E_CalcOceanTd subroutine status 0 1000
#
END_OF_STATUS = -----
#
```

```

=====
#
# ERROR Section
#
BEG_OF_ERROR = -----
ERR_VERS = ANC07 Error V2_exec_split 12 February 2001
#
# Exec
#
#RROR=nnnnnnxttttttttttttttttttttttttttttttttttttttttttttttxnxnnnnn
ERROR=-10001 Error Opening File for Input:                      3      1
ERROR=-10002 No control file specified.                      3      1
#
# L1A
#
#RROR=nnnnnnxttttttttttttttttttttttttttttttttttttttttttxnxnnnnn
ERROR=-20001 Error reading PAD data Eng data                  3      2
ERROR=-20002 Error reading PAD data Eng data                  3      1
#
# Waveform
#
#RROR=nnnnnnxttttttttttttttttttttttttttttttttttttttttxnxnnnnn
ERROR=-30001 Singular Matrix                               1      1
ERROR=-30002 Number of peaks found greater than max       1    9000
#
# Atmosphere
#
#RROR=nnnnnnxttttttttttttttttttttttttttttttttttttxnxnnnnn
ERROR=-40001 DEM out-of-bounds                           1     50
ERROR=-40002 532 integrated return flag poor or bad     1     50
#
# Elevation
#
#RROR=nnnnnnxttttttttttttttttttttttttttttttttttxnxnnnnn
ERROR=-50001 Error reading met height file                3      1
ERROR=-50002 Error reading met temperature file            3      1
#
END_OF_ERROR = -----
#
#
END_OF_ANC07_FILE = -----

```

### 5.4.3 Result Codes

All GSAS PGEs return a result code indicating success or failure. The result code may be checked by referencing \$? (bourne sh). The result code values are a subset of the error/status codes and are defined in Table 5-8.

**Table 5-8 Result Codes**

Severity	Description
0	No error
3	Fatal error

## 5.5 ANC06 Metadata/Log File

### 5.5.1 ANC06 Overview

GSAS software creates ANC06 output files as required by GSDP-31100 (refer to the GLAS Science Software Requirements Document). The ANC06 file contains processing information, error messages, and status messages.

### 5.5.2 Format

The file is in a modified version of the GSAS keyword=value format. The format of an ANC06 entry is:

```
[time] [keyword]=[value]
```

The first field [time] is the time in UTC seconds. The time is that of the data being processed when the entry was written (if no data have been processed, the time may be 0 or an invalid value). The time is a GSAS-standard time representation (UTC seconds). The second field [keyword] is a keyword describing the type of information presented. The third field [value] is a formatted text message describing the event. Comments are allowed in order to group messages logically. Comment lines are prepended by the pound (#) sign.

The value field has several subfields. The first field is the numeric error code. The second field is the error severity. The third field is the name of the routine which reported the error. The fourth field is the standard error text with optional detailed text. The format of the subfields within the value field is shown below:

```
error_num, severity, calling_routine, std_message opt_text
```

### 5.5.3 Use

ANC06 files are designed to be human-readable. However, there are techniques which can make retrieval of information from these files easier. The UNIX grep command is a valuable tool which can be used to extract information from the ANC06 files.

For example, to find all errors within an ANC06 file:

```
grep -i ERROR anc06_filename
```

To find all version information,

```
grep -i VERS anc06_filename
```

To display control file information:

```
grep -i CONTROL anc06_filename
```

### 5.5.4 ANC06 Example and Description

An example ANC06 file is provided in Appendix C.

Section 6  
**GLAS\_L0proc**

## 6.1 Function

GLAS\_L0proc (sometimes referred to as GLOP) reads GLAS Level-0 APID files, ANC07 constants, and the ANC33 time conversion file to create ANC29 and ANC32 ancillary files which will be used in later processing. The ANC29 file is used by GLAS\_L1A to read the APID files in a time-aligned manner. The ANC32 file is used by GLAS\_L1A to allow the computation of precise timing information via a GPS reference. GLAS\_L0proc should be run once all GLAS APID files for a particular 6-hour period have been received by the data processing facility. GLAS\_L0proc does not permit multi-granule input or output files.

## 6.2 Input Files

Table 6-1 lists the required inputs to GLAS\_L0proc. Files which are specific to GLAS\_L0proc are documented in this section. See the appropriate section of this document or the GLAS Data Products Specifications Volumes for details regarding the those files not specific to GLAS\_L0proc.

**Table 6-1 GLAS\_L0proc Inputs**

File Spec	Type	Source	Short Description
gla00*_?.dat	Level-0 APID	EDOS	GLAS Level-0 APID files (one file per each APID type).
anc07*_00.dat	Static Ancillary	Science Team	GLAS error file.
anc07*_01.dat	Static Ancillary	Science Team	GLAS global constants file.
anc33*.dat	Dynamic Ancillary	ISIPS Operations	Counter-to-UTC conversion file.
Control File	Control	ISIPS Operations	Control file.

### 6.2.1 GLA00 APID Files

The GLA00 APIDs are Level-0 multi-rate spacecraft data files provided to the GLAS data processing facility by EDOS. There is a separate file for each specific APID type received from the spacecraft. These files are fully documented by the GLAS Instrument Team.

After delivery from EDOS, these files are renamed to comply with GLAS standard naming conventions by SDMS. The start time in the control file entry for the APIDs is used to determine the approximate UTC time the data. This is important for finding the correct MET-to-UTC conversion entry in the ANC32 file.

## 6.2.2 ANC33 Counter to UTC Conversion File

The ANC33 file is used to convert mission-elapsed time (MET), which is provided in the APIDs, to GLAS-standard UTC time. Since the MET can be re-set by a roll-over or a spacecraft upset it is important that this file be maintained and provided to the GLAS processing facility in a timely manner.

ANC33 file is a multi-line ANSI text file. The format of the ANC33 file follows:

```
[MET_counts] [UTC_seconds] [Implement_time]
```

The MET\_counts field is the MET counter value which corresponds to the UTC\_seconds field. The Implement\_time is the UTC time at which this conversion was valid. GLAS\_L0proc uses the designated start time of an APID (which is specified in the control file entry) to find the correct position within the ANC33 file based on the Implement\_time field.

## 6.2.3 Control File

The control file format and common elements are documented in Section 5 of this document. Elements specific to GLAS\_L0proc are described in this section.

The control file section delimiter for GLAS\_L0proc is:

```
=GLAS_L0P
```

Since GLAS\_L0proc has no requirement for execution scenarios, there are no unique keywords for the GLAS\_L0proc control file. GLAS\_L0proc will perform all functions based on the presence of input and output files within the control file.

## 6.3 Output Files

Table 6-2 lists the outputs created by GLAS\_L0proc. Files which are specific to GLAS\_L0proc are documented in this section. See the appropriate section of this document or the GLAS Data Products Specifications Volumes for details regarding the files which are not specific to GLAS\_L0proc.

**Table 6-2 GLAS\_L0proc Outputs**

File Spec	Type	Destination	Short Description
anc29*.dat	Dynamic Ancillary	GLAS_L1A	Index file correlating APID times.
anc32*.dat	Dynamic Ancillary	GLAS_L1A	GPS time correction file used for precision timing of GLAS data.
anc06*.dat	Dynamic Ancillary	ISIPS Operations	Standard metadata/processing log file.

### 6.3.1 ANC29 Index File

The ANC29 index file provides GLAS\_L1A with a method of time-correlating the GLAS APID files. It contains an index record for every record in the set of input APID files. ANC29 is a binary, fixed-length record file.

### 6.3.2 ANC32 GPS File

The ANC33 GPS file provides GLAS\_L1A with a method of computing precise timing calculations based on the last update of the onboard GPS. It contains record which identified each time the GPS clock is updated within the APID packets. ANC33 is a binary, fixed-length record file and nominally occurs at a rate of one record every 10 seconds.

## 6.4 Processing and Reprocessing Scenarios

GLAS\_L0proc supports only a full-processing scenario. Additionally, all available APIDs files for a specific time period must be processed during the same run. Only one valid ANC29/32 file is permitted for a time period. If additional corresponding APIDs are received at a later date, all of the APIDs for that particular period must be re-processed to create a replacement ANC29/32 file.

Additionally, time-selected processing is not supported. The start and stop times on the INPUT\_FILE and OUTPUT\_FILE control file entries are ignored for processing, but are critical for finding the correct time of data during ANC33 file searches.

## 6.5 Startup and Termination

This is an overview of the steps necessary to run GLAS\_L0proc. Specific operational procedures will be provided in the ISIPS Operational Procedures Manual.

### 6.5.1 Setup a Runtime Directory

The suggested method of running GLAS\_L0proc is to emulate what the SDMS will do. The SDMS will create a temporary directory and link all necessary files into it. For example, to setup a GLAS\_L0proc run, one would perform the following steps (Designate TEMP\_DIR as the temporary directory and DATA\_DIR as the location in which input data for this job has been staged):

```
mkdir $TEMP_DIR
cd $TEMP_DIR
ln -s $GLAS_HOME/bin/GLAS_L0proc .
ln -s $GLAS_HOME/lib/* .
ln -s $GLAS_HOME/data/anc07*.dat .
ln -s $GLAS_HOME/data/anc33*.dat .
ln -s $DATA_DIR/*.dat .
```

### 6.5.2 Create a Control File

GLAS\_L0proc is designed to take the name of a control file as a command-line argument. The suggested method of creating a control file is by copying a template from

the \$GLAS\_HOME/data directory and modifying it with desired input/output file-names and data processing options.

```
cp $GLAS_HOME/data/cf_glas_l0proc.ctl ./control_file_name  
vi ./control_file_name
```

### 6.5.3 Run the PGE

Error and status messages will be displayed on screen (stdout) and recorded in the ANC06 file.

```
./GLAS_L0proc control_file_name
```

### 6.5.4 Run-Time Statistics

GLAS\_L0proc processes 6 hours of GLAS data in less than 2 minutes. This may vary due to hardware load and data dependencies.

### 6.5.5 Termination

The process will terminate automatically upon reaching the end of all input data. The log/metadata file (ANC06\*) must be examined to determine runtime success. Additionally, the process will return a result code to the operating system which may be used to programatically determine success or failure (0=success, 3=fatal error).

## 6.6 Error and Warning Messages

All GSAS error and warning messages are listed numerically in the Appendix D.

## 6.7 Recovery Steps

If GLAS\_L0proc terminates with an error:

- 1) Review error and status messages in the ANC06 file or on stdout to determine source or location of problem. Refer to errors listed in Appendix D for assistance in determining the problem.
- 2) Correct the problem
- 3) Remove previous output files
- 4) Re-run the software

In case of a problematic error, which cannot be easily diagnosed, debug versions of GLAS\_L0proc will be available for test use. This is, however, more of a developer procedure than a user procedure. Software users should contact the GSAS Development Team for more instructions.

## 6.8 Sample GLAS\_L0proc Control File

This control file creates an ANC29 and ANC32 files for the input GLA00 APIDs.

```
=GLAS_L0P  
#  
#-----Start of Control File
```

```
#  
# This is an L0proc control file  
#  
#-----Execution Information  
#  
EXEC_KEY=p3t1a  
DATE_GENERATED=08 August 2001  
OPERATOR=jlee  
#  
#-----Input GLA Files  
#  
# Input ANC07  
#  
INPUT_FILE=anc07_001_01_00.dat 0 1000000  
#  
# Input GLA00 Files  
#  
INPUT_FILE=gla00_002_20000101_000000_01_12.dat 0 1000000  
INPUT_FILE=gla00_002_20000101_000000_01_13.dat 0 1000000  
INPUT_FILE=gla00_002_20000101_000000_01_15.dat 0 1000000  
INPUT_FILE=gla00_002_20000101_000000_01_17.dat 0 1000000  
INPUT_FILE=gla00_002_20000101_000000_01_19.dat 0 1000000  
#  
# Input of time conversion files  
#  
INPUT_FILE=anc33_002_20000101_000000_01_00.dat 0 1000000  
#  
#-----Output GLA Files  
#  
OUTPUT_FILE=anc06_p3t1a.dat 0 1000000  
OUTPUT_FILE=anc29_002_20000101_000000_01_00.dat 0 1000000  
OUTPUT_FILE=anc32_002_20000101_000000_01_00.dat 0 1000000  
#  
#-----End of GLAS_L0proc Section-----  
#  
#-----End of Control File  
#
```



Section 7  
**GLAS\_L1A**

## 7.1 Function

GLAS\_L1A uses calibration equations determined during GLAS system testing to convert the measured counts within the GLA00 data into engineering units. Some data do not require conversion and will be copied directly from the input to the appropriate output product. GLAS\_L1A computes precise time-tagging information for each laser shot and produces quality assurance measurements used to determine the quality of the data processed.

GLAS\_L1A reads GLAS Level-0 APID files, ANC20, ANC29, ANC33 and ANC07 ancillary files to create GLAS L1A product files. The ANC29 file is used by GLAS\_L1A to read the APID files in a time-aligned manner. The ANC32 file is used by GLAS\_L1A to allow the computation of precise timing information via a GPS reference. The ANC20 file is used to compute location from the predicted orbit. The ANC07 files are read to initialize constants and error/status messages.

GLAS\_L1A should be run once after successful execution of GLAS\_L0proc. GLAS\_L1A permits multi-granule input or output files, input/output time selection and selected execution.

## 7.2 Input Files

Table 7-1 lists the inputs files to GLAS\_L1A. Files which are specific to GLAS\_L1A are documented in this section. See the appropriate section of this document or the GLAS Data Products Specifications Volumes for details.

**Table 7-1 GLAS\_L1A Inputs**

File Spec	Type	Source	Short Description
gla00*_?.dat	Level-0 APID	EDOS	Level-0 APID files (one file per each APID type).
anc07*_00.dat	Static Ancillary	Science Team	Error file.
anc07*_01.dat	Static Ancillary	Science Team	Global constants file.
anc07*_05.dat	Static Ancillary	Science Team	L1A constants file.
anc25*.dat	Dynamic Ancillary	Science Team	GPS/UTC conversion file.
anc29*.dat	Dynamic Ancillary	GLAS_L0proc	APID index file.
anc32*.dat	Dynamic Ancillary	GLAS_L0proc	GPS time correlation file.
anc33*.dat	Dynamic Ancillary	Science Team	UTC time conversion file.

**Table 7-1 GLAS\_L1A Inputs (Continued)**

File Spec	Type	Source	Short Description
anc20*.dat	Dynamic Ancillary	UTexas	Predicted orbit file.
Control File	Control	ISIPS Operations	Control file.

### 7.2.1 Control File

The control file format and common elements are documented in Section 5 of this document. Elements specific to GLAS\_L1A are described in this section.

The control file section delimiter for GLAS\_L1A is:

=GLAS\_L1A

In order to satisfy the partial execution requirement, GLAS\_L1A can perform limited processing based on execution flags within the control file. The flags and the processes they control are defined in Table 7-2.

**Table 7-2 GLAS\_L1A Control Flags**

Flag	Significance
L1A_PROCESS=None	Indicates that GLAS_L1A should perform no processing.
L1A_PROCESS=L_ALT	Indicates that GLAS_L1A should perform altimetry-related processing.
L1A_PROCESS=L_ATM	Indicates that GLAS_L1A should perform atmosphere-related processing.
L1A_PROCESS=L_ENG	Indicates that GLAS_L1A should perform engineering processing.
L1A_PROCESS=L_ATT	Indicates that GLAS_L1A should perform SRS/GPS/laser pointing processing.
L1A_PROCESS=ALL	Indicates that GLAS_L1A should perform all processing.

Combinations of the execution flags are allowed. For example, to perform both altimetry and engineering processing, the control file would have the following entries:

```
L1A_PROCESS=L_ALT
L1A_PROCESS=L_ENG
```

### 7.3 Output Files

Table 7-3 lists the output files created by GLAS\_L1A. See the appropriate section of this document or the GLAS Data Products Specifications Volumes for details regarding the output files

Granule boundaries are designated by specifying start and stop times on the OUTPUT\_FILE control file entries.

**Table 7-3 GLAS\_L1A Outputs**

File Spec	Type	Destination	Short Description
gla01*.dat	L1A Product	GLAS_L1A	GLAS L1A Altimetry product file. Contains the waveforms and the altimeter and timing data required to produce higher level range and elevation products.
gla02*.dat	L1A Product	GLAS_Atm	GLAS L1A Atmosphere product file. Contains the normalized backscatter, photon counter, cloud digitizer, timing, and location data required to produce the higher level atmosphere data products.
gla03*.dat	L1A Product	Archive	L1A Engineering product file. Contains the GLAS instrument's engineering and housekeeping data.
gla04*.dat	L1A Products	UTEXAS	L1A SRS/GPS/laser pointing product files. These are multi-granule files provided to UTEXAS for further processing.
qap01*.dat	L1A Quality	QA	L1A Altimetry quality file.
qap02*.dat	L1A Quality	QA	L1A Atmosphere quality file.
qap03*.dat	L1A Quality	QA	L1A Engineering quality file.
qap04*.dat	L1A Quality	QA	L1A SRS/GPS/laser pointing quality files.
anc06*.dat	Dynamic Ancillary	ISIPS Operations	Standard metadata/processing log file.

Of importance is the relationship between the execution flags and the output products. If a particular execution flag is present in the control file, then the corresponding output file type must be present as well. Table shows the relationship between output products and execution flags.

**Table 7-4 GLAS\_L1A Execution Flags and Requisite Output Products**

Execution Flag	Required Output Product
L1A_PROCESS=L_ALT	gla01*.dat, qap01*.dat
L1A_PROCESS=L_ATM	gla02*.dat, qap02*.dat
L1A_PROCESS=L_ENG	gla03*.dat, qap03*.dat
L1A_PROCESS=L_ATT	gla04*.dat, qap04*.dat

## 7.4 Execution Scenarios

GLAS\_L1A supports multiple execution scenarios. Control file entries are shown for each supported scenario and define the requisite execution flags as well as input and output files. For brevity, only those control file entries unique to the particular scenario are shown. Additionally, even though multiple files of the same type may be needed, a single instance is shown.

Since the ANC29 and ANC32 files directly correspond to specific sets of APIDs, great care must be taken to ensure that the relative order of input files within the control file is correct. For example, the APID files which correspond to the first ANC29 file must be listed first in the control file relative to other APID files. However, this is not really as complex as it sounds since following the rule that input files are listed within the control file in time order guarantees this will occur.

All execution scenarios require the L\_ENG processes to create temperature correction values for the L\_ALT and L\_ATM processes. It is possible to run these scenarios without creating a GLA03 file by not specifying GLA03 as an output in the control file. This is not recommended since temperature data used will have not been quality-checked by post-processing QA processes.

Time-selected processing may be performed by specifying specific start and stop times on the INPUT\_FILE and OUTPUT\_FILE control file entries.

Specification of a corresponding QAP01/02 output file is required for each GLA01/02 output file specified in the control file.

### 7.4.1 Standard Processing

This scenario is used for normal L1A processing, creating GLA01, GLA02, and GLA03 data from GLA00 APIDs and the requisite ANC files. In this scenario, all GLA00 APIDs are read. All input ANC files are required.

## 7.5 Startup and Termination

This is an overview of the steps necessary to run GLAS\_L1A. Specific operational procedures for each of the supported scenarios are provided in the ISIPS Operational Procedures Manual.

### 7.5.1 Setup a Runtime Directory

The suggested method of running GLAS\_L1A is to emulate what the SDMS will do. The SDMS will create a temporary directory and link all necessary files into it. For example, to setup a GLAS\_L1A run, one would perform the following steps (Designate TEMP\_DIR as the temporary directory and DATA\_DIR as the location in which input data for this job has been staged):

```
mkdir $TEMP_DIR  
cd $TEMP_DIR  
ln -s $GLAS_HOME/bin/GLAS_L1A .  
ln -s $GLAS_HOME/lib/* .
```

```
ln -s $GLAS_HOME/data/anc*.dat .
ln -s $DATA_DIR/*.dat .
```

### 7.5.2 Create a Control File

GLAS\_L1A is designed to take the name of a control file as a command-line argument. The suggested method of creating a control file is by copying a template from the \$GLAS\_HOME/data directory and modifying it with desired input/output file-names and data processing options.

```
cp $GLAS_HOME/data/cf_glas_l1a.ctl ./control_file_name
vi ./control_file_name
```

### 7.5.3 Run the PGE

Error and status messages will be displayed on screen (stdout) and recorded in the ANC06 file.

```
./GLAS_L1A control_file_name
```

### 7.5.4 Run-Time Statistics

GLAS\_L1A processes 25 hours of GLAS data in approximately 3 hours. This may vary due to hardware load and data dependencies.

### 7.5.5 Termination

The process will terminate automatically upon reaching the end of all input data. The log/metadata file (ANC06\*) must be examined to determine runtime success. Additionally, the process will return a result code to the operating system which may be used to programmatically determine success or failure (0=success, 3=fatal error).

## 7.6 Error and Warning Messages

All GSAS error and warning messages are numerically listed in Appendix D.

## 7.7 Recovery Steps

If GLAS\_L1A terminates with an error:

- 1) Review error and status messages in the ANC06 file or on stdout to determine source or location of problem. Refer to errors listed in Appendix D for assistance in determining the problem.
- 2) Correct the problem
- 3) Remove previous output files
- 4) Re-run the software

In case of a problematic error, which cannot be easily diagnosed, debug versions of GLAS\_L1A will be available for test use. This is, however, more of a developer procedure than a user procedure. Software users should contact the GSAS Development Team for more instructions.

## 7.8 Sample GLAS\_L1A Control File

This sample control file processes 25 hours of GLAS data. Inputs include 5 segments (approximately 6 hours each) of GLA00 APIDs and the corresponding ANC29 and ANC32 files. Outputs include GLA01, GLA02, QAP01, and QAP02 files. The GLA01/QAP01 files are quarter-rev granules. The QAP01/02 files are two-rev granules. In this example, only Altimetry and Atmosphere computations are performed.

```
=GLAS_L1A
#
#-----Execution Information
#
EXEC_KEY=p3t1
DATE_GENERATED=15 August 2001
OPERATOR=jlee
#
#-----Static ANC Files
#
# Input ANC07 Files : 00=error, 01=global, 05=L1A
#
INPUT_FILE=anc07_001_01_00.dat 0000000 1000000
INPUT_FILE=anc07_001_01_01.dat 0000000 1000000
INPUT_FILE=anc07_001_01_05.dat 0000000 1000000
#
# UTC and GPS Times
#
INPUT_FILE=anc25_002_20000101_000000_01_00.dat 00000 1000000
INPUT_FILE=anc33_002_20000101_000000_01_00.dat 00000 1000000
#
#-----Dynamic ANC Files
#
# POD (Predicted)- Stop time MUST be > stop time of data !!!
#
INPUT_FILE=anc20_002_20000101_000000_01_00.dat 00000 1100000
#
# Index Files
#
INPUT_FILE=anc29_002_20000101_000000_01_00.dat 00000 20600
INPUT_FILE=anc29_002_20000101_010000_01_00.dat 20598 42200
INPUT_FILE=anc29_002_20000101_020000_01_00.dat 42198 63800
INPUT_FILE=anc29_002_20000101_030000_01_00.dat 63798 85400
INPUT_FILE=anc29_002_20000101_040000_01_00.dat 85398 90000
#
# GPS Files
#
INPUT_FILE=anc32_002_20000101_000000_01_00.dat 00000 20600
INPUT_FILE=anc32_002_20000101_010000_01_00.dat 20598 42200
INPUT_FILE=anc32_002_20000101_020000_01_00.dat 42198 63800
INPUT_FILE=anc32_002_20000101_030000_01_00.dat 63798 85400
INPUT_FILE=anc32_002_20000101_040000_01_00.dat 85398 90000
#
#-----Input GLA Files
#
# Input GLA00 Files
#
INPUT_FILE=gla00_002_20000101_000000_01_12.dat 00000 20597
INPUT_FILE=gla00_002_20000101_000000_01_13.dat 00000 20597
```

```
INPUT_FILE=gla00_002_20000101_000000_01_15.dat 00000 20597
INPUT_FILE=gla00_002_20000101_000000_01_17.dat 00000 20597
INPUT_FILE=gla00_002_20000101_000000_01_19.dat 00000 20596
INPUT_FILE=gla00_002_20000101_010000_01_12.dat 20598 42197
INPUT_FILE=gla00_002_20000101_010000_01_13.dat 20598 42197
INPUT_FILE=gla00_002_20000101_010000_01_15.dat 20598 42197
INPUT_FILE=gla00_002_20000101_010000_01_17.dat 20598 42197
INPUT_FILE=gla00_002_20000101_010000_01_19.dat 20597 42196
INPUT_FILE=gla00_002_20000101_020000_01_12.dat 42198 63797
INPUT_FILE=gla00_002_20000101_020000_01_13.dat 42198 63797
INPUT_FILE=gla00_002_20000101_020000_01_15.dat 42198 63797
INPUT_FILE=gla00_002_20000101_020000_01_17.dat 42198 63797
INPUT_FILE=gla00_002_20000101_020000_01_19.dat 42197 63796
INPUT_FILE=gla00_002_20000101_030000_01_12.dat 63798 85397
INPUT_FILE=gla00_002_20000101_030000_01_13.dat 63798 85397
INPUT_FILE=gla00_002_20000101_030000_01_15.dat 63798 85397
INPUT_FILE=gla00_002_20000101_030000_01_17.dat 63798 85397
INPUT_FILE=gla00_002_20000101_030000_01_19.dat 63797 85396
INPUT_FILE=gla00_002_20000101_040000_01_12.dat 85398 89999
INPUT_FILE=gla00_002_20000101_040000_01_13.dat 85398 89999
INPUT_FILE=gla00_002_20000101_040000_01_15.dat 85398 89999
INPUT_FILE=gla00_002_20000101_040000_01_17.dat 85398 89999
INPUT_FILE=gla00_002_20000101_040000_01_19.dat 85397 89999

#
#-----Output ANC Files
#
# Output ANC06
#
OUTPUT_FILE=anc06_p3t1.dat 0000000 1000000

#
#-----Output GLA Files
#
# Output GLA01 Files
#
OUTPUT_FILE=gla01_002_11_0001_0028_2_00_00.dat 0.0 809.241
OUTPUT_FILE=gla01_002_11_0001_0028_3_00_00.dat 809.2425727844209 2096.188
OUTPUT_FILE=gla01_002_11_0001_0028_4_00_00.dat 2096.189746856693 3712.697
OUTPUT_FILE=gla01_002_11_0001_0029_1_00_00.dat 3712.698326110836 4993.457
OUTPUT_FILE=gla01_002_11_0001_0029_2_00_00.dat 4993.45825195313 6609.907
OUTPUT_FILE=gla01_002_11_0001_0029_3_00_00.dat 6609.9085521698 7896.863
OUTPUT_FILE=gla01_002_11_0001_0029_4_00_00.dat 7896.864166259767 9513.377
OUTPUT_FILE=gla01_002_11_0001_0030_1_00_00.dat 9513.378553390508 10794.1033
OUTPUT_FILE=gla01_002_11_0001_0030_2_00_00.dat 10794.10340309143 12410.5223
OUTPUT_FILE=gla01_002_11_0001_0030_3_00_00.dat 12410.52243232727 13697.4858
OUTPUT_FILE=gla01_002_11_0001_0030_4_00_00.dat 13697.48594284058 15314.0196
OUTPUT_FILE=gla01_002_11_0001_0031_1_00_00.dat 15314.01978492737 16594.7217
OUTPUT_FILE=gla01_002_11_0001_0031_2_00_00.dat 16594.72188949585 18211.1125
OUTPUT_FILE=gla01_002_11_0001_0031_3_00_00.dat 18211.11265182495 19498.0962
OUTPUT_FILE=gla01_002_11_0001_0031_4_00_00.dat 19498.09636116027 21114.6619
OUTPUT_FILE=gla01_002_11_0001_0032_1_00_00.dat 21114.6620464325 22395.3603
OUTPUT_FILE=gla01_002_11_0001_0032_2_00_00.dat 22395.36043167115 24011.7149
OUTPUT_FILE=gla01_002_11_0001_0032_3_00_00.dat 24011.71508789062 25298.7015
OUTPUT_FILE=gla01_002_11_0001_0032_4_00_00.dat 25298.70168685913 26915.3237
OUTPUT_FILE=gla01_002_11_0001_0033_1_00_00.dat 26915.32384872437 28196.0794
OUTPUT_FILE=gla01_002_11_0001_0033_2_00_00.dat 28196.07951164245 29812.4557
OUTPUT_FILE=gla01_002_11_0001_0033_3_00_00.dat 29812.45585441589 31099.4266
OUTPUT_FILE=gla01_002_11_0001_0033_4_00_00.dat 31099.42674636841 32716.0153
OUTPUT_FILE=gla01_002_11_0001_0034_1_00_00.dat 32716.01546287537 33996.7782
OUTPUT_FILE=gla01_002_11_0001_0034_2_00_00.dat 33996.77839279176 35613.2308
```

---

```

OUTPUT_FILE=gla01_002_11_0001_0034_3_00_00.dat 35613.23098182678 36900.2493
OUTPUT_FILE=gla01_002_11_0001_0034_4_00_00.dat 36900.24942398072 38516.7833
OUTPUT_FILE=gla01_002_11_0001_0035_1_00_00.dat 38516.78340911865 39797.5228
OUTPUT_FILE=gla01_002_11_0001_0035_2_00_00.dat 39797.5229358673 41414.0155
OUTPUT_FILE=gla01_002_11_0001_0035_3_00_00.dat 41414.01569366455 42701.0329
OUTPUT_FILE=gla01_002_11_0001_0035_4_00_00.dat 42701.03302001953 44317.5161
OUTPUT_FILE=gla01_002_11_0001_0036_1_00_00.dat 44317.51625061035 45598.2500
OUTPUT_FILE=gla01_002_11_0001_0036_2_00_00.dat 45598.25011253358 47214.7559
OUTPUT_FILE=gla01_002_11_0001_0036_3_00_00.dat 47214.75605964661 48501.7370
OUTPUT_FILE=gla01_002_11_0001_0036_4_00_00.dat 48501.73713684082 50118.2021
OUTPUT_FILE=gla01_002_11_0001_0037_1_00_00.dat 50118.20228576659 51398.9333
OUTPUT_FILE=gla01_002_11_0001_0037_2_00_00.dat 51398.93340110779 53015.4223
OUTPUT_FILE=gla01_002_11_0001_0037_3_00_00.dat 53015.42249679565 54302.3845
OUTPUT_FILE=gla01_002_11_0001_0037_4_00_00.dat 54302.38463401794 55918.8636
OUTPUT_FILE=gla01_002_11_0001_0038_1_00_00.dat 55918.86377334594 57199.6062
OUTPUT_FILE=gla01_002_11_0001_0038_2_00_00.dat 57199.60638999939 58816.0656
OUTPUT_FILE=gla01_002_11_0001_0038_3_00_00.dat 58816.06575965881 60102.9950
OUTPUT_FILE=gla01_002_11_0001_0038_4_00_00.dat 60102.99510955811 61719.4943
OUTPUT_FILE=gla01_002_11_0001_0039_1_00_00.dat 61719.49444770813 63000.2442
OUTPUT_FILE=gla01_002_11_0001_0039_2_00_00.dat 63000.24435997009 64616.6547
OUTPUT_FILE=gla01_002_11_0001_0039_3_00_00.dat 64616.65480613708 65903.5859
OUTPUT_FILE=gla01_002_11_0001_0039_4_00_00.dat 65903.58601570129 67520.1475
OUTPUT_FILE=gla01_002_11_0001_0040_1_00_00.dat 67520.14766693115 68800.8993
OUTPUT_FILE=gla01_002_11_0001_0040_2_00_00.dat 68800.89943885803 70417.2849
OUTPUT_FILE=gla01_002_11_0001_0040_3_00_00.dat 70417.28507995605 71704.2538
OUTPUT_FILE=gla01_002_11_0001_0040_4_00_00.dat 71704.25399780273 73320.8541
OUTPUT_FILE=gla01_002_11_0001_0041_1_00_00.dat 73320.85427284241 74601.6383
OUTPUT_FILE=gla01_002_11_0001_0041_2_00_00.dat 74601.6384601593 76218.0564
OUTPUT_FILE=gla01_002_11_0001_0041_3_00_00.dat 76218.05654525757 77505.0253
OUTPUT_FILE=gla01_002_11_0001_0041_4_00_00.dat 77505.02574920654 79121.6169
OUTPUT_FILE=gla01_002_11_0001_0042_1_00_00.dat 79121.61704063416 80402.4412
OUTPUT_FILE=gla01_002_11_0001_0042_2_00_00.dat 80402.44136810303 82018.8873
OUTPUT_FILE=gla01_002_11_0001_0042_3_00_00.dat 82018.88746261597 83305.8241
OUTPUT_FILE=gla01_002_11_0001_0042_4_00_00.dat 83305.82425117493 84922.3645
OUTPUT_FILE=gla01_002_11_0001_0043_1_00_00.dat 84922.36461639404 86203.1692
OUTPUT_FILE=gla01_002_11_0001_0043_2_00_00.dat 86203.16934585571 87819.6330
OUTPUT_FILE=gla01_002_11_0001_0043_3_00_00.dat 87819.63315010069 89106.5792
OUTPUT_FILE=gla01_002_11_0001_0043_4_00_00.dat 89106.57938003541 90000.0000

#
# Output QAP01 files
#
OUTPUT_FILE=qap01_002_11_0001_0028_2_00_00.dat 0.0 809.241
OUTPUT_FILE=qap01_002_11_0001_0028_3_00_00.dat 809.2425727844209 2096.188
OUTPUT_FILE=qap01_002_11_0001_0028_4_00_00.dat 2096.189746856693 3712.697
OUTPUT_FILE=qap01_002_11_0001_0029_1_00_00.dat 3712.698326110836 4993.457
OUTPUT_FILE=qap01_002_11_0001_0029_2_00_00.dat 4993.45825195313 6609.907
OUTPUT_FILE=qap01_002_11_0001_0029_3_00_00.dat 6609.9085521698 7896.863
OUTPUT_FILE=qap01_002_11_0001_0029_4_00_00.dat 7896.864166259767 9513.377
OUTPUT_FILE=qap01_002_11_0001_0030_1_00_00.dat 9513.378553390508 10794.1033
OUTPUT_FILE=qap01_002_11_0001_0030_2_00_00.dat 10794.10340309143 12410.5223
OUTPUT_FILE=qap01_002_11_0001_0030_3_00_00.dat 12410.52243232727 13697.4858
OUTPUT_FILE=qap01_002_11_0001_0030_4_00_00.dat 13697.48594284058 15314.0196
OUTPUT_FILE=qap01_002_11_0001_0031_1_00_00.dat 15314.01978492737 16594.7217
OUTPUT_FILE=qap01_002_11_0001_0031_2_00_00.dat 16594.72188949585 18211.1125
OUTPUT_FILE=qap01_002_11_0001_0031_3_00_00.dat 18211.11265182495 19498.0962
OUTPUT_FILE=qap01_002_11_0001_0031_4_00_00.dat 19498.09636116027 21114.6619
OUTPUT_FILE=qap01_002_11_0001_0032_1_00_00.dat 21114.6620464325 22395.3603
OUTPUT_FILE=qap01_002_11_0001_0032_2_00_00.dat 22395.36043167115 24011.7149
OUTPUT_FILE=qap01_002_11_0001_0032_3_00_00.dat 24011.71508789062 25298.7015

```

---

---

```

OUTPUT_FILE=qap01_002_11_0001_0032_4_00_00.dat 25298.70168685913 26915.3237
OUTPUT_FILE=qap01_002_11_0001_0033_1_00_00.dat 26915.32384872437 28196.0794
OUTPUT_FILE=qap01_002_11_0001_0033_2_00_00.dat 28196.07951164245 29812.4557
OUTPUT_FILE=qap01_002_11_0001_0033_3_00_00.dat 29812.45585441589 31099.4266
OUTPUT_FILE=qap01_002_11_0001_0033_4_00_00.dat 31099.42674636841 32716.0153
OUTPUT_FILE=qap01_002_11_0001_0034_1_00_00.dat 32716.01546287537 33996.7782
OUTPUT_FILE=qap01_002_11_0001_0034_2_00_00.dat 33996.77839279176 35613.2308
OUTPUT_FILE=qap01_002_11_0001_0034_3_00_00.dat 35613.23098182678 36900.2493
OUTPUT_FILE=qap01_002_11_0001_0034_4_00_00.dat 36900.24942398072 38516.7833
OUTPUT_FILE=qap01_002_11_0001_0035_1_00_00.dat 38516.78340911865 39797.5228
OUTPUT_FILE=qap01_002_11_0001_0035_2_00_00.dat 39797.5229358673 41414.0155
OUTPUT_FILE=qap01_002_11_0001_0035_3_00_00.dat 41414.01569366455 42701.0329
OUTPUT_FILE=qap01_002_11_0001_0035_4_00_00.dat 42701.03302001953 44317.5161
OUTPUT_FILE=qap01_002_11_0001_0036_1_00_00.dat 44317.51625061035 45598.2500
OUTPUT_FILE=qap01_002_11_0001_0036_2_00_00.dat 45598.25011253358 47214.7559
OUTPUT_FILE=qap01_002_11_0001_0036_3_00_00.dat 47214.75605964661 48501.7370
OUTPUT_FILE=qap01_002_11_0001_0036_4_00_00.dat 48501.73713684082 50118.2021
OUTPUT_FILE=qap01_002_11_0001_0037_1_00_00.dat 50118.20228576659 51398.9333
OUTPUT_FILE=qap01_002_11_0001_0037_2_00_00.dat 51398.93340110779 53015.4223
OUTPUT_FILE=qap01_002_11_0001_0037_3_00_00.dat 53015.42249679565 54302.3845
OUTPUT_FILE=qap01_002_11_0001_0037_4_00_00.dat 54302.38463401794 55918.8636
OUTPUT_FILE=qap01_002_11_0001_0038_1_00_00.dat 55918.86377334594 57199.6062
OUTPUT_FILE=qap01_002_11_0001_0038_2_00_00.dat 57199.60638999939 58816.0656
OUTPUT_FILE=qap01_002_11_0001_0038_3_00_00.dat 58816.06575965881 60102.9950
OUTPUT_FILE=qap01_002_11_0001_0038_4_00_00.dat 60102.99510955811 61719.4943
OUTPUT_FILE=qap01_002_11_0001_0039_1_00_00.dat 61719.49444770813 63000.2442
OUTPUT_FILE=qap01_002_11_0001_0039_2_00_00.dat 63000.24435997009 64616.6547
OUTPUT_FILE=qap01_002_11_0001_0039_3_00_00.dat 64616.65480613708 65903.5859
OUTPUT_FILE=qap01_002_11_0001_0039_4_00_00.dat 65903.58601570129 67520.1475
OUTPUT_FILE=qap01_002_11_0001_0040_1_00_00.dat 67520.14766693115 68800.8993
OUTPUT_FILE=qap01_002_11_0001_0040_2_00_00.dat 68800.89943885803 70417.2849
OUTPUT_FILE=qap01_002_11_0001_0040_3_00_00.dat 70417.28507995605 71704.2538
OUTPUT_FILE=qap01_002_11_0001_0040_4_00_00.dat 71704.25399780273 73320.8541
OUTPUT_FILE=qap01_002_11_0001_0041_1_00_00.dat 73320.85427284241 74601.6383
OUTPUT_FILE=qap01_002_11_0001_0041_2_00_00.dat 74601.6384601593 76218.0564
OUTPUT_FILE=qap01_002_11_0001_0041_3_00_00.dat 76218.05654525757 77505.0253
OUTPUT_FILE=qap01_002_11_0001_0041_4_00_00.dat 77505.02574920654 79121.6169
OUTPUT_FILE=qap01_002_11_0001_0042_1_00_00.dat 79121.61704063416 80402.4412
OUTPUT_FILE=qap01_002_11_0001_0042_2_00_00.dat 80402.44136810303 82018.8873
OUTPUT_FILE=qap01_002_11_0001_0042_3_00_00.dat 82018.88746261597 83305.8241
OUTPUT_FILE=qap01_002_11_0001_0042_4_00_00.dat 83305.82425117493 84922.3645
OUTPUT_FILE=qap01_002_11_0001_0043_1_00_00.dat 84922.36461639404 86203.1692
OUTPUT_FILE=qap01_002_11_0001_0043_2_00_00.dat 86203.16934585571 87819.6330
OUTPUT_FILE=qap01_002_11_0001_0043_3_00_00.dat 87819.63315010069 89106.5792
OUTPUT_FILE=qap01_002_11_0001_0043_4_00_00.dat 89106.57938003541 90000.0000
#
# Output gla02 Files
#
OUTPUT_FILE=gla02_002_11_0001_0027_0_00_00.dat 0000000.00 0003712.69
OUTPUT_FILE=gla02_002_11_0001_0029_0_00_00.dat 0003712.70 0015314.01
OUTPUT_FILE=gla02_002_11_0001_0031_0_00_00.dat 0015314.02 0026915.32
OUTPUT_FILE=gla02_002_11_0001_0033_0_00_00.dat 0026915.33 0038516.78
OUTPUT_FILE=gla02_002_11_0001_0035_0_00_00.dat 0038516.79 0050118.20
OUTPUT_FILE=gla02_002_11_0001_0037_0_00_00.dat 0050118.21 0061719.49
OUTPUT_FILE=gla02_002_11_0001_0039_0_00_00.dat 0061719.50 0073320.85
OUTPUT_FILE=gla02_002_11_0001_0041_0_00_00.dat 0073320.86 0084922.36
OUTPUT_FILE=gla02_002_11_0001_0043_0_00_00.dat 0084922.37 0089999.00
#
#-----Output QAP Files

```

```
#  
# Output qap02 Files  
#  
OUTPUT_FILE=qap02_002_11_0001_0027_0_00_00.dat 0000000.00 0003712.69  
OUTPUT_FILE=qap02_002_11_0001_0029_0_00_00.dat 0003712.70 0015314.01  
OUTPUT_FILE=qap02_002_11_0001_0031_0_00_00.dat 0015314.02 0026915.32  
OUTPUT_FILE=qap02_002_11_0001_0033_0_00_00.dat 0026915.33 0038516.78  
OUTPUT_FILE=qap02_002_11_0001_0035_0_00_00.dat 0038516.79 0050118.20  
OUTPUT_FILE=qap02_002_11_0001_0037_0_00_00.dat 0050118.21 0061719.49  
OUTPUT_FILE=qap02_002_11_0001_0039_0_00_00.dat 0061719.50 0073320.85  
OUTPUT_FILE=qap02_002_11_0001_0041_0_00_00.dat 0073320.86 0084922.36  
OUTPUT_FILE=qap02_002_11_0001_0043_0_00_00.dat 0084922.37 0089999.00  
#  
#-----Execution Control  
#  
L1A_PROCESS=L_ALT  
L1A_PROCESS=L_ATM  
#  
#-----End of Control File  
#
```

**Section 8**  
**GLAS\_Alt**

## 8.1 Function

GLAS\_Alt uses algorithms defined in the GLAS Altimetry ATBD to process the GLAS waveforms and compute elevation parameters. GLAS\_Alt functionality is divided into waveform and elevation processes. The waveform processes compute waveform parameters which are stored in the GLA05 file. The elevation processes use the waveform parameters to compute elevation measurements which are stored in the GLA06 file and on the region-specific GLA12-15 files.

GLAS\_Alt reads GLAS Level-1A product files and requisite ancillary files to create GLAS Altimetry product files. In its most basic execution, GLAS\_Alt reads the GLA01 products created by GLAS\_L1A to create GLA05, GLA06, and GLA12-15 products. However, in some execution scenarios, GLAS\_Alt can read the GLA05 or GLA06 files created in a previous execution to produce GLA06 and/or GLA12-15 products. GLAS\_Alt uses the ANC07 files for constants and error/status messages. It uses the global Digital Elevation Model from ANC12 DEM files. It uses the ANC13 file to determine the geoid, ANC16/17 to calculate tides and ANC01 for meteorological information. It uses ANC09 for precision attitude, and ANC08 for precision orbit information. It uses ANC27 for regional mask information to define what data are placed on the regional products (GLA12-15).

GLAS\_Alt should be run after successful execution of GLAS\_L1A. GLAS\_Alt may be run all at once or in two separate executions: the first for waveform processing, the second for elevation processing. GLAS\_Alt permits multi-granule input/output files, input/output time selection, selected execution, and reprocessing.

## 8.2 Input Files

Table 8-1 lists the inputs files to GLAS\_Alt. Files which are specific to GLAS\_Alt are documented in this section. See the appropriate section of this document or the GLAS Data Products Specifications Volumes for details.

**Table 8-1 GLAS\_Alt Inputs**

File Spec	Type	Source	Short Description
anc01*.dat	Dynamic Ancillary	met_util	Meteorological subset files. Data sets at times before and after the time of the profile are interpolated to the time of the profile.
anc07*_00.dat	Static Ancillary	Science Team	Error file.
anc07*_01.dat	Static Ancillary	Science Team	Global constants file.

**Table 8-1 GLAS\_Alt Inputs (Continued)**

File Spec	Type	Source	Short Description
anc07*_03.dat	Static Ancillary	Science Team	Waveform constants file. *Waveform only
anc07*_04.dat	Static Ancillary	Science Team	Elevations constant file. *Elevation only
anc08*.dat	Dynamic Ancillary	UTexas	Precision Orbit file.
anc09*.dat	Dynamic Ancillary	UTexas	Precision Attitude file.
anc12*_00.dat	Static Ancillary	Science Team	Coarse DEM file *Elevation only.
anc12*_01.dat	Static Ancillary	Science Team	Fine DEM file *Elevation only.
anc13*.dat	Static Ancillary	Science Team	Geoid file *Elevation only.
anc16*.dat	Static Ancillary	Science Team	Load tide coefficients file *Elevation only.
anc17*.dat	Static Ancillary	Science Team	Ocean tide coefficients file *Elevation only.
anc24*.dat	Dynamic Ancillary	UTexas	Rotation Matrix file.
anc27_00.dat	Static Ancillary	Science Team	Coarse regional mask file.
anc27_01.dat	Static Ancillary	Science Team	Fine regional mask file.
Control File	Control	ISIPS Operations	Control file.
gla01*_dat	Level-1A Product	GLAS_L1A	L1A Altimetry product file. *Waveform only.
gla05*_dat	Level-1B Product	GLAS_Alt	L1B Waveform product file. *Elevation only
gla06*_dat	Level-1B Product	GLAS_Alt	L1A Elevation product file. *Elevation only

### 8.2.1 Control File

The control file format and common elements are documented in Section 5 of this document. Elements specific to GLAS\_Alt are described here.

The control file section delimiter for GLAS\_Alt is:

=GLAS\_Alt

In order to satisfy the partial execution requirement, GLAS\_Alt can perform limited processing based on execution flags within the control file. The flags and the processes they control are defined in Table 8-2.

**Table 8-2 GLAS\_Alt Control Flags**

<b>Flag</b>	<b>Significance</b>
WAVEFORM_PROCESS=None	Indicates that GLAS_Alt should perform no waveform processing.
WAVEFORM_PROCESS=All	Indicates that GLAS_Alt should perform waveform processing.
WAVEFORM_OPTIONS=w_noLandCalc	Indicates that GLAS_Alt should not process data using alternate parameters
WAVEFORM_OPTIONS=w_noOtherCalc	Indicates that GLAS_Alt should not process data using standard parameters
WAVEFORM_OPTIONS=w_noGeo	Indicates that GLAS_Alt should not compute latitude, longitude, or elevation, but, instead, will use pass-thru data from an input GLA05. This flag should only be used in a reprocessing scenario where a GLA05 is input as well as output.
ELEVATION_PROCESS=None	Indicates that GLAS_Alt should perform no elevation processing.
ELEVATION_PROCESS=E_CalcLoadTD	Indicates the Load Tide computations should be performed.-
ELEVATION_PROCESS=E_CalcOceanTD	Indicates the Ocean Tide computations should be performed.
ELEVATION_PROCESS=E_CalcEarthTD	Indicates the Earth Tide computations should be performed.
ELEVATION_PROCESS=E_GetGeoid	Indicates the Geoid computations should be performed.
ELEVATION_PROCESS=E_CalcTrop	Indicates the tropospheric computations should be performed.
ELEVATION_PROCESS=E_IntrpPOD	Indicates the POD computations should be performed.
ELEVATION_PROCESS=E_CalcStdIR	Indicates the standard range computations should be performed.
ELEVATION_PROCESS=E_CalcLdIR	Indicates the land-specific range computations should be performed.
ELEVATION_PROCESS=E_CalcOclRc	Indicates the ocean-specific range computations should be performed.
ELEVATION_PROCESS=E_CalcSiIR	Indicates the sea ice-specific range computations should be performed.
ELEVATION_PROCESS=E_CalclsIR	Indicates the ice sheet-specific range computations should be performed.

**Table 8-2 GLAS\_Alt Control Flags (Continued)**

<b>Flag</b>	<b>Significance</b>
ELEVATION_PROCESS=E_CalcSpLoc	Indicates the spot location computations should be performed.
ELEVATION_PROCESS=E_AtmQF	
ELEVATION_PROCESS=E_CalcSlope	Indicates the slope computations should be performed.
ELEVATION_PROCESS=E_CalcRefl	Indicates the reflectance computations should be performed.
ELEVATION_PROCESS=E_ChckReg	Indicates the region-specific checks should be performed.
ELEVATION_PROCESS=E_CalcRegRng	Indicates the regional range computations should be performed.
ELEVATION_PROCESS=E_CalcRegParm	Indicates the region parameter computations should be performed.
ELEVATION_PROCESS=E_CalcDEM	Indicates the DEM computations should be performed.
ELEVATION_PROCESS=ALL	Indicates that GLAS_Alt should perform all elevation processing.

Combinations of the execution flags are allowed. For example, to perform both waveform and elevation processing, the control file would have the following entries:

```
WAVEFORM_PROCESS=ALL
ELEVATION_PROCESS=ALL
```

### 8.3 Output Files

Table 8-3 lists the outputs created by GLAS\_Alt. See the appropriate section of this document or the GLAS Data Products Specifications Volumes for details regarding the output files

Granule boundaries are designated by specifying start and stop times on the OUTPUT\_FILE control file entries.

Of importance is the relationship between the execution flags and the output products. If a particular execution flag is present in the control file, then the corresponding output file type must be present as well. Table 8-4 shows the relationship between output products and execution flags. These relationships will be more fully defined in the next section.

### 8.4 Processing and Reprocessing Scenarios

GLAS\_Alt supports full and partial processing and reprocessing scenarios. Control file entries are shown for each supported scenario and define the requisite execution

**Table 8-3 GLAS\_Alt Outputs**

<b>File Spec</b>	<b>Type</b>	<b>Destination</b>	<b>Short Description</b>
gla05*.dat	L1B Alt Product	Archive/GLAS_Alt	The level 1B waveform parameterization product file. Contains the output from the waveform characterization procedure and other parameters required to calculate surface slope and relief characteristics.
gla06*.dat	L2 Alt Product	Archive/GLAS_Alt	L1B elevation data product file. Contains the surface elevation, surface roughness assuming no slope, surface slope assuming no roughness and geodetic and atmospheric corrections for the range.
gla12*.dat	L2 Alt Product	Archive	L2 ice sheet altimetry product file. Contains the ice sheet elevation and elevation distribution calculated from algorithms fine-tuned for ice sheet returns.
gla13*.dat	L2 Alt Product	Archive	L2 sea ice altimetry product file. Contains the sea ice freeboard and sea ice roughness calculated from algorithms fine-tuned for sea ice returns.
gla14*.dat	L2 Alt Product	Archive	L2 land altimetry product file. Contains the land elevation and land elevation distribution calculated from algorithms fine-tuned for land returns.
gla15*.dat	L2 Alt Product	Archive	L2 ocean altimetry product file. Contains ocean elevation and small-scale roughness calculated from algorithms fine-tuned for ocean returns.
qap05*.dat	L1B Alt Quality	QA	L1B waveform parameterization quality file.
qap06*.dat	L2 Alt Quality	QA	L2 elevation data quality file.
qap12*.dat	L2 Alt Quality	QA	L2 ice sheet altimetry quality file.
qap13*.dat	L2 Alt Quality	QA	L2 sea ice altimetry quality file.
qap14*.dat	L2 Alt Quality	QA	L2 land altimetry quality file.

**Table 8-3 GLAS\_Alt Outputs (Continued)**

File Spec	Type	Destination	Short Description
qap15*.dat	L2 Alt Quality	QA	L2 ocean altimeter quality file.
anc06*.dat	Dynamic Ancillary	ISIPS Operations	Standard metadata/processing log file.

**Table 8-4 GLAS\_Alt Execution Flags and Output Products**

Execution Flag	Required Output Product
WAVEFORM_PROCESS=ALL	gla05*.dat, qap05*.dat
ELEVATION_PROCESS=ALL	gla06*.dat, qap06*.dat, gla12*.dat, qap12*.dat, gla13*.dat, qap13*.dat, gla14*.dat, qap14*.dat, gla15*.dat, qap15*.dat

flags as well as input and output files. Only those control file entries unique to the particular processing scenario are shown for brevity. Additionally, even though multiple files of the same type may be needed, a single instance is shown.

Time-selected processing may also be performed by specifying specific start and stop times on the INPUT\_FILE and OUTPUT\_FILE control file entries.

#### **8.4.1 Full Processing**

This scenario is used for to create both waveform and elevation products from GLA01 and the requisite ANC files. All files listed in Table 8-1 and Table 8-3 are required.

#### **8.4.2 Partial Processing: Waveform Only**

This scenario is used to process only Waveform data, creating GLA05 data from selected GLA01 products and the requisite ANC files. All files listed in Table 8-1 and Table 8-3, except those listed as Elevation-only, are required. The following execution flag is required:

`WAVEFORM_PROCESS=ALL`

#### **8.4.3 Partial Processing/Re-Processing: Elevation Only**

This scenario is used to process only Elevation data, creating GLA06 and GLA12-15 data from selected GLA05 products (created during a previous execution of GLAS\_Alt) and the requisite ANC files. All files listed in Table 8-1 and Table 8-3, except those listed as Waveform-only, are required. The following execution flag is required:

`ELEVATION_PROCESS=ALL`

#### **8.4.4 Re-Processing: Region-Specific Only**

This scenario is used to recreate the GLA12-15 region-specific products from a previously created GLA05/GLA06 and the requisite ANC files. All files listed in Table 8-1

and Table 8-3, except those listed as Waveform-only, are required, with the following exceptions:

- GLA06 is required as an input but not an output.
- Tide files (ANC16, ANC17) are not required.
- The geoid file (ANC13) is not required.
- The meteorological files (ANC01) are not required.

The following execution flags are required:

```
ELEVATION_PROCESS=E_GetGeoid  
ELEVATION_PROCESS=E_IntrpPOD  
ELEVATION_PROCESS=E_CalcStdIR  
ELEVATION_PROCESS=E_CalcLdIR  
ELEVATION_PROCESS=E_CalcOcIR  
ELEVATION_PROCESS=E_CalcSiIR  
ELEVATION_PROCESS=E_CalcIsIR  
ELEVATION_PROCESS=E_CALCSpLoc  
ELEVATION_PROCESS=E_AtmoQF  
ELEVATION_PROCESS=E_CalcSlope  
ELEVATION_PROCESS=E_CalcRefl  
ELEVATION_PROCESS=E_ChckReg  
ELEVATION_PROCESS=E_CalcRegRng  
ELEVATION_PROCESS=E_CalcRegParm  
ELEVATION_PROCESS=E_CalcDEM
```

## 8.5 Startup and Termination

This is an overview of the steps necessary to run GLAS\_Alt. Specific operational procedures for each of the supported scenarios are provided in the ISIPS Operational Procedures Manual.

### 8.5.1 Setup a Runtime Directory

The suggested method of running GLAS\_Alt is to emulate what the SDMS will do. The SDMS will create a temporary directory and link all necessary files into it. For example, to setup a GLAS\_Alt run, one would perform the following steps (Designate TEMP\_DIR as the temporary directory and DATA\_DIR as the location in which input data for this job has been staged):

```
mkdir $TEMP_DIR  
cd $TEMP_DIR  
ln -s $GLAS_HOME/bin/GLAS_Alt .  
ln -s $GLAS_HOME/lib/* .  
ln -s $GLAS_HOME/data/anc*.dat .  
ln -s $DATA_DIR/*.dat .
```

### 8.5.2 Create a Control File

GLAS\_Alt is designed to take the name of a control file as a command-line argument. The suggested method of creating a control file is by copying a template from the

\$GLAS\_HOME/data directory and modifying it with desired input/output filenames and data processing options.

```
cp $GLAS_HOME/data/cf_glas_alt_(wf|elev).ctl ./control_file_name  
vi ./control_file_name
```

### 8.5.3 Run the PGE

Error and status messages will be displayed on screen (stdout) and recorded in the ANC06 file.

```
./GLAS_Alt control_file_name
```

### 8.5.4 Run-Time Statistics

GLAS\_Alt processes 25 hours of GLAS data in approximately 12 hours for full waveform processing. GLAS\_Alt processes 25 hours of GLAS data in approximately 1.5 hours for full elevation processing. This may vary due to hardware load and data dependencies.

### 8.5.5 Termination

The process will terminate automatically upon reaching the end of all input data. The log/metadata file (ANC06\*) must be examined to determine runtime success. Additionally, the process will return a result code to the operating system which may be used to programmatically determine success or failure (0=success, 3=fatal error).

## 8.6 Error and Warning Messages

All GSAS error and warning messages are numerically listed in Appendix D.

## 8.7 Recovery Steps

If GLAS\_Alt terminates with an error:

- 1) Review error and status messages in the ANC06 file or on stdout to determine source or location of problem. Refer to errors listed in Appendix D for assistance in determining the problem.
- 2) Correct the problem
- 3) Remove previous output files
- 4) Re-run the software

In case of a problematic error, which cannot be easily diagnosed, debug versions of GLAS\_Alt will be available for test use. This is, however, more of a developer procedure than a user procedure. Software users should contact the GSAS Development Team for more instructions.

## 8.8 Sample GLAS\_Alt Waveform Control File

This sample control file processes 25 hours of GLAS data. Inputs include granules (quarter-rev each) of GLA01. Outputs include GLA05 and QAP05 files. The GLA05/QAP05 files are quarter-rev granules with start and stop times matching the corresponding GLA01 input files. In this example, all Waveform computations are performed.

```
=GLAS_Alt
#
#-----Execution Information
#
EXEC_KEY=p3t1
DATE_GENERATED=20 August 2001
OPERATOR=jlee
#
#-----Static ANC Files
#
# Input ANC07 Files : 00=error, 01=global, 02=atmosphere, 05=L1A
#
INPUT_FILE=anc07_001_01_00.dat 0000000 1000000
INPUT_FILE=anc07_001_01_01.dat 0000000 1000000
INPUT_FILE=anc07_001_01_04.dat 0000000 1000000
#
#-----Regional Mask Files
#
INPUT_FILE=anc27_001_01_00.dat 0000000 1000000
INPUT_FILE=anc27_001_01_01.dat 0000000 1000000
#
#-----Dynamic ANC Files
#
# POD (precision) - Stop time MUST be > stop time of data !!!
#
INPUT_FILE=anc08_001_20000101_000000_01_00.dat 0000000 1000000
#
# PAD
#
INPUT_FILE=anc09_001_20000101_000000_01_00.dat 0000000 1000000
#
# Rotation Matrix
#
INPUT_FILE=anc24_001_20000101_000000_01_00.dat 0000000 1000000
#
#-----Input GLA Files
#
# Input GLA00 Files
#
INPUT_FILE=gla01_002_11_0001_0028_2_00_00.dat 0.0 809.241
INPUT_FILE=gla01_002_11_0001_0028_3_00_00.dat 809.2425727844209 2096.188
INPUT_FILE=gla01_002_11_0001_0028_4_00_00.dat 2096.189746856693 3712.697
INPUT_FILE=gla01_002_11_0001_0029_1_00_00.dat 3712.698326110836 4993.457
INPUT_FILE=gla01_002_11_0001_0029_2_00_00.dat 4993.45825195313 6609.907
INPUT_FILE=gla01_002_11_0001_0029_3_00_00.dat 6609.9085521698 7896.863
INPUT_FILE=gla01_002_11_0001_0029_4_00_00.dat 7896.864166259767 9513.377
INPUT_FILE=gla01_002_11_0001_0030_1_00_00.dat 9513.378553390508 10794.1033
INPUT_FILE=gla01_002_11_0001_0030_2_00_00.dat 10794.10340309143 12410.5223
INPUT_FILE=gla01_002_11_0001_0030_3_00_00.dat 12410.52243232727 13697.4858
```

```

INPUT_FILE=gla01_002_11_0001_0030_4_00_00.dat 13697.48594284058 15314.0196
INPUT_FILE=gla01_002_11_0001_0031_1_00_00.dat 15314.01978492737 16594.7217
INPUT_FILE=gla01_002_11_0001_0031_2_00_00.dat 16594.72188949585 18211.1125
INPUT_FILE=gla01_002_11_0001_0031_3_00_00.dat 18211.11265182495 19498.0962
INPUT_FILE=gla01_002_11_0001_0031_4_00_00.dat 19498.09636116027 21114.6619
INPUT_FILE=gla01_002_11_0001_0032_1_00_00.dat 21114.6620464325 22395.3603
INPUT_FILE=gla01_002_11_0001_0032_2_00_00.dat 22395.36043167115 24011.7149
INPUT_FILE=gla01_002_11_0001_0032_3_00_00.dat 24011.71508789062 25298.7015
INPUT_FILE=gla01_002_11_0001_0032_4_00_00.dat 25298.70168685913 26915.3237
INPUT_FILE=gla01_002_11_0001_0033_1_00_00.dat 26915.32384872437 28196.0794
INPUT_FILE=gla01_002_11_0001_0033_2_00_00.dat 28196.07951164245 29812.4557
INPUT_FILE=gla01_002_11_0001_0033_3_00_00.dat 29812.45585441589 31099.4266
INPUT_FILE=gla01_002_11_0001_0033_4_00_00.dat 31099.42674636841 32716.0153
INPUT_FILE=gla01_002_11_0001_0034_1_00_00.dat 32716.01546287537 33996.7782
INPUT_FILE=gla01_002_11_0001_0034_2_00_00.dat 33996.77839279176 35613.2308
INPUT_FILE=gla01_002_11_0001_0034_3_00_00.dat 35613.23098182678 36900.2493
INPUT_FILE=gla01_002_11_0001_0034_4_00_00.dat 36900.24942398072 38516.7833
INPUT_FILE=gla01_002_11_0001_0035_1_00_00.dat 38516.78340911865 39797.5228
INPUT_FILE=gla01_002_11_0001_0035_2_00_00.dat 39797.5229358673 41414.0155
INPUT_FILE=gla01_002_11_0001_0035_3_00_00.dat 41414.01569366455 42701.0329
INPUT_FILE=gla01_002_11_0001_0035_4_00_00.dat 42701.03302001953 44317.5161
INPUT_FILE=gla01_002_11_0001_0036_1_00_00.dat 44317.51625061035 45598.2500
INPUT_FILE=gla01_002_11_0001_0036_2_00_00.dat 45598.25011253358 47214.7559
INPUT_FILE=gla01_002_11_0001_0036_3_00_00.dat 47214.75605964661 48501.7370
INPUT_FILE=gla01_002_11_0001_0036_4_00_00.dat 48501.73713684082 50118.2021
INPUT_FILE=gla01_002_11_0001_0037_1_00_00.dat 50118.20228576659 51398.9333
INPUT_FILE=gla01_002_11_0001_0037_2_00_00.dat 51398.93340110779 53015.4223
INPUT_FILE=gla01_002_11_0001_0037_3_00_00.dat 53015.42249679565 54302.3845
INPUT_FILE=gla01_002_11_0001_0037_4_00_00.dat 54302.38463401794 55918.8636
INPUT_FILE=gla01_002_11_0001_0038_1_00_00.dat 55918.86377334594 57199.6062
INPUT_FILE=gla01_002_11_0001_0038_2_00_00.dat 57199.60638999939 58816.0656
INPUT_FILE=gla01_002_11_0001_0038_3_00_00.dat 58816.06575965881 60102.9950
INPUT_FILE=gla01_002_11_0001_0038_4_00_00.dat 60102.99510955811 61719.4943
INPUT_FILE=gla01_002_11_0001_0039_1_00_00.dat 61719.49444770813 63000.2442
INPUT_FILE=gla01_002_11_0001_0039_2_00_00.dat 63000.24435997009 64616.6547
INPUT_FILE=gla01_002_11_0001_0039_3_00_00.dat 64616.65480613708 65903.5859
INPUT_FILE=gla01_002_11_0001_0039_4_00_00.dat 65903.58601570129 67520.1475
INPUT_FILE=gla01_002_11_0001_0040_1_00_00.dat 67520.14766693115 68800.8993
INPUT_FILE=gla01_002_11_0001_0040_2_00_00.dat 68800.89943885803 70417.2849
INPUT_FILE=gla01_002_11_0001_0040_3_00_00.dat 70417.28507995605 71704.2538
INPUT_FILE=gla01_002_11_0001_0040_4_00_00.dat 71704.25399780273 73320.8541
INPUT_FILE=gla01_002_11_0001_0041_1_00_00.dat 73320.85427284241 74601.6383
INPUT_FILE=gla01_002_11_0001_0041_2_00_00.dat 74601.6384601593 76218.0564
INPUT_FILE=gla01_002_11_0001_0041_3_00_00.dat 76218.05654525757 77505.0253
INPUT_FILE=gla01_002_11_0001_0041_4_00_00.dat 77505.02574920654 79121.6169
INPUT_FILE=gla01_002_11_0001_0042_1_00_00.dat 79121.61704063416 80402.4412
INPUT_FILE=gla01_002_11_0001_0042_2_00_00.dat 80402.44136810303 82018.8873
INPUT_FILE=gla01_002_11_0001_0042_3_00_00.dat 82018.88746261597 83305.8241
INPUT_FILE=gla01_002_11_0001_0042_4_00_00.dat 83305.82425117493 84922.3645
INPUT_FILE=gla01_002_11_0001_0043_1_00_00.dat 84922.36461639404 86203.1692
INPUT_FILE=gla01_002_11_0001_0043_2_00_00.dat 86203.16934585571 87819.6330
INPUT_FILE=gla01_002_11_0001_0043_3_00_00.dat 87819.63315010069 89106.5792
INPUT_FILE=gla01_002_11_0001_0043_4_00_00.dat 89106.57938003541 90000.0000
#
#-----Output ANC Files
#
# Output ANC06
#
OUTPUT_FILE=anc06_p3t1.dat 0000000 1000000

```

```
#  
#-----Output GLA Files  
#  
# Output GLA01 Files  
#  
OUTPUT_FILE=gla05_002_11_0001_0028_2_00_00.dat 0.0 809.241  
OUTPUT_FILE=gla05_002_11_0001_0028_3_00_00.dat 809.2425727844209 2096.188  
OUTPUT_FILE=gla05_002_11_0001_0028_4_00_00.dat 2096.189746856693 3712.697  
OUTPUT_FILE=gla05_002_11_0001_0029_1_00_00.dat 3712.698326110836 4993.457  
OUTPUT_FILE=gla05_002_11_0001_0029_2_00_00.dat 4993.45825195313 6609.907  
OUTPUT_FILE=gla05_002_11_0001_0029_3_00_00.dat 6609.9085521698 7896.863  
OUTPUT_FILE=gla05_002_11_0001_0029_4_00_00.dat 7896.864166259767 9513.377  
OUTPUT_FILE=gla05_002_11_0001_0030_1_00_00.dat 9513.378553390508 10794.1033  
OUTPUT_FILE=gla05_002_11_0001_0030_2_00_00.dat 10794.10340309143 12410.5223  
OUTPUT_FILE=gla05_002_11_0001_0030_3_00_00.dat 12410.52243232727 13697.4858  
OUTPUT_FILE=gla05_002_11_0001_0030_4_00_00.dat 13697.48594284058 15314.0196  
OUTPUT_FILE=gla05_002_11_0001_0031_1_00_00.dat 15314.01978492737 16594.7217  
OUTPUT_FILE=gla05_002_11_0001_0031_2_00_00.dat 16594.72188949585 18211.1125  
OUTPUT_FILE=gla05_002_11_0001_0031_3_00_00.dat 18211.11265182495 19498.0962  
OUTPUT_FILE=gla05_002_11_0001_0031_4_00_00.dat 19498.09636116027 21114.6619  
OUTPUT_FILE=gla05_002_11_0001_0032_1_00_00.dat 21114.6620464325 22395.3603  
OUTPUT_FILE=gla05_002_11_0001_0032_2_00_00.dat 22395.36043167115 24011.7149  
OUTPUT_FILE=gla05_002_11_0001_0032_3_00_00.dat 24011.71508789062 25298.7015  
OUTPUT_FILE=gla05_002_11_0001_0032_4_00_00.dat 25298.70168685913 26915.3237  
OUTPUT_FILE=gla05_002_11_0001_0033_1_00_00.dat 26915.32384872437 28196.0794  
OUTPUT_FILE=gla05_002_11_0001_0033_2_00_00.dat 28196.07951164245 29812.4557  
OUTPUT_FILE=gla05_002_11_0001_0033_3_00_00.dat 29812.45585441589 31099.4266  
OUTPUT_FILE=gla05_002_11_0001_0033_4_00_00.dat 31099.42674636841 32716.0153  
OUTPUT_FILE=gla05_002_11_0001_0034_1_00_00.dat 32716.01546287537 33996.7782  
OUTPUT_FILE=gla05_002_11_0001_0034_2_00_00.dat 33996.77839279176 35613.2308  
OUTPUT_FILE=gla05_002_11_0001_0034_3_00_00.dat 35613.23098182678 36900.2493  
OUTPUT_FILE=gla05_002_11_0001_0034_4_00_00.dat 36900.24942398072 38516.7833  
OUTPUT_FILE=gla05_002_11_0001_0035_1_00_00.dat 38516.78340911865 39797.5228  
OUTPUT_FILE=gla05_002_11_0001_0035_2_00_00.dat 39797.5229358673 41414.0155  
OUTPUT_FILE=gla05_002_11_0001_0035_3_00_00.dat 41414.01569366455 42701.0329  
OUTPUT_FILE=gla05_002_11_0001_0035_4_00_00.dat 42701.03302001953 44317.5161  
OUTPUT_FILE=gla05_002_11_0001_0036_1_00_00.dat 44317.51625061035 45598.2500  
OUTPUT_FILE=gla05_002_11_0001_0036_2_00_00.dat 45598.25011253358 47214.7559  
OUTPUT_FILE=gla05_002_11_0001_0036_3_00_00.dat 47214.75605964661 48501.7370  
OUTPUT_FILE=gla05_002_11_0001_0036_4_00_00.dat 48501.73713684082 50118.2021  
OUTPUT_FILE=gla05_002_11_0001_0037_1_00_00.dat 50118.20228576659 51398.9333  
OUTPUT_FILE=gla05_002_11_0001_0037_2_00_00.dat 51398.93340110779 53015.4223  
OUTPUT_FILE=gla05_002_11_0001_0037_3_00_00.dat 53015.42249679565 54302.3845  
OUTPUT_FILE=gla05_002_11_0001_0037_4_00_00.dat 54302.38463401794 55918.8636  
OUTPUT_FILE=gla05_002_11_0001_0038_1_00_00.dat 55918.86377334594 57199.6062  
OUTPUT_FILE=gla05_002_11_0001_0038_2_00_00.dat 57199.60638999939 58816.0656  
OUTPUT_FILE=gla05_002_11_0001_0038_3_00_00.dat 58816.06575965881 60102.9950  
OUTPUT_FILE=gla05_002_11_0001_0038_4_00_00.dat 60102.99510955811 61719.4943  
OUTPUT_FILE=gla05_002_11_0001_0039_1_00_00.dat 61719.49444770813 63000.2442  
OUTPUT_FILE=gla05_002_11_0001_0039_2_00_00.dat 63000.24435997009 64616.6547  
OUTPUT_FILE=gla05_002_11_0001_0039_3_00_00.dat 64616.65480613708 65903.5859  
OUTPUT_FILE=gla05_002_11_0001_0039_4_00_00.dat 65903.58601570129 67520.1475  
OUTPUT_FILE=gla05_002_11_0001_0040_1_00_00.dat 67520.14766693115 68800.8993  
OUTPUT_FILE=gla05_002_11_0001_0040_2_00_00.dat 68800.89943885803 70417.2849  
OUTPUT_FILE=gla05_002_11_0001_0040_3_00_00.dat 70417.28507995605 71704.2538  
OUTPUT_FILE=gla05_002_11_0001_0040_4_00_00.dat 71704.25399780273 73320.8541  
OUTPUT_FILE=gla05_002_11_0001_0041_1_00_00.dat 73320.85427284241 74601.6383  
OUTPUT_FILE=gla05_002_11_0001_0041_2_00_00.dat 74601.6384601593 76218.0564  
OUTPUT_FILE=gla05_002_11_0001_0041_3_00_00.dat 76218.05654525757 77505.0253
```

```

OUTPUT_FILE=gla05_002_11_0001_0041_4_00_00.dat 77505.02574920654 79121.6169
OUTPUT_FILE=gla05_002_11_0001_0042_1_00_00.dat 79121.61704063416 80402.4412
OUTPUT_FILE=gla05_002_11_0001_0042_2_00_00.dat 80402.44136810303 82018.8873
OUTPUT_FILE=gla05_002_11_0001_0042_3_00_00.dat 82018.88746261597 83305.8241
OUTPUT_FILE=gla05_002_11_0001_0042_4_00_00.dat 83305.82425117493 84922.3645
OUTPUT_FILE=gla05_002_11_0001_0043_1_00_00.dat 84922.36461639404 86203.1692
OUTPUT_FILE=gla05_002_11_0001_0043_2_00_00.dat 86203.16934585571 87819.6330
OUTPUT_FILE=gla05_002_11_0001_0043_3_00_00.dat 87819.63315010069 89106.5792
OUTPUT_FILE=gla05_002_11_0001_0043_4_00_00.dat 89106.57938003541 90000.0000
#
# Output QAP01 files
#
OUTPUT_FILE=qap05_002_11_0001_0028_2_00_00.dat 0.0 809.241
OUTPUT_FILE=qap05_002_11_0001_0028_3_00_00.dat 809.2425727844209 2096.188
OUTPUT_FILE=qap05_002_11_0001_0028_4_00_00.dat 2096.189746856693 3712.697
OUTPUT_FILE=qap05_002_11_0001_0029_1_00_00.dat 3712.698326110836 4993.457
OUTPUT_FILE=qap05_002_11_0001_0029_2_00_00.dat 4993.45825195313 6609.907
OUTPUT_FILE=qap05_002_11_0001_0029_3_00_00.dat 6609.9085521698 7896.863
OUTPUT_FILE=qap05_002_11_0001_0029_4_00_00.dat 7896.864166259767 9513.377
OUTPUT_FILE=qap05_002_11_0001_0030_1_00_00.dat 9513.378553390508 10794.1033
OUTPUT_FILE=qap05_002_11_0001_0030_2_00_00.dat 10794.10340309143 12410.5223
OUTPUT_FILE=qap05_002_11_0001_0030_3_00_00.dat 12410.52243232727 13697.4858
OUTPUT_FILE=qap05_002_11_0001_0030_4_00_00.dat 13697.48594284058 15314.0196
OUTPUT_FILE=qap05_002_11_0001_0031_1_00_00.dat 15314.01978492737 16594.7217
OUTPUT_FILE=qap05_002_11_0001_0031_2_00_00.dat 16594.72188949585 18211.1125
OUTPUT_FILE=qap05_002_11_0001_0031_3_00_00.dat 18211.11265182495 19498.0962
OUTPUT_FILE=qap05_002_11_0001_0031_4_00_00.dat 19498.09636116027 21114.6619
OUTPUT_FILE=qap05_002_11_0001_0032_1_00_00.dat 21114.6620464325 22395.3603
OUTPUT_FILE=qap05_002_11_0001_0032_2_00_00.dat 22395.36043167115 24011.7149
OUTPUT_FILE=qap05_002_11_0001_0032_3_00_00.dat 24011.71508789062 25298.7015
OUTPUT_FILE=qap05_002_11_0001_0032_4_00_00.dat 25298.70168685913 26915.3237
OUTPUT_FILE=qap05_002_11_0001_0033_1_00_00.dat 26915.32384872437 28196.0794
OUTPUT_FILE=qap05_002_11_0001_0033_2_00_00.dat 28196.07951164245 29812.4557
OUTPUT_FILE=qap05_002_11_0001_0033_3_00_00.dat 29812.45585441589 31099.4266
OUTPUT_FILE=qap05_002_11_0001_0033_4_00_00.dat 31099.42674636841 32716.0153
OUTPUT_FILE=qap05_002_11_0001_0034_1_00_00.dat 32716.01546287537 33996.7782
OUTPUT_FILE=qap05_002_11_0001_0034_2_00_00.dat 33996.77839279176 35613.2308
OUTPUT_FILE=qap05_002_11_0001_0034_3_00_00.dat 35613.23098182678 36900.2493
OUTPUT_FILE=qap05_002_11_0001_0034_4_00_00.dat 36900.24942398072 38516.7833
OUTPUT_FILE=qap05_002_11_0001_0035_1_00_00.dat 38516.78340911865 39797.5228
OUTPUT_FILE=qap05_002_11_0001_0035_2_00_00.dat 39797.5229358673 41414.0155
OUTPUT_FILE=qap05_002_11_0001_0035_3_00_00.dat 41414.01569366455 42701.0329
OUTPUT_FILE=qap05_002_11_0001_0035_4_00_00.dat 42701.03302001953 44317.5161
OUTPUT_FILE=qap05_002_11_0001_0036_1_00_00.dat 44317.51625061035 45598.2500
OUTPUT_FILE=qap05_002_11_0001_0036_2_00_00.dat 45598.25011253358 47214.7559
OUTPUT_FILE=qap05_002_11_0001_0036_3_00_00.dat 47214.75605964661 48501.7370
OUTPUT_FILE=qap05_002_11_0001_0036_4_00_00.dat 48501.73713684082 50118.2021
OUTPUT_FILE=qap05_002_11_0001_0037_1_00_00.dat 50118.20228576659 51398.9333
OUTPUT_FILE=qap05_002_11_0001_0037_2_00_00.dat 51398.93340110779 53015.4223
OUTPUT_FILE=qap05_002_11_0001_0037_3_00_00.dat 53015.42249679565 54302.3845
OUTPUT_FILE=qap05_002_11_0001_0037_4_00_00.dat 54302.38463401794 55918.8636
OUTPUT_FILE=qap05_002_11_0001_0038_1_00_00.dat 55918.86377334594 57199.6062
OUTPUT_FILE=qap05_002_11_0001_0038_2_00_00.dat 57199.60638999939 58816.0656
OUTPUT_FILE=qap05_002_11_0001_0038_3_00_00.dat 58816.06575965881 60102.9950
OUTPUT_FILE=qap05_002_11_0001_0038_4_00_00.dat 60102.99510955811 61719.4943
OUTPUT_FILE=qap05_002_11_0001_0039_1_00_00.dat 61719.49444770813 63000.2442
OUTPUT_FILE=qap05_002_11_0001_0039_2_00_00.dat 63000.24435997009 64616.6547
OUTPUT_FILE=qap05_002_11_0001_0039_3_00_00.dat 64616.65480613708 65903.5859
OUTPUT_FILE=qap05_002_11_0001_0039_4_00_00.dat 65903.58601570129 67520.1475

```

```

OUTPUT_FILE=qap05_002_11_0001_0040_1_00_00.dat 67520.14766693115 68800.8993
OUTPUT_FILE=qap05_002_11_0001_0040_2_00_00.dat 68800.89943885803 70417.2849
OUTPUT_FILE=qap05_002_11_0001_0040_3_00_00.dat 70417.28507995605 71704.2538
OUTPUT_FILE=qap05_002_11_0001_0040_4_00_00.dat 71704.25399780273 73320.8541
OUTPUT_FILE=qap05_002_11_0001_0041_1_00_00.dat 73320.85427284241 74601.6383
OUTPUT_FILE=qap05_002_11_0001_0041_2_00_00.dat 74601.6384601593 76218.0564
OUTPUT_FILE=qap05_002_11_0001_0041_3_00_00.dat 76218.05654525757 77505.0253
OUTPUT_FILE=qap05_002_11_0001_0041_4_00_00.dat 77505.02574920654 79121.6169
OUTPUT_FILE=qap05_002_11_0001_0042_1_00_00.dat 79121.61704063416 80402.4412
OUTPUT_FILE=qap05_002_11_0001_0042_2_00_00.dat 80402.44136810303 82018.8873
OUTPUT_FILE=qap05_002_11_0001_0042_3_00_00.dat 82018.88746261597 83305.8241
OUTPUT_FILE=qap05_002_11_0001_0042_4_00_00.dat 83305.82425117493 84922.3645
OUTPUT_FILE=qap05_002_11_0001_0043_1_00_00.dat 84922.36461639404 86203.1692
OUTPUT_FILE=qap05_002_11_0001_0043_2_00_00.dat 86203.16934585571 87819.6330
OUTPUT_FILE=qap05_002_11_0001_0043_3_00_00.dat 87819.63315010069 89106.5792
OUTPUT_FILE=qap05_002_11_0001_0043_4_00_00.dat 89106.57938003541 90000.0000
#
#-----Execution Control
#
WAVEFORM_PROCESS=ALL
ELEVATION_PROCESS=NONE
#
#-----End of Control File
#

```

## 8.9 Sample GLAS\_Alt Elevation Control File

This sample control file processes 25 hours of GLAS data. Inputs include granules (quarter-rev each) of GLA05. Outputs include GLA06, GLA12-15 and corresponding QAP files. The GLA06/QAP05 files are quarter-rev granules with start and stop times matching the corresponding GLA05 input files. The GLA012-15/QAP12-15 files are fourteen-rev granules. In this example, all Elevation computations are performed.

```

=GLAS_Alt
#
#-----Execution Information
#
EXEC_KEY=p3t1
DATE_GENERATED=21 September 2001
OPERATOR=jlee
#
#-----Static ANC Files
#
# Input ANC07 Files : 00=error, 01=global, 03=atmosphere
#
INPUT_FILE=anc07_001_01_00.dat 0000000 1000000
INPUT_FILE=anc07_001_01_01.dat 0000000 1000000
INPUT_FILE=anc07_001_01_03.dat 0000000 1000000
#
# Regional Mask Files
#
INPUT_FILE=anc27_001_01_00.dat 0000000 1000000
INPUT_FILE=anc27_001_01_01.dat 0000000 1000000
#
# DEM Files
#
INPUT_FILE=anc12_000_00_00.dat 0000000 1000000

```

```
INPUT_FILE=anc12_000_00_01.dat 0000000 1000000
#
# Geoid File
#
INPUT_FILE=anc13_001_01_00.dat 0000000 1000000
#
# Load Tide File
#
INPUT_FILE=anc16_001_01_00.dat 0000000 1000000
#
# Ocean Tide File
#
INPUT_FILE=anc17_001_01_00.dat 0000000 1000000
#
#-----Dynamic ANC Files
#
# POD (precision) - Stop time MUST be > stop time of data !!!
#
INPUT_FILE=anc08_001_20000101_000000_01_00.dat 0000000 1000000
#
# PAD
#
INPUT_FILE=anc09_001_20000101_000000_01_00.dat 0000000 1000000
#
# Rotation Matrix
#
INPUT_FILE=anc24_001_20000101_000000_01_00.dat 0000000 1000000
#
# Input MET files
#
INPUT_FILE=anc01_001_20000101_060000_01_00.dat -21601.00 00000.00
INPUT_FILE=anc01_001_20000101_060000_01_01.dat -21601.00 00000.00
INPUT_FILE=anc01_001_20000101_060000_01_02.dat -21601.00 00000.00
INPUT_FILE=anc01_001_20000101_060000_01_03.dat -21601.00 00000.00
INPUT_FILE=anc01_001_20000101_060000_01_04.dat -21601.00 00000.00
INPUT_FILE=anc01_001_20000101_120000_01_00.dat 00000.00 21600.00
INPUT_FILE=anc01_001_20000101_120000_01_01.dat 00000.00 21600.00
INPUT_FILE=anc01_001_20000101_120000_01_02.dat 00000.00 21600.00
INPUT_FILE=anc01_001_20000101_120000_01_03.dat 00000.00 21600.00
INPUT_FILE=anc01_001_20000101_120000_01_04.dat 00000.00 21600.00
INPUT_FILE=anc01_001_20000101_180000_01_00.dat 21600.00 43200.00
INPUT_FILE=anc01_001_20000101_180000_01_01.dat 21600.00 43200.00
INPUT_FILE=anc01_001_20000101_180000_01_02.dat 21600.00 43200.00
INPUT_FILE=anc01_001_20000101_180000_01_03.dat 21600.00 43200.00
INPUT_FILE=anc01_001_20000101_180000_01_04.dat 21600.00 43200.00
INPUT_FILE=anc01_001_20000102_000000_01_00.dat 43200.00 64800.00
INPUT_FILE=anc01_001_20000102_000000_01_01.dat 43200.00 64800.00
INPUT_FILE=anc01_001_20000102_000000_01_02.dat 43200.00 64800.00
INPUT_FILE=anc01_001_20000102_000000_01_03.dat 43200.00 64800.00
INPUT_FILE=anc01_001_20000102_000000_01_04.dat 43200.00 64800.00
INPUT_FILE=anc01_001_20000102_060000_01_00.dat 64800.00 86400.00
INPUT_FILE=anc01_001_20000102_060000_01_01.dat 64800.00 86400.00
INPUT_FILE=anc01_001_20000102_060000_01_02.dat 64800.00 86400.00
INPUT_FILE=anc01_001_20000102_060000_01_03.dat 64800.00 86400.00
INPUT_FILE=anc01_001_20000102_060000_01_04.dat 64800.00 86400.00
INPUT_FILE=anc01_001_20000102_120000_01_00.dat 86400.00 108000.00
INPUT_FILE=anc01_001_20000102_120000_01_01.dat 86400.00 108000.00
INPUT_FILE=anc01_001_20000102_120000_01_02.dat 86400.00 108000.00
INPUT_FILE=anc01_001_20000102_120000_01_03.dat 86400.00 108000.00
```

```
INPUT_FILE=anc01_001_20000102_120000_01_04.dat 86400.00 108000.00
INPUT_FILE=anc01_001_20000102_180000_01_00.dat 86400.00 108000.00
INPUT_FILE=anc01_001_20000102_180000_01_01.dat 86400.00 108000.00
INPUT_FILE=anc01_001_20000102_180000_01_02.dat 86400.00 108000.00
INPUT_FILE=anc01_001_20000102_180000_01_03.dat 86400.00 108000.00
INPUT_FILE=anc01_001_20000102_180000_01_04.dat 86400.00 108000.00
#
#-----Input GLA Files
#
# Input GLA00 Files
#
#INPUT_FILE=gla05_002_11_0001_0028_2_00_00.dat 0.0 809.241
#INPUT_FILE=gla05_002_11_0001_0028_3_00_00.dat 809.2425727844209 2096.188
#INPUT_FILE=gla05_002_11_0001_0028_4_00_00.dat 2096.189746856693 3712.697
#INPUT_FILE=gla05_002_11_0001_0029_1_00_00.dat 3712.698326110836 4993.457
#INPUT_FILE=gla05_002_11_0001_0029_2_00_00.dat 4993.45825195313 6609.907
#INPUT_FILE=gla05_002_11_0001_0029_3_00_00.dat 6609.9085521698 7896.863
#INPUT_FILE=gla05_002_11_0001_0029_4_00_00.dat 7896.864166259767 9513.377
#INPUT_FILE=gla05_002_11_0001_0030_1_00_00.dat 9513.378553390508 10794.1033
#INPUT_FILE=gla05_002_11_0001_0030_2_00_00.dat 10794.10340309143 12410.5223
#INPUT_FILE=gla05_002_11_0001_0030_3_00_00.dat 12410.52243232727 13697.4858
#INPUT_FILE=gla05_002_11_0001_0030_4_00_00.dat 13697.48594284058 15314.0196
#INPUT_FILE=gla05_002_11_0001_0031_1_00_00.dat 15314.01978492737 16594.7217
#INPUT_FILE=gla05_002_11_0001_0031_2_00_00.dat 16594.72188949585 18211.1125
#INPUT_FILE=gla05_002_11_0001_0031_3_00_00.dat 18211.11265182495 19498.0962
#INPUT_FILE=gla05_002_11_0001_0031_4_00_00.dat 19498.09636116027 21114.6619
#INPUT_FILE=gla05_002_11_0001_0032_1_00_00.dat 21114.6620464325 22395.3603
#INPUT_FILE=gla05_002_11_0001_0032_2_00_00.dat 22395.36043167115 24011.7149
#INPUT_FILE=gla05_002_11_0001_0032_3_00_00.dat 24011.71508789062 25298.7015
#INPUT_FILE=gla05_002_11_0001_0032_4_00_00.dat 25298.70168685913 26915.3237
#INPUT_FILE=gla05_002_11_0001_0033_1_00_00.dat 26915.32384872437 28196.0794
#INPUT_FILE=gla05_002_11_0001_0033_2_00_00.dat 28196.07951164245 29812.4557
#INPUT_FILE=gla05_002_11_0001_0033_3_00_00.dat 29812.45585441589 31099.4266
#INPUT_FILE=gla05_002_11_0001_0033_4_00_00.dat 31099.42674636841 32716.0153
#INPUT_FILE=gla05_002_11_0001_0034_1_00_00.dat 32716.01546287537 33996.7782
#INPUT_FILE=gla05_002_11_0001_0034_2_00_00.dat 33996.77839279176 35613.2308
#INPUT_FILE=gla05_002_11_0001_0034_3_00_00.dat 35613.23098182678 36900.2493
#INPUT_FILE=gla05_002_11_0001_0034_4_00_00.dat 36900.24942398072 38516.7833
#INPUT_FILE=gla05_002_11_0001_0035_1_00_00.dat 38516.78340911865 39797.5228
#INPUT_FILE=gla05_002_11_0001_0035_2_00_00.dat 39797.5229358673 41414.0155
#INPUT_FILE=gla05_002_11_0001_0035_3_00_00.dat 41414.01569366455 42701.0329
#INPUT_FILE=gla05_002_11_0001_0035_4_00_00.dat 42701.03302001953 44317.5161
#INPUT_FILE=gla05_002_11_0001_0036_1_00_00.dat 44317.51625061035 45598.2500
#INPUT_FILE=gla05_002_11_0001_0036_2_00_00.dat 45598.25011253358 47214.7559
#INPUT_FILE=gla05_002_11_0001_0036_3_00_00.dat 47214.75605964661 48501.7370
#INPUT_FILE=gla05_002_11_0001_0036_4_00_00.dat 48501.73713684082 50118.2021
#INPUT_FILE=gla05_002_11_0001_0037_1_00_00.dat 50118.20228576659 51398.9333
#INPUT_FILE=gla05_002_11_0001_0037_2_00_00.dat 51398.93340110779 53015.4223
#INPUT_FILE=gla05_002_11_0001_0037_3_00_00.dat 53015.42249679565 54302.3845
#INPUT_FILE=gla05_002_11_0001_0037_4_00_00.dat 54302.38463401794 55918.8636
#INPUT_FILE=gla05_002_11_0001_0038_1_00_00.dat 55918.86377334594 57199.6062
#INPUT_FILE=gla05_002_11_0001_0038_2_00_00.dat 57199.60638999939 58816.0656
#INPUT_FILE=gla05_002_11_0001_0038_3_00_00.dat 58816.06575965881 60102.9950
#INPUT_FILE=gla05_002_11_0001_0038_4_00_00.dat 60102.99510955811 61719.4943
#INPUT_FILE=gla05_002_11_0001_0039_1_00_00.dat 61719.49444770813 63000.2442
#INPUT_FILE=gla05_002_11_0001_0039_2_00_00.dat 63000.24435997009 64616.6547
#INPUT_FILE=gla05_002_11_0001_0039_3_00_00.dat 64616.65480613708 65903.5859
#INPUT_FILE=gla05_002_11_0001_0039_4_00_00.dat 65903.58601570129 67520.1475
#INPUT_FILE=gla05_002_11_0001_0040_1_00_00.dat 67520.14766693115 68800.8993
```

```
#INPUT_FILE=gla05_002_11_0001_0040_2_00_00.dat 68800.89943885803 70417.2849
#INPUT_FILE=gla05_002_11_0001_0040_3_00_00.dat 70417.28507995605 71704.2538
#INPUT_FILE=gla05_002_11_0001_0040_4_00_00.dat 71704.25399780273 73320.8541
#INPUT_FILE=gla05_002_11_0001_0041_1_00_00.dat 73320.85427284241 74601.6383
#INPUT_FILE=gla05_002_11_0001_0041_2_00_00.dat 74601.6384601593 76218.0564
#INPUT_FILE=gla05_002_11_0001_0041_3_00_00.dat 76218.05654525757 77505.0253
#INPUT_FILE=gla05_002_11_0001_0041_4_00_00.dat 77505.02574920654 79121.6169
#INPUT_FILE=gla05_002_11_0001_0042_1_00_00.dat 79121.61704063416 80402.4412
#INPUT_FILE=gla05_002_11_0001_0042_2_00_00.dat 80402.44136810303 82018.8873
#INPUT_FILE=gla05_002_11_0001_0042_3_00_00.dat 82018.88746261597 83305.8241
#INPUT_FILE=gla05_002_11_0001_0042_4_00_00.dat 83305.82425117493 84922.3645
INPUT_FILE=gla05_002_11_0001_0043_1_00_00.dat 84922.36461639404 86203.1692
INPUT_FILE=gla05_002_11_0001_0043_2_00_00.dat 86203.16934585571 87819.6330
INPUT_FILE=gla05_002_11_0001_0043_3_00_00.dat 87819.63315010069 89106.5792
INPUT_FILE=gla05_002_11_0001_0043_4_00_00.dat 89106.57938003541 90000.0000
#
#-----Output ANC Files
#
# Output ANC06
#
OUTPUT_FILE=anc06_p3t1.dat 0000000 1000000
#
#-----Output GLA Files
#
# Output GLA01 Files
#
#OUTPUT_FILE=gla06_002_11_0001_0028_2_00_00.dat 0.0 809.241
#OUTPUT_FILE=gla06_002_11_0001_0028_3_00_00.dat 809.2425727844209 2096.188
#OUTPUT_FILE=gla06_002_11_0001_0028_4_00_00.dat 2096.189746856693 3712.697
#OUTPUT_FILE=gla06_002_11_0001_0029_1_00_00.dat 3712.698326110836 4993.457
#OUTPUT_FILE=gla06_002_11_0001_0029_2_00_00.dat 4993.45825195313 6609.907
#OUTPUT_FILE=gla06_002_11_0001_0029_3_00_00.dat 6609.9085521698 7896.863
#OUTPUT_FILE=gla06_002_11_0001_0029_4_00_00.dat 7896.864166259767 9513.377
#OUTPUT_FILE=gla06_002_11_0001_0030_1_00_00.dat 9513.378553390508 10794.1033
#OUTPUT_FILE=gla06_002_11_0001_0030_2_00_00.dat 10794.10340309143 12410.5223
#OUTPUT_FILE=gla06_002_11_0001_0030_3_00_00.dat 12410.52243232727 13697.4858
#OUTPUT_FILE=gla06_002_11_0001_0030_4_00_00.dat 13697.48594284058 15314.0196
#OUTPUT_FILE=gla06_002_11_0001_0031_1_00_00.dat 15314.01978492737 16594.7217
#OUTPUT_FILE=gla06_002_11_0001_0031_2_00_00.dat 16594.72188949585 18211.1125
#OUTPUT_FILE=gla06_002_11_0001_0031_3_00_00.dat 18211.11265182495 19498.0962
#OUTPUT_FILE=gla06_002_11_0001_0031_4_00_00.dat 19498.09636116027 21114.6619
#OUTPUT_FILE=gla06_002_11_0001_0032_1_00_00.dat 21114.6620464325 22395.3603
#OUTPUT_FILE=gla06_002_11_0001_0032_2_00_00.dat 22395.36043167115 24011.7149
#OUTPUT_FILE=gla06_002_11_0001_0032_3_00_00.dat 24011.71508789062 25298.7015
#OUTPUT_FILE=gla06_002_11_0001_0032_4_00_00.dat 25298.70168685913 26915.3237
#OUTPUT_FILE=gla06_002_11_0001_0033_1_00_00.dat 26915.32384872437 28196.0794
#OUTPUT_FILE=gla06_002_11_0001_0033_2_00_00.dat 28196.07951164245 29812.4557
#OUTPUT_FILE=gla06_002_11_0001_0033_3_00_00.dat 29812.45585441589 31099.4266
#OUTPUT_FILE=gla06_002_11_0001_0033_4_00_00.dat 31099.42674636841 32716.0153
#OUTPUT_FILE=gla06_002_11_0001_0034_1_00_00.dat 32716.01546287537 33996.7782
#OUTPUT_FILE=gla06_002_11_0001_0034_2_00_00.dat 33996.77839279176 35613.2308
#OUTPUT_FILE=gla06_002_11_0001_0034_3_00_00.dat 35613.23098182678 36900.2493
#OUTPUT_FILE=gla06_002_11_0001_0034_4_00_00.dat 36900.24942398072 38516.7833
#OUTPUT_FILE=gla06_002_11_0001_0035_1_00_00.dat 38516.78340911865 39797.5228
#OUTPUT_FILE=gla06_002_11_0001_0035_2_00_00.dat 39797.5229358673 41414.0155
#OUTPUT_FILE=gla06_002_11_0001_0035_3_00_00.dat 41414.01569366455 42701.0329
#OUTPUT_FILE=gla06_002_11_0001_0035_4_00_00.dat 42701.03302001953 44317.5161
#OUTPUT_FILE=gla06_002_11_0001_0036_1_00_00.dat 44317.51625061035 45598.2500
#OUTPUT_FILE=gla06_002_11_0001_0036_2_00_00.dat 45598.25011253358 47214.7559
```

---

```

#OUTPUT_FILE=gla06_002_11_0001_0036_3_00_00.dat 47214.75605964661 48501.7370
#OUTPUT_FILE=gla06_002_11_0001_0036_4_00_00.dat 48501.73713684082 50118.2021
#OUTPUT_FILE=gla06_002_11_0001_0037_1_00_00.dat 50118.20228576659 51398.9333
#OUTPUT_FILE=gla06_002_11_0001_0037_2_00_00.dat 51398.93340110779 53015.4223
#OUTPUT_FILE=gla06_002_11_0001_0037_3_00_00.dat 53015.42249679565 54302.3845
#OUTPUT_FILE=gla06_002_11_0001_0037_4_00_00.dat 54302.38463401794 55918.8636
#OUTPUT_FILE=gla06_002_11_0001_0038_1_00_00.dat 55918.86377334594 57199.6062
#OUTPUT_FILE=gla06_002_11_0001_0038_2_00_00.dat 57199.60638999939 58816.0656
#OUTPUT_FILE=gla06_002_11_0001_0038_3_00_00.dat 58816.06575965881 60102.9950
#OUTPUT_FILE=gla06_002_11_0001_0038_4_00_00.dat 60102.99510955811 61719.4943
#OUTPUT_FILE=gla06_002_11_0001_0039_1_00_00.dat 61719.49444770813 63000.2442
#OUTPUT_FILE=gla06_002_11_0001_0039_2_00_00.dat 63000.24435997009 64616.6547
#OUTPUT_FILE=gla06_002_11_0001_0039_3_00_00.dat 64616.65480613708 65903.5859
#OUTPUT_FILE=gla06_002_11_0001_0039_4_00_00.dat 65903.58601570129 67520.1475
#OUTPUT_FILE=gla06_002_11_0001_0040_1_00_00.dat 67520.14766693115 68800.8993
#OUTPUT_FILE=gla06_002_11_0001_0040_2_00_00.dat 68800.89943885803 70417.2849
#OUTPUT_FILE=gla06_002_11_0001_0040_3_00_00.dat 70417.28507995605 71704.2538
#OUTPUT_FILE=gla06_002_11_0001_0040_4_00_00.dat 71704.25399780273 73320.8541
#OUTPUT_FILE=gla06_002_11_0001_0041_1_00_00.dat 73320.85427284241 74601.6383
#OUTPUT_FILE=gla06_002_11_0001_0041_2_00_00.dat 74601.6384601593 76218.0564
#OUTPUT_FILE=gla06_002_11_0001_0041_3_00_00.dat 76218.05654525757 77505.0253
#OUTPUT_FILE=gla06_002_11_0001_0041_4_00_00.dat 77505.02574920654 79121.6169
#OUTPUT_FILE=gla06_002_11_0001_0042_1_00_00.dat 79121.61704063416 80402.4412
#OUTPUT_FILE=gla06_002_11_0001_0042_2_00_00.dat 80402.44136810303 82018.8873
#OUTPUT_FILE=gla06_002_11_0001_0042_3_00_00.dat 82018.88746261597 83305.8241
#OUTPUT_FILE=gla06_002_11_0001_0042_4_00_00.dat 83305.82425117493 84922.3645
    OUTPUT_FILE=gla06_002_11_0001_0043_1_00_00.dat 84922.36461639404 86203.1692
    OUTPUT_FILE=gla06_002_11_0001_0043_2_00_00.dat 86203.16934585571 87819.6330
    OUTPUT_FILE=gla06_002_11_0001_0043_3_00_00.dat 87819.63315010069 89106.5792
    OUTPUT_FILE=gla06_002_11_0001_0043_4_00_00.dat 89106.57938003541 90000.0000
#
# Output QAP01 files
#
#OUTPUT_FILE=qap06_002_11_0001_0028_2_00_00.dat 0.0 809.241
#OUTPUT_FILE=qap06_002_11_0001_0028_3_00_00.dat 809.2425727844209 2096.188
#OUTPUT_FILE=qap06_002_11_0001_0028_4_00_00.dat 2096.189746856693 3712.697
#OUTPUT_FILE=qap06_002_11_0001_0029_1_00_00.dat 3712.698326110836 4993.457
#OUTPUT_FILE=qap06_002_11_0001_0029_2_00_00.dat 4993.45825195313 6609.907
#OUTPUT_FILE=qap06_002_11_0001_0029_3_00_00.dat 6609.9085521698 7896.863
#OUTPUT_FILE=qap06_002_11_0001_0029_4_00_00.dat 7896.864166259767 9513.377
#OUTPUT_FILE=qap06_002_11_0001_0030_1_00_00.dat 9513.378553390508 10794.1033
#OUTPUT_FILE=qap06_002_11_0001_0030_2_00_00.dat 10794.10340309143 12410.5223
#OUTPUT_FILE=qap06_002_11_0001_0030_3_00_00.dat 12410.52243232727 13697.4858
#OUTPUT_FILE=qap06_002_11_0001_0030_4_00_00.dat 13697.48594284058 15314.0196
#OUTPUT_FILE=qap06_002_11_0001_0031_1_00_00.dat 15314.01978492737 16594.7217
#OUTPUT_FILE=qap06_002_11_0001_0031_2_00_00.dat 16594.72188949585 18211.1125
#OUTPUT_FILE=qap06_002_11_0001_0031_3_00_00.dat 18211.11265182495 19498.0962
#OUTPUT_FILE=qap06_002_11_0001_0031_4_00_00.dat 19498.09636116027 21114.6619
#OUTPUT_FILE=qap06_002_11_0001_0032_1_00_00.dat 21114.6620464325 22395.3603
#OUTPUT_FILE=qap06_002_11_0001_0032_2_00_00.dat 22395.36043167115 24011.7149
#OUTPUT_FILE=qap06_002_11_0001_0032_3_00_00.dat 24011.71508789062 25298.7015
#OUTPUT_FILE=qap06_002_11_0001_0032_4_00_00.dat 25298.70168685913 26915.3237
#OUTPUT_FILE=qap06_002_11_0001_0033_1_00_00.dat 26915.32384872437 28196.0794
#OUTPUT_FILE=qap06_002_11_0001_0033_2_00_00.dat 28196.07951164245 29812.4557
#OUTPUT_FILE=qap06_002_11_0001_0033_3_00_00.dat 29812.45585441589 31099.4266
#OUTPUT_FILE=qap06_002_11_0001_0033_4_00_00.dat 31099.42674636841 32716.0153
#OUTPUT_FILE=qap06_002_11_0001_0034_1_00_00.dat 32716.01546287537 33996.7782
#OUTPUT_FILE=qap06_002_11_0001_0034_2_00_00.dat 33996.77839279176 35613.2308
#OUTPUT_FILE=qap06_002_11_0001_0034_3_00_00.dat 35613.23098182678 36900.2493

```

---

```

#OUTPUT_FILE=qap06_002_11_0001_0034_4_00_00.dat 36900.24942398072 38516.7833
#OUTPUT_FILE=qap06_002_11_0001_0035_1_00_00.dat 38516.78340911865 39797.5228
#OUTPUT_FILE=qap06_002_11_0001_0035_2_00_00.dat 39797.5229358673 41414.0155
#OUTPUT_FILE=qap06_002_11_0001_0035_3_00_00.dat 41414.01569366455 42701.0329
#OUTPUT_FILE=qap06_002_11_0001_0035_4_00_00.dat 42701.03302001953 44317.5161
#OUTPUT_FILE=qap06_002_11_0001_0036_1_00_00.dat 44317.51625061035 45598.2500
#OUTPUT_FILE=qap06_002_11_0001_0036_2_00_00.dat 45598.25011253358 47214.7559
#OUTPUT_FILE=qap06_002_11_0001_0036_3_00_00.dat 47214.75605964661 48501.7370
#OUTPUT_FILE=qap06_002_11_0001_0036_4_00_00.dat 48501.73713684082 50118.2021
#OUTPUT_FILE=qap06_002_11_0001_0037_1_00_00.dat 50118.20228576659 51398.9333
#OUTPUT_FILE=qap06_002_11_0001_0037_2_00_00.dat 51398.93340110779 53015.4223
#OUTPUT_FILE=qap06_002_11_0001_0037_3_00_00.dat 53015.42249679565 54302.3845
#OUTPUT_FILE=qap06_002_11_0001_0037_4_00_00.dat 54302.38463401794 55918.8636
#OUTPUT_FILE=qap06_002_11_0001_0038_1_00_00.dat 55918.86377334594 57199.6062
#OUTPUT_FILE=qap06_002_11_0001_0038_2_00_00.dat 57199.60638999939 58816.0656
#OUTPUT_FILE=qap06_002_11_0001_0038_3_00_00.dat 58816.06575965881 60102.9950
#OUTPUT_FILE=qap06_002_11_0001_0038_4_00_00.dat 60102.99510955811 61719.4943
#OUTPUT_FILE=qap06_002_11_0001_0039_1_00_00.dat 61719.49444770813 63000.2442
#OUTPUT_FILE=qap06_002_11_0001_0039_2_00_00.dat 63000.24435997009 64616.6547
#OUTPUT_FILE=qap06_002_11_0001_0039_3_00_00.dat 64616.65480613708 65903.5859
#OUTPUT_FILE=qap06_002_11_0001_0039_4_00_00.dat 65903.58601570129 67520.1475
#OUTPUT_FILE=qap06_002_11_0001_0040_1_00_00.dat 67520.14766693115 68800.8993
#OUTPUT_FILE=qap06_002_11_0001_0040_2_00_00.dat 68800.89943885803 70417.2849
#OUTPUT_FILE=qap06_002_11_0001_0040_3_00_00.dat 70417.28507995605 71704.2538
#OUTPUT_FILE=qap06_002_11_0001_0040_4_00_00.dat 71704.25399780273 73320.8541
#OUTPUT_FILE=qap06_002_11_0001_0041_1_00_00.dat 73320.85427284241 74601.6383
#OUTPUT_FILE=qap06_002_11_0001_0041_2_00_00.dat 74601.6384601593 76218.0564
#OUTPUT_FILE=qap06_002_11_0001_0041_3_00_00.dat 76218.05654525757 77505.0253
#OUTPUT_FILE=qap06_002_11_0001_0041_4_00_00.dat 77505.02574920654 79121.6169
#OUTPUT_FILE=qap06_002_11_0001_0042_1_00_00.dat 79121.61704063416 80402.4412
#OUTPUT_FILE=qap06_002_11_0001_0042_2_00_00.dat 80402.44136810303 82018.8873
#OUTPUT_FILE=qap06_002_11_0001_0042_3_00_00.dat 82018.88746261597 83305.8241
#OUTPUT_FILE=qap06_002_11_0001_0042_4_00_00.dat 83305.82425117493 84922.3645
  OUTPUT_FILE=qap06_002_11_0001_0043_1_00_00.dat 84922.36461639404 86203.1692
  OUTPUT_FILE=qap06_002_11_0001_0043_2_00_00.dat 86203.16934585571 87819.6330
  OUTPUT_FILE=qap06_002_11_0001_0043_3_00_00.dat 87819.63315010069 89106.5792
  OUTPUT_FILE=qap06_002_11_0001_0043_4_00_00.dat 89106.57938003541 90000.0000
#
# Output GLA12-15
#
  OUTPUT_FILE=gla12_002_11_0001_0015_0_00_00.dat 0.0 03712.6983
  OUTPUT_FILE=gla13_002_11_0001_0015_0_00_00.dat 0.0 03712.6983
  OUTPUT_FILE=gla14_002_11_0001_0015_0_00_00.dat 0.0 03712.6983
  OUTPUT_FILE=gla15_002_11_0001_0015_0_00_00.dat 0.0 03712.6983
  OUTPUT_FILE=gla12_002_11_0001_0029_0_00_00.dat 3712.6983 84922.3646
  OUTPUT_FILE=gla13_002_11_0001_0029_0_00_00.dat 3712.6983 84922.3646
  OUTPUT_FILE=gla14_002_11_0001_0029_0_00_00.dat 3712.6983 84922.3646
  OUTPUT_FILE=gla15_002_11_0001_0029_0_00_00.dat 3712.6983 84922.3646
  OUTPUT_FILE=gla12_002_11_0001_0043_0_00_00.dat 84922.3646 90000.0000
  OUTPUT_FILE=gla13_002_11_0001_0043_0_00_00.dat 84922.3646 90000.0000
  OUTPUT_FILE=gla14_002_11_0001_0043_0_00_00.dat 84922.3646 90000.0000
  OUTPUT_FILE=gla15_002_11_0001_0043_0_00_00.dat 84922.3646 90000.0000
#
# Output QAP12-15
#
  OUTPUT_FILE=qap12_002_11_0001_0015_0_00_00.dat 0.0 03712.6983
  OUTPUT_FILE=qap13_002_11_0001_0015_0_00_00.dat 0.0 03712.6983
  OUTPUT_FILE=qap14_002_11_0001_0015_0_00_00.dat 0.0 03712.6983
  OUTPUT_FILE=qap15_002_11_0001_0015_0_00_00.dat 0.0 03712.6983

```

```
OUTPUT_FILE=qap12_002_11_0001_0029_0_00_00.dat 3712.6983 84922.3646
OUTPUT_FILE=qap13_002_11_0001_0029_0_00_00.dat 3712.6983 84922.3646
OUTPUT_FILE=qap14_002_11_0001_0029_0_00_00.dat 3712.6983 84922.3646
OUTPUT_FILE=qap15_002_11_0001_0029_0_00_00.dat 3712.6983 84922.3646
OUTPUT_FILE=qap12_002_11_0001_0043_0_00_00.dat 84922.3646 90000.0000
OUTPUT_FILE=qap13_002_11_0001_0043_0_00_00.dat 84922.3646 90000.0000
OUTPUT_FILE=qap14_002_11_0001_0043_0_00_00.dat 84922.3646 90000.0000
OUTPUT_FILE=qap15_002_11_0001_0043_0_00_00.dat 84922.3646 90000.0000
#
#-----Execution Control
#
WAVEFORM_PROCESS=NONE
ELEVATION_PROCESS=ALL
SURFACE_TYPE=ALL
#
#-----End of Control File
#
```



**Section 9**  
**GLAS\_Atmosphere**

## 9.1 Function

GLAS\_Atmosphere uses algorithms defined in the GLAS Atmosphere ATBD to determine the radiative forcing and vertically resolved atmospheric heating rate due to cloud and aerosol by directly observing the vertical structure and magnitude of cloud and aerosol parameters that are important for the radiative balance of the earth-atmosphere system. Additionally, these algorithms will perform computations to measure the height of atmospheric transition layers (inversions) which are important for dynamics and mixing, the planetary boundary layer and lifting condensation level.

In its most basic execution, GLAS\_Atmosphere reads GLAS Level-1A GLA02 files and requisite ancillary files to create GLAS L1B and 2 Atmosphere product files (GLA07-11). However, in some execution scenarios, GLAS\_Atmosphere can read the GLA07 file created in a previous execution to produce GLA08-11 products. GLAS\_Atmosphere uses the ANC07 files for constants and error/status messages. It uses the ANC12 DEM files to determine a preliminary elevation from a global Digital Elevation Model. It uses the ANC13 file to determine the geoid, ANC18 for reference standard atmosphere measurements and ANC01 for meteorological information. It uses ANC09 for precision attitude, and ANC08/ANC24 for precision orbit information.

GLAS\_Atmosphere should be run once after successful execution of GLAS\_L0proc. GLAS\_Atmosphere permits multi-granule input/output files, input/output time selection, selected execution, and reprocessing.

## 9.2 Input Files

Table 9-1 lists the inputs files to GLAS\_Atmosphere. Files which are specific to GLAS\_Atmosphere are documented in this section. See the appropriate section of this document or the GLAS Data Products Specifications Volumes for details regarding the non-specific files.

**Table 9-1 GLAS\_Atmosphere Inputs**

File Spec	Type	Source	Short Description
gla02*.dat	Level-1A Product	GLAS_L1A	L1A Atmosphere product file.
anc07*_00.dat	Static Ancillary	Science Team	Error file.
anc07*_01.dat	Static Ancillary	Science Team	Global constants file.
anc07*_02.dat	Static Ancillary	Science Team	Atm constants file.
anc07*_05.dat	Static Ancillary	Science Team	L1A constants file.
anc12*_00.dat	Static Ancillary	Science Team	DEM file.

**Table 9-1 GLAS\_Atmos Inputs**

File Spec	Type	Source	Short Description
anc12*_01.dat	Static Ancillary	Science Team	DEM mask file.
anc13*.dat	Static Ancillary	Science Team	Geoid file.
anc18*.dat	Static Ancillary	Science Team	Standard atmosphere file.
anc30*.dat	Static Ancillary	Science Team	Global aerosol categorization map file.
anc31*.dat	Static Ancillary	Science Team	Aerosol tropospheric classification map file.
anc35*.dat	Static Ancillary	Science Team	Ozone file.
anc08*.dat	Dynamic Ancillary	UTexas	Precision Orbit file.
anc09*.dat	Dynamic Ancillary	UTexas	Precision Attitude file.
anc24*.dat	Dynamic Ancillary	UTexas	Rotation Matrix file.
anc36*.dat	Dynamic Ancillary	atm_util	Atmosphere Calibration file.
anc01*.dat	Dynamic Ancillary	met_util	Meteorological subset files. Data sets at times before and after the time of the profile are interpolated to the time of the profile. If either of the ANC01 data sets are missing, then the available ANC01 data set is used without interpolation. If no ANC01 data sets are available, then standard atmosphere data are used instead.
Control File	Control	ISIPS Operations	Control file.

### 9.2.1 Control File

The control file format and common elements are documented in Section 5 of this document. Elements specific to GLAS\_Atmos are described here.

The control file section delimiter for GLAS\_Atmos is:

```
=GLAS_Atmos
```

In order to satisfy the partial-processing/reprocessing requirement, GLAS\_Atmos can perform limited processing based on execution flags within the control file. The flags and the processes they control are defined in Table 9-2.

Combinations of the execution flags are allowed. For example, to perform from backscatter to end and no POD, the control file would have the following entries:

```
ATMOSPHERE_PROCESS=A_bs_to_end
ATMOSPHERE_PROCESS=A_no_pod
```

**Table 9-2 GLAS\_Atm Control Flags**

Flag	Significance
ATMOSPHERE_PROCESS=None	Indicates that GLAS_Atm should perform no processing.
ATMOSPHERE_PROCESS=A_bs_to_end	Indicates that GLAS_Atm should perform all processing from backscatter-to-end.
ATMOSPHERE_PROCESS=A_bs_only	Indicates that GLAS_Atm should perform backscatter-only processing.
ATMOSPHERE_PROCESS=A_cld_to_end	Indicates that GLAS_Atm should perform processing from cloud-to-end.
ATMOSPHERE_PROCESS=A_no_pod	Indicates that GLAS_Atm should not perform precision orbit determination.
ATMOSPHERE_PROCESS=ALL	Indicates that GLAS_Atm should perform all processing from backscatter-to-end, including precision orbit determination.

### 9.3 Output Files

Table 9-3 lists the outputs created by GLAS\_Atm. See the appropriate section of this document or the GLAS Data Products Specifications Volumes for details regarding the output files

Granule boundaries are designated by specifying start and stop times on the OUTPUT\_FILE control file entries.

Of importance is the relationship between the execution flags and the output products. If a particular execution flag is present in the control file, then the corresponding output file type must be present as well. Table 9-4 shows the relationship between output products and execution flags. These relationships will be more fully defined in the next section.

### 9.4 Processing and Reprocessing Scenarios

GLAS\_Atm supports full and partial processing scenarios. Control file entries are shown for each supported scenario and define the requisite execution flags as well as input and output files. Only those control file entries unique to the particular processing scenario are shown for brevity. Additionally, even though multiple files of the same type may be needed, a single instance is shown.

Time-selected processing may also be performed by specifying specific start and stop times on the INPUT\_FILE and OUTPUT\_FILE control file entries.

**Table 9-3 GLAS\_Atmos Outputs**

<b>File Spec</b>	<b>Type</b>	<b>Destination</b>	<b>Short Description</b>
gla07*.dat	L1B Atm Product	Archive	L1B Global Backscatter product file. Contains full 532 nm and 1064 nm calibrated attenuated backscatter profiles at 5 times per second, and from 10 to -1 km, at 40 times per second. Also included will be calibration coefficient values and molecular backscatter profiles at once per second.
gla08*.dat	L2 Atm Product	Archive	L2 Planetary Boundary Layer and Elevated Aerosol Layer Height product file. Contains elevated aerosol layer height data consisting of top and bottom heights for up to 5 aerosol layers below 20 km at once per 4 seconds, and top and bottom heights for up to 3 aerosol layers above 20 km at once per 20 seconds.
gla09*.dat	L2 Atm Product	Archive	L2 Cloud Layer Height product file. Contains top and bottom heights for up to 10 layers below 20 km at once per 4 seconds, once per second, 5 times per second, and 40 times per second (below 4 km only). Ground heights will also be provided at each resolution.
gla10*.dat	L2 Atm Product	Archive	L2 Aerosol Vertical Structure product file. Contains cloud and aerosol backscatter and extinction cross section profiles.
gla11*.dat	L2 AtmProduct	Archive	L2 Thin Cloud/Aerosol product file. Contains optical depths for clouds for up to 10 layers, the planetary boundary layer, and aerosols for up to 8 layers.
qap07*.dat	L2 Atm Quality	QA	L1B Global Backscatter quality file.
qap08*.dat	L2 Atm Quality	QA	L2 Planetary Boundary Layer and Elevated Aerosol Layer Height quality file.

**Table 9-3 GLAS\_Atm Outputs**

File Spec	Type	Destination	Short Description
qap09*.dat	L2 Atm Quality	QA	L2 Cloud Layer Height quality file.
qap10*.dat	L2 Atm Quality	QA	L2 Aerosol Vertical Structure quality file.
qap11*.dat	L2 Atm Quality	QA	L2 Thin Cloud/Aerosol quality file.
anc06*.dat	Dynamic Ancillary	ISIPS Operations	Standard metadata/processing log file.

**Table 9-4 GLAS\_Atm Execution Flags and Output Products**

Execution Flag	Required Output Product
ATMOSPHERE_PROCESS=A_bs_to_end	gla07*.dat, qap07*.dat, gla08*.dat, qap08*.dat, gla09*.dat, qap09*.dat, gla10*.dat, qap10*.dat, gla11*.dat, qap11*.dat
ATMOSPHERE_PROCESS=A_bs_only	gla07*.dat, qap07*.dat,
ATMOSPHERE_PROCESS=A_cld_to_end	gla08*.dat, qap08*.dat, gla09*.dat, qap09*.dat, gla10*.dat, qap10*.dat, gla11*.dat, qap11*.dat

#### 9.4.1 Standard Processing

This scenario is used for normal Atmosphere processing, creating GLA07, GLA08, GLA09, GLA10 and GLA11 data from GLA02 and the requisite ANC files. All files listed in Table 9-1 and Table 9-3 are required. The following execution flag is required:

ATMOSPHERE\_PROCESS=A\_bs\_to\_end

#### 9.4.2 Partial Processing: Backscatter

This scenario is used for backscatter-only Atmosphere processing, creating GLA07 data from GLA02 and the requisite ANC files. All files listed in Table 9-1 and Table 9-3 are required, with the following exceptions:

- GLA08-11 output files are not required.
- QAP08-11 output files are not required.

The following execution flag is required:

ATMOSPHERE\_PROCESS=A\_bs\_only

#### 9.4.3 Partial Processing/Re-Processing: Cloud-to-End

This scenario is used for cloud-to-end Atmosphere-related data, creating GLA08-11 data from selected GLA07 products (created during a previous execution of GLAS\_Atm) and the requisite ANC files. All files listed in Table 9-1 and Table 9-3 are required, with the following exception:

- GLA07 is required as an input file, but not an output file.

The following execution flag is required:

```
ATMOSPHERE_PROCESS=A_cld_to_end
```

## 9.5 Startup and Termination

This is an overview of the steps necessary to run GLAS\_Atm. Specific operational procedures for each of the supported scenarios are provided in the ISIPS Operational Procedures Manual.

### 9.5.1 Setup a Runtime Directory

The suggested method of running GLAS\_Atm is to emulate what the SDMS will do. The SDMS will create a temporary directory and link all necessary files into it. For example, to setup a GLAS\_Atm run, one would perform the following steps (Designate TEMP\_DIR as the temporary directory and DATA\_DIR as the location in which input data for this job has been staged):

```
mkdir $TEMP_DIR
cd $TEMP_DIR
ln -s $GLAS_HOME/bin/GLAS_Atm .
ln -s $GLAS_HOME/lib/* .
ln -s $GLAS_HOME/data/anc*.dat .
ln -s $DATA_DIR/*.dat .
```

### 9.5.2 Create a Control File

GLAS\_Atm is designed to take the name of a control file as a command-line argument. The suggested method of creating a control file is by copying a template from the \$GLAS\_HOME/data directory and modifying it with desired input/output filenames and data processing options.

```
cp $GLAS_HOME/data/cf_glas_atm.ctl ./control_file_name
vi ./control_file_name
```

### 9.5.3 Run the PGE

Error and status messages will be displayed on screen (stdout) and recorded in the ANC06 file.

```
./GLAS_Atm control_file_name
```

### 9.5.4 Run-Time Statistics

GLAS\_Atm processes 25 hours of GLAS data in approximately four hours. This may vary due to hardware load and data dependencies.

### 9.5.5 Termination

The process will terminate automatically upon reaching the end of all input data. The log/metadata file (ANC06\*) must be examined to determine runtime success. Addi-

---

tionally, the process will return a result code to the operating system which may be used to programmatically determine success or failure (0=success, 3=fatal error).

## 9.6 Error and Warning Messages

All GSAS error and warning messages are numerically listed in Appendix D.

## 9.7 Recovery Steps

If GLAS\_Atm terminates with an error:

- 1) Review error and status messages in the ANC06 file or on stdout to determine source or location of problem.
- 2) Correct the problem
- 3) Remove previous output files
- 4) Re-run the software

In case of a problematic error, which cannot be easily diagnosed, debug versions of GLAS\_Atm will be available for test use. This is, however, more of a developer procedure than a user procedure. Software users should contact the GSAS Development Team for more instructions

## 9.8 Sample GLAS\_Atm Control File

This sample control file processes 25 hours of GLAS data. Inputs include granules (two-rev each) of GLA02 created by GLAS\_L1A, corresponding ANC36 files created by atm\_anc, and meteorological files created by met\_util. Outputs include GLA07-GLA11 and the corresponding QAP files. The GLA07/QAP07 files are two-rev granules with start and stop times matching the corresponding GLA02 input files. The GLA08-11 and QAP08-11 are fourteen rev granules with start and stop times matching the start and stop times of the set of GLA02 files from which these files are created. In this example, all Atmosphere computations are performed.

```
=GLAS_ATM
#
#-----Execution Information
#
EXEC_KEY=p2t1
DATE_GENERATED=18 September 2001
OPERATOR=jlee
#
#-----Static ANC Files
#
# Input ANC07 Files : 00=error, 01=global, 02=atmosphere, 05=L1A
#
INPUT_FILE=anc07_001_01_00.dat 0000000 1000000
INPUT_FILE=anc07_001_01_01.dat 0000000 1000000
INPUT_FILE=anc07_001_01_02.dat 0000000 1000000
INPUT_FILE=anc07_001_01_05.dat 0000000 1000000
#
```

```

# Input DEM Files : 00 = DEM, 01=Mask
#
INPUT_FILE=anc12_000_00_00.dat 0000000 1000000
INPUT_FILE=anc12_000_00_01.dat 0000000 1000000
#
# Input Geoid File
#
INPUT_FILE=anc13_001_01_00.dat 0000000 1000000
#
# Input Standard Atmosphere File
#
INPUT_FILE=anc18_001_01_00.dat 0000000 1000000
#
# Input Trop and Aerosol map Files
#
INPUT_FILE=anc30_001_01_00.dat 0000000 1000000
INPUT_FILE=anc31_001_01_00.dat 0000000 1000000
#
# Input Ozone File
#
INPUT_FILE=anc35_001_01_00.dat 0000000 1000000
#
#-----Dynamic ANC Files
#
# POD (precision) - Stop time MUST be > stop time of data !!!
#
INPUT_FILE=anc08_001_20000101_000000_01_00.dat 0000000 1000000
#
# PAD
#
INPUT_FILE=anc09_001_20000101_000000_01_00.dat 0000000 1000000
#
# Rotation Matrix
#
INPUT_FILE=anc24_001_20000101_000000_01_00.dat 0000000 1000000
#
# Calibration Coefficient File
#
INPUT_FILE=anc36_002_11_0001_0027_0_00_00.dat 0000000.00 0003712.69
INPUT_FILE=anc36_002_11_0001_0029_0_00_00.dat 0003712.70 0015314.01
INPUT_FILE=anc36_002_11_0001_0031_0_00_00.dat 0015314.02 0026915.32
INPUT_FILE=anc36_002_11_0001_0033_0_00_00.dat 0026915.33 0038516.78
INPUT_FILE=anc36_002_11_0001_0035_0_00_00.dat 0038516.79 0050118.20
INPUT_FILE=anc36_002_11_0001_0037_0_00_00.dat 0050118.21 0061719.49
INPUT_FILE=anc36_002_11_0001_0039_0_00_00.dat 0061719.50 0073320.85
INPUT_FILE=anc36_002_11_0001_0041_0_00_00.dat 0073320.86 0084922.36
INPUT_FILE=anc36_002_11_0001_0043_0_00_00.dat 0084922.37 0089999.00
#
# Input MET files
#
INPUT_FILE=anc01_001_20000101_060000_01_00.dat -21601.00 00000.00
INPUT_FILE=anc01_001_20000101_060000_01_01.dat -21601.00 00000.00
INPUT_FILE=anc01_001_20000101_060000_01_02.dat -21601.00 00000.00
INPUT_FILE=anc01_001_20000101_060000_01_03.dat -21601.00 00000.00
INPUT_FILE=anc01_001_20000101_060000_01_04.dat -21601.00 00000.00
INPUT_FILE=anc01_001_20000101_120000_01_00.dat 00000.00 21600.00
INPUT_FILE=anc01_001_20000101_120000_01_01.dat 00000.00 21600.00
INPUT_FILE=anc01_001_20000101_120000_01_02.dat 00000.00 21600.00
INPUT_FILE=anc01_001_20000101_120000_01_03.dat 00000.00 21600.00

```

---

```

INPUT_FILE=anc01_001_20000101_120000_01_04.dat 000000.00 21600.00
INPUT_FILE=anc01_001_20000101_180000_01_00.dat 21600.00 43200.00
INPUT_FILE=anc01_001_20000101_180000_01_01.dat 21600.00 43200.00
INPUT_FILE=anc01_001_20000101_180000_01_02.dat 21600.00 43200.00
INPUT_FILE=anc01_001_20000101_180000_01_03.dat 21600.00 43200.00
INPUT_FILE=anc01_001_20000101_180000_01_04.dat 21600.00 43200.00
INPUT_FILE=anc01_001_20000102_000000_01_00.dat 43200.00 64800.00
INPUT_FILE=anc01_001_20000102_000000_01_01.dat 43200.00 64800.00
INPUT_FILE=anc01_001_20000102_000000_01_02.dat 43200.00 64800.00
INPUT_FILE=anc01_001_20000102_000000_01_03.dat 43200.00 64800.00
INPUT_FILE=anc01_001_20000102_000000_01_04.dat 43200.00 64800.00
INPUT_FILE=anc01_001_20000102_060000_01_00.dat 64800.00 86400.00
INPUT_FILE=anc01_001_20000102_060000_01_01.dat 64800.00 86400.00
INPUT_FILE=anc01_001_20000102_060000_01_02.dat 64800.00 86400.00
INPUT_FILE=anc01_001_20000102_060000_01_03.dat 64800.00 86400.00
INPUT_FILE=anc01_001_20000102_060000_01_04.dat 64800.00 86400.00
INPUT_FILE=anc01_001_20000102_120000_01_00.dat 86400.00 108000.00
INPUT_FILE=anc01_001_20000102_120000_01_01.dat 86400.00 108000.00
INPUT_FILE=anc01_001_20000102_120000_01_02.dat 86400.00 108000.00
INPUT_FILE=anc01_001_20000102_120000_01_03.dat 86400.00 108000.00
INPUT_FILE=anc01_001_20000102_120000_01_04.dat 86400.00 108000.00
INPUT_FILE=anc01_001_20000102_180000_01_00.dat 108000.00 129600.00
INPUT_FILE=anc01_001_20000102_180000_01_01.dat 108000.00 129600.00
INPUT_FILE=anc01_001_20000102_180000_01_02.dat 108000.00 129600.00
INPUT_FILE=anc01_001_20000102_180000_01_03.dat 108000.00 129600.00
INPUT_FILE=anc01_001_20000102_180000_01_04.dat 108000.00 129600.00
#
#-----Input GLA Files
#
# Input GLA02 Files
#
INPUT_FILE=gla02_002_11_0001_0027_0_00_00.dat 0000000.00 0003712.69
INPUT_FILE=gla02_002_11_0001_0029_0_00_00.dat 0003712.70 0015314.01
INPUT_FILE=gla02_002_11_0001_0031_0_00_00.dat 0015314.02 0026915.32
INPUT_FILE=gla02_002_11_0001_0033_0_00_00.dat 0026915.33 0038516.78
INPUT_FILE=gla02_002_11_0001_0035_0_00_00.dat 0038516.79 0050118.20
INPUT_FILE=gla02_002_11_0001_0037_0_00_00.dat 0050118.21 0061719.49
INPUT_FILE=gla02_002_11_0001_0039_0_00_00.dat 0061719.50 0073320.85
INPUT_FILE=gla02_002_11_0001_0041_0_00_00.dat 0073320.86 0084922.36
INPUT_FILE=gla02_002_11_0001_0043_0_00_00.dat 0084922.37 0089999.00
#
#-----Output ANC Files
#
# Output ANC06
#
OUTPUT_FILE=anc06_p3t1.dat 0000000 1000000
#
#-----Output GLA Files
#
# Output gla07 Files (2 revs/granule)
#
OUTPUT_FILE=gla07_002_11_0001_0027_0_00_00.dat 0000000.00 0003712.69
OUTPUT_FILE=gla07_002_11_0001_0029_0_00_00.dat 0003712.70 0015314.01
OUTPUT_FILE=gla07_002_11_0001_0031_0_00_00.dat 0015314.02 0026915.32
OUTPUT_FILE=gla07_002_11_0001_0033_0_00_00.dat 0026915.33 0038516.78
OUTPUT_FILE=gla07_002_11_0001_0035_0_00_00.dat 0038516.79 0050118.20
OUTPUT_FILE=gla07_002_11_0001_0037_0_00_00.dat 0050118.21 0061719.49
OUTPUT_FILE=gla07_002_11_0001_0039_0_00_00.dat 0061719.50 0073320.85
OUTPUT_FILE=gla07_002_11_0001_0041_0_00_00.dat 0073320.86 0084922.36

```

---

```

OUTPUT_FILE=gla07_002_11_0001_0043_0_00_00.dat 0084922.37 0089999.00
#
# Output gla08 (14 revs/granule)
#
OUTPUT_FILE=gla08_002_11_0001_0015_0_00_00.dat 0000000.00 0003712.69
OUTPUT_FILE=gla08_002_11_0001_0029_0_00_00.dat 0003712.70 0084922.36
OUTPUT_FILE=gla08_002_11_0001_0043_0_00_00.dat 0084922.37 0089999.00
#
# Output gla09 (14 revs/granule)
#
OUTPUT_FILE=gla09_002_11_0001_0015_0_00_00.dat 0000000.00 0003712.69
OUTPUT_FILE=gla09_002_11_0001_0029_0_00_00.dat 0003712.70 0084922.36
OUTPUT_FILE=gla09_002_11_0001_0043_0_00_00.dat 0084922.37 0089999.00
#
# Output GLA10 (14 revs/granule)
#
OUTPUT_FILE=gla10_002_11_0001_0015_0_00_00.dat 0000000.00 0003712.69
OUTPUT_FILE=gla10_002_11_0001_0029_0_00_00.dat 0003712.70 0084922.36
OUTPUT_FILE=gla10_002_11_0001_0043_0_00_00.dat 0084922.37 0089999.00
#
# Output GLA11 (14 revs/granule)
#
OUTPUT_FILE=gla11_002_11_0001_0015_0_00_00.dat 0000000.00 0003712.69
OUTPUT_FILE=gla11_002_11_0001_0029_0_00_00.dat 0003712.70 0084922.36
OUTPUT_FILE=gla11_002_11_0001_0043_0_00_00.dat 0084922.37 0089999.00
#
#-----Output QAP Files
#
# Output qap07 Files (2 revs/granule)
#
OUTPUT_FILE=qap07_002_11_0001_0027_0_00_00.dat 0000000.00 0003712.69
OUTPUT_FILE=qap07_002_11_0001_0029_0_00_00.dat 0003712.70 0015314.01
OUTPUT_FILE=qap07_002_11_0001_0031_0_00_00.dat 0015314.02 0026915.32
OUTPUT_FILE=qap07_002_11_0001_0033_0_00_00.dat 0026915.33 0038516.78
OUTPUT_FILE=qap07_002_11_0001_0035_0_00_00.dat 0038516.79 0050118.20
OUTPUT_FILE=qap07_002_11_0001_0037_0_00_00.dat 0050118.21 0061719.49
OUTPUT_FILE=qap07_002_11_0001_0039_0_00_00.dat 0061719.50 0073320.85
OUTPUT_FILE=qap07_002_11_0001_0041_0_00_00.dat 0073320.86 0084922.36
OUTPUT_FILE=qap07_002_11_0001_0043_0_00_00.dat 0084922.37 0089999.00
#
# Output qap08-11 (14 revs/granule)
#
OUTPUT_FILE=qap08_002_11_0001_0015_0_00_00.dat 0000000.00 0003712.69
OUTPUT_FILE=qap08_002_11_0001_0029_0_00_00.dat 0003712.70 0084922.36
OUTPUT_FILE=qap08_002_11_0001_0043_0_00_00.dat 0084922.37 0089999.00
#
OUTPUT_FILE=qap09_002_11_0001_0015_0_00_00.dat 0000000.00 0003712.69
OUTPUT_FILE=qap09_002_11_0001_0029_0_00_00.dat 0003712.70 0084922.36
OUTPUT_FILE=qap09_002_11_0001_0043_0_00_00.dat 0084922.37 0089999.00
#
OUTPUT_FILE=qap10_002_11_0001_0015_0_00_00.dat 0000000.00 0003712.69
OUTPUT_FILE=qap10_002_11_0001_0029_0_00_00.dat 0003712.70 0084922.36
OUTPUT_FILE=qap10_002_11_0001_0043_0_00_00.dat 0084922.37 0089999.00
#
OUTPUT_FILE=qap11_002_11_0001_0015_0_00_00.dat 0000000.00 0003712.69
OUTPUT_FILE=qap11_002_11_0001_0029_0_00_00.dat 0003712.70 0084922.36
OUTPUT_FILE=qap11_002_11_0001_0043_0_00_00.dat 0084922.37 0089999.00
#
#-----Execution Control

```

```
#  
ATMOSPHERE_PROCESS=ALL  
#  
#-----End of Control File  
#
```



**Section 10**  
**GLAS\_Reader**

## 10.1 Function

GLAS\_Reader reads nearly all GLAS product and ancillary files and prints the data contained within those files in human-readable format.

GLAS\_Reader differs from other PGEs in that it has a rudimentary interface which will let the user specify input files from the command line. As with control file specifications, start and stop times are required along with the filename. The interface is invoked when running GLAS\_Reader with a control file argument.

GLAS\_Reader performs no processing, but permits specification of what type of data should be written to the text file. GLAS\_Reader also supports input/output time selection.

## 10.2 Input Files

Table 10-1 lists the potential inputs files to GLAS\_Reader. All or some of these files may be specified. Note, however, than GLA00 APID files may not be specified without also specifying a corresponding ANC29 file. See the appropriate section of this document or the GLAS Data Products Specifications Volumes for details regarding the non-specific files.

**Table 10-1 GLAS\_Reader Inputs**

File Spec	Type	Source	Short Description
gla00*.dat/ ANC29*.dat	Level-0 APID/ Dynamic Ancillary	EDOS/ GLAS_L0proc	GLAS Level-0 APID files and the requisite ANC29 index file.
anc01*_???.dat	Dynamic Ancillary	met_util	Subsetted meteorological files. There is a separate ANC01 file per data type. All of the ANC01 files must be specified.
anc07*_00.dat	Static Ancillary	Science Team	GLAS error file.
anc07*_01.dat	Static Ancillary	Science Team	GLAS global constants file.
anc07*_02.dat	Static Ancillary	Science Team	GLAS waveform constants file.
anc07*_03.dat	Static Ancillary	Science Team	GLAS elevation constants file.
anc07*_04.dat	Static Ancillary	Science Team	GLAS atmosphere constants file.
anc07*_05.dat	Static Ancillary	Science Team	GLAS L1A constants file.
anc08*.dat	Dynamic Ancillary	UTexas	Precision orbit file.
anc12*_01.dat	Static Ancillary	Science Team	DEM mask file.

**Table 10-1 GLAS\_Reader Inputs**

File Spec	Type	Source	Short Description
anc13*.dat	Static Ancillary	Science Team	Geoid file
anc16*.dat	Static Ancillary	Science Team	Ocean Tide file
anc17*.dat	Static Ancillary	Science Team	Load Tide file
anc18*.dat	Static Ancillary	Science Team	Standard Atmosphere file
anc30*.dat	Static Ancillary	Science Team	Aerosol file
anc31*.dat	Static Ancillary	Science Team	Troposphere file
Control File	Control	ISIPS Operations	Control file.

### 10.2.1 Control File

The control file format and common elements are documented in Section 5 of this document. Elements specific to GLAS\_Reader are described here.

The control file section delimiter for GLAS\_Reader is:

```
=GLAS_Reader
```

Where appropriate, GLAS\_Reader can print different types of data to the output file. The type of data printed is based on execution flags within the control file. The flags and the data types they control are defined in Table 10-2.

**Table 10-2 GLAS\_Reader Control Flags**

Flag	Significance
READER_OPTION=PRODUCT	Indicates that GLAS_Reader should print product-type data (scaled integers).
READER_OPTION=ALGORITHM	Indicates that GLAS_Reader should print data converted as used in science algorithms.
READER_OPTION=SCALE	Indicates that GLAS_Reader should print the scale factors.
READER_OPTION=ALL	Indicates that GLAS_Reader should print all of the data types listed above.

Combinations of the execution flags are allowed. For example, to print both algorithm and scale values, the control file would have the following entries:

```
READER_OPTION=ALGORITHM
READER_OPTION=SCALE
```

## 10.3 Output Files

GLAS\_Reader requires no OUTPUT\_FILE specifications in the control file. GLAS\_Reader will create an output file for each type of input file requested. GLAS\_Reader will strip the '.dat' from the specified input filename and replace it with a '.txt' extension. Time selection for the output files is based on the time specified with the input files.

A corresponding ANC29 file is required to process GLA00 APID files. When processing GLA00 APID files, GLAS\_Reader writes all output to the ANC29 text file, instead of to individual APID files. The benefit of this is that the output is created in time-aligned fashion. Also note that specific APID files may be processed even though the ANC29 file was created with a superset of the selected APIDs.

## 10.4 Startup and Termination

This is an overview of the steps necessary to run GLAS\_Reader. Specific operational procedures for each of the supported scenarios are provided in the ISIPS Operational Procedures Manual.

### 10.4.1 Setup a Runtime Directory

The suggested method of running GLAS\_Reader is to emulate what the SDMS will do. The SDMS will create a temporary directory and link all necessary files into it. For example, to setup a GLAS\_Reader run, one would perform the following steps (Designate TEMP\_DIR as the temporary directory and DATA\_DIR as the location in which input data for this job has been staged):

```
mkdir $TEMP_DIR
cd $TEMP_DIR
ln -s $GLAS_HOME/bin/GLAS_Reader.
ln -s $GLAS_HOME/lib/*.
ln -s $GLAS_HOME/data/anc*.dat.
ln -s $DATA_DIR/*.dat.
```

### 10.4.2 Create a Control File

GLAS\_Reader is designed to take the name of a control file as a command-line argument. The suggested method of creating a control file is by copying a template from the \$GLAS\_HOME/data directory and modifying it with desired input/output filenames and data processing options.

```
cp $GLAS_HOME/data/cf_glas_reader.cf ./control_file_name
vi ./control_file_name
```

### 10.4.3 Run the PGE

Error and status messages will be displayed on screen (stdout) and recorded in the ANC06 file.

```
./GLAS_Reader control_file_name
```

#### 10.4.4 Run-Time Statistics

GLAS\_Reader runtime is directly proportional to the amount of input file specified and the type of output data requested.

#### 10.4.5 Termination

The process will terminate automatically upon reaching the end of all input data. The log/metadata file (ANC06\*) must be examined to determine runtime success. Additionally, the process will return a result code to the operating system which may be used to programmatically determine success or failure (0=success, 3=fatal error).

### 10.5 Error and Warning Messages

All GSAS error and warning messages are numerically listed in Appendix D.

### 10.6 Recovery Steps

If GLAS\_Reader terminates with an error:

- 1) Review error and status messages in the ANC06 file or on stdout to determine source or location of problem.
- 2) Correct the problem
- 3) Remove previous output files
- 4) Re-run the software

In case of a problematic error, which cannot be easily diagnosed, debug versions of GLAS\_Reader will be available for test use. This is, however, more of a developer procedure than a user procedure. Software users should contact the GSAS Development Team for more instructions

### 10.7 Sample GLAS\_Reader Control File

This control file reads and writes 100 seconds of ANC29, ANC32, and GLA00 APIDs 17 and 19. It writes only Algorithm values to the output files. ANC32 data are written in anc32\_002\_20000101\_000000\_01\_00.txt. The ANC29 and GLA00 APID data are written to anc29\_002\_20000101\_000000\_01\_00.txt.

```
#  
# This is the control file for the GLAS_Reader.  
#  
#-----Execution Information  
#=GLAS_Reader  
EXEC_KEY=p3t1a  
DATE_GENERATED=08 August 2001  
OPERATOR=jlee  
#
```

```
#-----Dynamic ANC Files
#
# ANC29 and ANC32 files
#
INPUT_FILE=anc29_002_20000101_000000_01_00.dat 0 100
INPUT_FILE=anc32_002_20000101_000000_01_00.dat 0 100
#
# GLA00 files
#
INPUT_FILE=gla00_002_20000101_000000_01_17.dat 0 100
INPUT_FILE=gla00_002_20000101_000000_01_19.dat 0 100
#
#-----Execution Control
#
READER_OPTION=Algorithm
#
#-----End of Control File
#
```



**Section 11**  
**MET Utility**

## 11.1 Function

This utility, met\_util, creates ANC01 subset files (i.e. temperature, relative humidity, etc.) from a meteorological (ANC40) file. The ANC40 file is a standard GRIB file received from GSFC. The subset files are used as input for several of the GSAS PGEs. met\_util reads the ANC07 file for error definitions.

met\_util uses a subset of the standard GSAS control file with several modifications. The format of the met\_util will be fully documented in a later subsection. met\_util does not use an ANC06 file, has no processing control and no time selection capabilities.

met\_util should be run before executing GLAS\_Alt or GLAS\_Atm (which require the subsetted ANC01 files) for the corresponding span of data.

## 11.2 Input Files

Table 11-1 lists the inputs files to met\_util. The ANC40 file is the NCEP Global Analysis, a 1-by-1 degree gridded data set with sampling every 6 hours. Variables included are temperature, geopotential height, and relative humidity at standard upper atmospheric pressure levels. The ANC40 files are in the GRIB format, which is the WMO (World Meteorological Organization) standard for exchanging gridded binary data. All of these files must be specified and named according to GSAS file naming conventions.

**Table 11-1 met\_util Inputs**

File Spec	Type	Source	Short Description
anc40*.dat	Dynamic Ancillary	GSFC	Standard MET file.
anc07*_00.dat	Static Ancillary	Science Team	GLAS error file.
anc07*_06.dat	Static Ancillary	Science Team	GLAS utility constants file.
Control File	Control	ISIPS Operations	Control file.

### 11.2.1 Control File

The met\_util control file is a subset of the standard GSAS control file. The basic format of this file is documented in Section 5 of this document. met\_util does not use the common elements used in other GSAS control files.

The control file section delimiter for met\_util is:

=met\_util

The only keywords met\_util uses are “INPUT\_FILE”, “OUTPUT\_FILE”, and the control file section delimiter. The “INPUT\_FILE” and “OUTPUT\_FILE” specifications do not have start time and stop times.

## 11.3 Output Files

Table 11-2 lists the specific subset output files created by met\_util. The five files are an ASCII header file, a height file, a temperature file, a relative humidity file, and a precipitable water table file. The last four files are binary with no header.

Each record in the binary output file contains the global gridded values of the respective parameter at a particular pressure level. The first record is at the highest pressure level, and the last record is at the lowest pressure level. The ASCII header file lists the record number, location, date, pressure level, and parameter name (as read from the MET file). Refer to <http://wesley.wwb.noaa.gov/wgrib.html> for details

Output files must be named according to standard GSAS naming conventions.

**Table 11-2 met\_util Outputs**

File Spec	Type	Destination	Short Description
anc01*_00.dat	Dynamic Ancillary	GSAS PGEs/ Archive	Subsetted meteorological header file.
anc01*_01.dat	Dynamic Ancillary	GSAS PGEs/ Archive	Subsetted meteorological precipitable water file.
anc01*_02.dat	Dynamic Ancillary	GSAS PGEs/ Archive	Subsetted meteorological height file.
anc01*_03.dat	Dynamic Ancillary	GSAS PGEs/ Archive	Subsetted meteorological relative humidity file.
anc01*_04.dat	Dynamic Ancillary	GSAS PGEs/ Archive	Subsetted meteorological temperature file.

## 11.4 Startup and Termination

This is an overview of the steps necessary to run met\_util. Specific operational procedures for each of the supported scenarios are provided in the ISIPS Operational Procedures Manual.

### 11.4.1 Setup a Runtime Directory

The suggested method of running met\_util is to emulate what the SDMS will do. The SDMS will create a temporary directory and link all necessary files into it. For example, to setup a met\_util run, one would perform the following steps (Designate TEMP\_DIR as the temporary directory and DATA\_DIR as the location in which input data for this job has been staged):

```
mkdir $TEMP_DIR
cd $TEMP_DIR
```

```
ln -s $GLAS_HOME/bin/met_util .
ln -s $GLAS_HOME/bin/wgrib .
ln -s $GLAS_HOME/bin/SDMS_met_script .
ln -s $GLAS_HOME/lib/* .
ln -s $GLAS_HOME/data/anc*.dat .
ln -s $DATA_DIR/*.dat .
```

#### 11.4.2 Create a Control File

met\_util is designed to take the name of a control file as a command-line argument. The suggested method of creating a control file is by copying a template from the \$GLAS\_HOME/data directory and modifying it with desired input/output filenames and data processing options.

```
cp $GLAS_HOME/data/cf_met_util.ctl ./control_file_name
vi ./control_file_name
```

#### 11.4.3 Run the PGE

Error and status messages will be displayed on screen (stdout) and recorded in the ANC06 file.

```
./met_util control_file_name
```

#### 11.4.4 Run-Time Statistics

met\_util subsets one file (6 hours) of meteorological data in less than a minute. This may vary due to hardware load and data dependencies.

#### 11.4.5 Termination

The process will terminate automatically upon reaching the end of all input data. Standard output (stdout) must be examined to determine runtime success. Additionally, the process will return a result code to the operating system which may be used to programmatically determine success or failure (0=success, 3=fatal error).

### 11.5 Error and Warning Messages

Fatal errors are generated if there is a problem opening or reading a file. When an error occurs, an error message is printed to the standard output. It includes the error number, severity, process name where the error occurred, a short description, and the file name if the error occurred while accessing a file.

Errors possible from met\_util with the severity and frequency include:

ERROR=-10002 No control file specified	3	1
ERROR=-10014 Unrecognized line in control file	3	1
ERROR=-10015 Unknown value in keyword/value pair	3	1
ERROR=-10017 I/O Error Reading Control File	3	1
ERROR=-10046 Error returned from script	3	1

---

ERROR=-10047 File naming conventions do not match 3 1

The error severity and frequency may be modified as described in the error section.

Explanations of these errors follow:

**Table 11-3 Error Resolution**

Error Type	Ensure that:
No control file specified	- control file name is typed correctly on command line
Reading File	- file is not available - file is not corrupt - regenerate if necessary
Unrecognized line in control file	- keywords have not been changed in control file - extraneous lines have not been added to control file
Unknown value in keyword/value pair	- input and output file names in control file conform to their correct naming conventions
File naming conventions do not match	- input and output file names in control file conform to their correct naming conventions - input and output file names match except for the last 7 characters
Error returned from script	- the script and executable are linked into the directory where the program is run - disk space is available

## 11.6 Recovery Steps

If met\_util terminates with an error:

- 1) Review error and status messages on stdout to determine source or location of problem. Use Table 11-3 above for assistance.
- 2) Correct the problem
- 3) Remove previous output files
- 4) Re-run the software

In case of a problematic error, which cannot be easily diagnosed, debug versions of met\_util will be available for test use. This is, however, more of a developer procedure than a user procedure. Software users should contact the GSAS Development Team for more instructions

## 11.7 Sample met\_util Control File

This control file creates subsetted ANC01 files from the input ANC40 meteorological file.

```
= MET_UTIL
INPUT_FILE=anc40_000_20000101_120000_01.dat
```

```
INPUT_FILE=anc07_000_00_00.dat
INPUT_FILE=anc07_000_00_06.dat
OUTPUT_FILE=anc01_000_20000101_120000_01_00.dat
OUTPUT_FILE=anc01_000_20000101_120000_01_01.dat
OUTPUT_FILE=anc01_000_20000101_120000_01_02.dat
OUTPUT_FILE=anc01_000_20000101_120000_01_03.dat
OUTPUT_FILE=anc01_000_20000101_120000_01_04.dat
=
```



Section 12

## Reformat Orbit Utility

### 12.1 Function

This utility, reforbit\_util, processes a given Reference Orbit file for all ascending equatorial crossings. Each ascending equatorial crossing will be given a track number. The first track west of Greenwich (or on Greenwich) will be assigned a Track number of 1 and its time will be determined. All consecutive tracks after that (in increasing time order) will be assigned numbers 2, 3, 4, and so on. All tracks that were to the right of Track 1, will be wrapped around the last track on the left and numbered accordingly.

reforbit\_util uses a modified version of the standard GSAS control file. The format of the reforbit\_util control file will be fully documented in a later subsection.

reforbit\_util does not use an ANC06 file, has no processing control and no time selection capabilities.

reforbit\_util should be run before executing GLAS\_L1A, GLAS\_Alt or GLAS\_Atm (which require SDMS to provide orbit information) for the corresponding span of data.

### 12.2 Input Files

Table 12-1 lists the inputs files to reforbit\_util. Refer to the "Interface Control Document Between I-SIPS/ISF and CSR" for a description of the Reference orbit file. All of these files must be specified and named according to GSAS file naming conventions.

**Table 12-1 reforbit\_util Inputs**

File Spec	Type	Source	Short Description
anc26*.dat	Dynamic Ancillary	UTexas	Reference Orbit file.
anc07*_00.dat	Static Ancillary	Science Team	GLAS error file.
anc07*_06.dat	Static Ancillary	Science Team	GLAS Utility constants file.
Control File	Control	ISIPS Operations	Control file.

#### 12.2.1 Control File

The reforbit\_util control file is a modified version of the standard GSAS control file. The basic format of this file is documented in Section 5 of this document. reforbit\_util does not use the common elements used in other GSAS control files.

The control file section delimiter for reforbit\_util is:

=reforbit\_util

The only keywords reforbit\_util uses are “INPUT\_FILE”, “INPUT\_ERR”, “OUTPUT\_FILE1”, and the control file section delimiter. These keyword specifications do not have start time and stop times. The keywords are used for the following designations:

**Table 12-2 reforbit\_util Keywords**

Keyword	Value
INPUT_FILE	Input reference orbit filename.
INPUT_ERR	ANC07 error filename
OUTPUT_FILE1	output reference orbit filename

## 12.3 Output File

reforbit\_util creates one ASCII file (ANC22) as output. The first record will contain the average period of the tracks, and the number of tracks in the reference orbit file. Each subsequent record in the output file contains the longitude (in degrees E longitude), the track number, the time in seconds relative to Track 1, the actual MJD time (in days), and the seconds of day.

**Table 12-3 reforbit\_util Outputs**

File Spec	Type	Destination	Short Description
anc22*.dat	Dynamic Ancillary	SDMS/Archive	Reference orbit file.

## 12.4 Startup and Termination

This is an overview of the steps necessary to run reforbit\_util. Specific operational procedures for each of the supported scenarios are provided in the ISIPS Operational Procedures Manual.

### 12.4.1 Setup a Runtime Directory

The suggested method of running reforbit\_util is to emulate what the SDMS will do. The SDMS will create a temporary directory and link all necessary files into it. For example, to setup a reforbit\_util run, one would perform the following steps (Designate TEMP\_DIR as the temporary directory and DATA\_DIR as the location in which input data for this job has been staged):

```
mkdir $TEMP_DIR
cd $TEMP_DIR
ln -s $GLAS_HOME/bin/reforbit_util.
ln -s $GLAS_HOME/lib/*.
ln -s $GLAS_HOME/data/anc*.dat.
ln -s $DATA_DIR/*.dat.
```

### 12.4.2 Create a Control File

reforbit\_util is designed to take the name of a control file as a command-line argument. The suggested method of creating a control file is by copying a template from the \$GLAS\_HOME/data directory and modifying it with desired input/output file-names and data processing options.

```
cp $GLAS_HOME/data/cf_reforbit_util.ctl ./control_file_name  
vi ./control_file_name
```

### 12.4.3 Run the PGE

Error and status messages will be displayed on screen (stdout) and recorded in the ANC06 file.

```
./reforbit_util control_file_name
```

### 12.4.4 Run-Time Statistics

reforbit\_util processes one orbit file in less than a minute. This may vary due to hardware load and data dependencies.

### 12.4.5 Termination

The process will terminate automatically upon reaching the end of all input data. Standard output (stdout) must be examined to determine runtime success. Additionally, the process will return a result code to the operating system which may be used to programmatically determine success or failure (0=success, 3=fatal error).

## 12.5 Error and Warning Messages

Fatal errors are generated if there is a problem opening or reading a file. When an error occurs, an error message is printed to the standard output. It includes the error number, severity, process name where the error occurred, a short description, and the file name if the error occurred while accessing a file.

Errors possible from reforbit\_util with the severity and frequency include:

ERROR=-10001	Error Opening File for Input	3	1
ERROR=-10002	No control file specified	3	1
ERROR=-10006	Error Opening File for Output	3	1
ERROR=-10014	Unrecognized line in control file	3	1
ERROR=-10017	I/O Error Reading Control File	3	1
ERROR=-10029	Error Returned From Script	3	1
ERROR=-50008	Value of cosine GT 1.0 in Geoloc	2	1
ERROR=-50009	Value of cosine Lt -1.0 in Geoloc	2	1
ERROR=-50010	Max Iterations exceeded in Geoloc	2	1

```
ERROR=-50013 Error reading 10 consec recs in POD file3 1
```

The error severity and frequency may be modified as described in the error section.

Explanations of these errors follow:

**Table 12-4 Error Resolution**

Error Type	Ensure that:
No control file specified	- control file name is typed correctly on command line
Reading File	- file is available - file is not corrupt - regenerate if necessary
Unrecognized line in control file	- keywords have not been changed in control file - extraneous lines have not been added to control file

## 12.6 Recovery Steps

If reforbit\_util terminates with an error:

- 1) Review error and status messages on stdout to determine source or location of problem. Use Table 12-4 above for assistance.
- 2) Correct the problem
- 3) Remove previous output files
- 4) Re-run the software

In case of a problematic error, which cannot be easily diagnosed, debug versions of reforbit\_util will be available for test use. This is, however, more of a developer procedure than a user procedure. Software users should contact the GSAS Development Team for more instructions

## 12.7 Sample reforbit\_util Control File

This control file creates the ANC22 reference orbit file from the ANC26 input file.

```
= reforbit_util
INPUT_FILE=anc26_000_20000101_120000_01.dat
INPUT_FILE=anc07_000_00_06.dat
OUTPUT_FILE1=anc22_000_20000101_120000_01.dat
=
```

**Section 13**  
**Create Granule Utility**

### 13.1 Function

This utility, `createGran_util`, processes a given Predicted Orbit file and using a Reference Orbit ID file, creates 1/4 rev, 2 rev, and 14 rev granules. This utility will call the `createGranule` subroutine to create two scratch files (a rev file, and a granule file). The rev file will contain all the ascending equatorial crossings determined from the predicted orbit file. The granule file will contain the +/- 50 degree latitude crossings. The +/-50 degree latitude crossings will be designated by segment numbers. The segment numbers are defined in Table 13-1.

**Table 13-1 Segment Description**

Segment	Description
Segment 1	start of +50 degree latitude crossing (on the ascending portion of the track),
Segment 2	start of +50 degree latitude crossing (on the descending portion of the track),
Segment 3	start of a -50 degree latitude crossing (on the descending portion of the track),
Segment 4	start of a -50 degree latitude crossing (on the ascending portion of the track).

This utility will then check the operation mode selected (i.e., Predict or Reference). If the Reference mode is selected, then this utility will call the `update_refTab` subroutine to calculate the begin track, and time into begin track for the relevant reference orbit files. The Reference Orbit ID file (which is an input to this routine) will be updated with this new information. If the Predict mode is selected, then the `calc_granules` subroutine will be invoked. This routine will calculate the 1/4 rev, 2 rev, and 14 rev granule information on the basis of information contained in the Reference Orbit ID file and Predicted Orbit file. The calculated granule information will be written to user specified files. The information from the 1/4 rev granules will be used along with the appropriate track file to generate a SCF rev file. The SCF rev file will list the rev numbers, start times of each rev tracks as well as the reference orbit repeat ground track phase, reference orbit number and instance

`createGran_util` uses a modified version of the standard GSAS control file. The format of the `createGran_util` control file will be fully documented in a later subsection. `createGran_util` does not use an ANC06 file, has no processing control and no time selection capabilities.

`createGran_util` should be run before executing GLAS\_L1A, GLAS\_Alt or GLAS\_Atm (which require SDMS to provide segment information) for the corresponding span of data.

## 13.2 Input Files

Table 13-2 lists the inputs files to createGran\_util. Refer to the "Interface Control Document Between I-SIPS/ISF and CSR" for a description of the Predicted orbit file. All of these files must be specified and named according to GSAS file naming conventions.

**Table 13-2 createGran\_util Inputs**

File Spec	Type	Source	Short Description
anc26*.dat	Dynamic Ancillary	UTexas	Predicted Orbit file.
anc42*.dat	Dynamic Ancillary	ISIPS	Reference orbit table.
anc07*_00.dat	Static Ancillary	Science Team	GLAS error file.
Control File	Control	ISIPS Operations	Control file.

### 13.2.1 Control File

The createGran\_util control file is a modified version of the standard GSAS control file. The basic format of this file is documented in Section 5 of this document. createGran\_util does not use the common elements used in other GSAS control files.

The control file section delimiter for createGran\_util is:

```
=createGran_util
```

createGran\_util keyword file specifications do not have start time and stop times.  
createGran\_util uses the following keywords:

**Table 13-3 createGran\_util Keywords**

Keyword	Value
IN_REFORBFILE	Reference orbit ID file name.
IN_PREDORBFILE	Predicted orbit table file name.
IN_ERRORFILE	Ancillary error file name.
OUT_REFORBFILE	Reference orbit ID file name .
OUT_QRTREVFILe	quarter rev file name .
OUT_2REVFILe	two rev file name .
OUT_14REVFILe	fourteen rev file name
OUT_SCFREVFILe	SCF rev file name
PROC_MODE	Processing mode (i.e. PREDORB or REFORB)
START_TM	POD start time (J2000 secs)
STOP_TM	POD stop time (J2000 secs)

When running in REFORB mode, the IN\_REFORBFILE, IN\_PREDORBFILE, IN\_ERRORFILE, OUT\_REFORBFILE, PROC\_MODE, START\_TM, and STOP\_TM keywords are required. For the PREDORB mode, the IN\_REFORBFILE, IN\_PREDORBFILE, IN\_ERRORFILE, OUT\_QRTREVFILE, OUT\_2REVFILE, OUT\_14REVFILE, OUT\_SCFREVFILE, PROC\_MODE, START\_TM, and STOP\_TM keywords are required.

### 13.3 Output Files

Four ASCII files are the primary output. The first file (called the quarter rev file) contains the quarter rev start time (in J2000 seconds), repeat ground track phase, reference orbit number, instance, product type (1 for quarter rev granule), cycle number, track number, and segment number for all the quarter rev granules determined from the predicted orbit file. The next ASCII file (the two rev file) contains the two rev start time (in J2000 seconds), repeat ground track phase, reference orbit number, instance, product type (2 for two rev granule), cycle number, track number, and segment number for all the two rev granules determined from the predicted orbit file. The third ASCII file (the fourteen rev file) contains the fourteen rev start time (in J2000 seconds), repeat ground track phase, reference orbit number, instance, product type (3 for two rev granule), cycle number, track number, and segment number for all the fourteen rev granules determined from the predicted orbit file. The fourth ASCII file (called the SCF rev file) contains the relative rev numbers, starting from 1 (during each execution), that were determined from the given predicted orbit file. It also contains the start time, repeat ground track phase, reference orbit number, instance, cycle number, and track number for all the equator crossings determined from the predicted orbit file.

Additionally, two ASCII scratch files will be created by the createGran\_util Utility. The first file will be a rev file, which will contain the rev times and longitudes. Each row of this file will contain the time (in J2000 secs), latitude, and longitude of the ascending equatorial crossings. The other file will be a granule file, which will have the segment crossing times, and locations (latitudes and longitudes), as well as the segment numbers. Each line of the granule file will contain the start time (in J2000 secs), the latitude, longitude, and the segment number of a granule respectively. The first two rows will have a segment number of 10 and 11 respectively. These granules list the start and end times of the predicted orbit file respectively. For a two day predicted orbit file, the rev scratch file should be about 2 Kbytes, while a granule scratch file should be about 7Kbytes.

### 13.4 Startup and Termination

This is an overview of the steps necessary to run createGran\_util. Specific operational procedures for each of the supported scenarios are provided in the ISIPS Operational Procedures Manual.

### 13.4.1 Setup a Runtime Directory

The suggested method of running `createGran_util` is to emulate what the SDMS will do. The SDMS will create a temporary directory and link all necessary files into it. For example, to setup a `createGran_util` run, one would perform the following steps (Designate `TEMP_DIR` as the temporary directory and `DATA_DIR` as the location in which input data for this job has been staged):

```
mkdir $TEMP_DIR
cd $TEMP_DIR
ln -s $GLAS_HOME/bin/createGran_util.
ln -s $GLAS_HOME/lib/*.
ln -s $GLAS_HOME/data/anc*.dat.
ln -s $DATA_DIR/*.dat.
```

### 13.4.2 Create a Control File

`createGran_util` is designed to take the name of a control file as a command-line argument. The suggested method of creating a control file is by copying a template from the `$GLAS_HOME/data` directory and modifying it with desired input/output filenames and data processing options.

```
cp $GLAS_HOME/data/cf_creategran.ctl ./control_file_name
vi ./control_file_name
```

### 13.4.3 Run the PGE

Error and status messages will be displayed on screen (`stdout`) and recorded in the `ANC06` file.

```
>./createGran_util control_file_name
```

### 13.4.4 Run-Time Statistics

`createGran_util` processes one orbit file in less than a minute. This may vary due to hardware load and data dependencies.

### 13.4.5 Termination

The process will terminate automatically upon reaching the end of all input data. Standard output (`stdout`) must be examined to determine runtime success. Additionally, the process will return a result code to the operating system which may be used to programmatically determine success or failure (0=success, 3=fatal error).

## 13.5 Error and Warning Messages

Fatal errors are generated if there is a problem opening or reading a file. When an error occurs, an error message is printed to the standard output. It includes the error number, severity, process name where the error occurred, a short description, and the file name if the error occurred while accessing a file.

Errors possible from `createGran_util` with the severity and frequency include:

---

ERROR=-10001 Error Opening File for Input	3	1
ERROR=-10002 No control file specified	3	1
ERROR=-10006 Error Opening File for Output	3	1
ERROR=-10014 Unrecognized line in control file	3	1
ERROR=-10017 I/O Error Reading Control File	3	1
ERROR=-10029 Error Returned From Script	3	1
ERROR=-50008 Value of cosine GT 1.0 in Geoloc	2	1
ERROR=-50009 Value of cosine Lt -1.0 in Geoloc	2	1
ERROR=-50010 Max Iterations exceeded in Geoloc	2	1
ERROR=-50013 Error reading 10 consec recs in POD file3	1	

The error severity and frequency may be modified as described in the error section. Explanations of these errors follow:

**Table 13-4 Error Resolution**

Error Type	Ensure that:
No control file specified	- control file name is typed correctly on command line
Reading File	- file is available - file is not corrupt - regenerate if necessary
Unrecognized line in control file	- keywords have not been changed in control file - extraneous lines have not been added to control file

## 13.6 Recovery Steps

If createGran\_util terminates with an error:

- 1) Review error and status messages on stdout to determine source or location of problem. Use Table 13-4 above for assistance.
- 2) Correct the problem
- 3) Remove previous output files
- 4) Re-run the software

In case of a problematic error, which cannot be easily diagnosed, debug versions of createGran\_util will be available for test use. This is, however, more of a developer procedure than a user procedure.

## 13.7 Sample createGran\_util Control File (REFORB)

This control file processes a reference orbit ID file with processing mode set to REFORB.

```
=CREATEGRAN_UTIL Control file createGran utility
IN_REFORBFILE=reforbIDfile_123
IN_PREDORBFILE=day3orb.da
IN_ERRORFILE=anc07_001_01_00.dat
IN_ERRORFILE=anc07_001_01_01.dat
IN_ERRORFILE=anc07_001_01_02.dat
IN_ERRORFILE=anc07_001_01_03.dat
IN_ERRORFILE=anc07_001_01_04.dat
IN_ERRORFILE=anc07_001_01_05.dat
IN_ERRORFILE=anc07_001_01_06.dat
OUT_REFORBFILE=reforbIDfile_123out
PROC_MODE=REFORB
START_TM= 173250.0
STOP_TM= 258945.0
=END of control file
```

## 13.8 Sample createGran\_util Control File (PREDORB)

This control file processes a reference orbit ID file with processing mode set to PREDORB.

```
=CREATEGRAN_UTIL Control file createGran utility
IN_REFORBFILE=reforbIDfile_123out
IN_PREDORBFILE=day3orb.da
IN_ERRORFILE=anc07_001_01_00.dat
IN_ERRORFILE=anc07_001_01_01.dat
IN_ERRORFILE=anc07_001_01_02.dat
IN_ERRORFILE=anc07_001_01_03.dat
IN_ERRORFILE=anc07_001_01_04.dat
IN_ERRORFILE=anc07_001_01_05.dat
IN_ERRORFILE=anc07_001_01_06.dat
OUT_QRTREVFILER=qrtrevfile_2
OUT_2REVFILER=tworevfile_2
OUT_14REVFILER=fteenrevfile_2
OUT_SCFREVFILER=SCFrevfile_2
PROC_MODE=PREDORB
START_TM= 173250.0
STOP_TM= 258945.0
=END of control file
```

Section 14

## Atmosphere Ancillary Utility

### 14.1 Function

Atm\_anc reads a GLA02 product file and computes 532 nm and 1064 nm calibration coefficients for specified-time segments. The coefficients per segment are output to an ancillary (ANC36) file which is used in the level 1B atmosphere data processing.

This utility performs an intermediary step between the atmosphere level 1A and level 1B data processing. It reads the GLA02 product file output from the atmosphere level 1A processing and creates a file containing data used by the atmosphere level 1B data processing. This file contains 532 nm and 1064 nm calibration coefficients calculated over specified-time segments. This is achieved by summing 532 nm and 1064 nm lidar data over each second of the GLA02 product file for a specified time. Once the time has been reached, the data is averaged for the segment. Standard atmosphere and meteorological (MET) data is retrieved for each segment and average 532 nm and 1064 nm molecular backscatter values are computed for each segment. Averaged 532 nm ozone transmissions are also computed for each segment. From these data, the 532 nm and 1064 nm calibration coefficients are calculated for each segment. The calibration coefficients, molecular backscatter, and ozone transmissions for each segment are written to the ancillary output file.

atm\_anc uses a modified version of the standard GSAS control file. The format of the atm\_anc control file will be fully documented in a later subsection. atm\_anc does not use an ANC06 file, has no processing control and no time selection capabilities.

atm\_anc should be run after executing met\_util and GLAS\_L1A, but before executing GLAS\_AtM (which requires the ANC36 file) for the corresponding span of data.

### 14.2 Input Files

Input files consist of the GLA02 product file, the standard atmosphere data file, the ozone data file, the MET data files, and the ancillary (ANC07) files which contain constants used by the program and error numbers available to the program. Note that a full 12 hours of MET data (2 sets of files) must be specified. Table 14-1 lists the inputs files to atm\_anc. All of these files must be specified and named according to GSAS file naming conventions.

#### 14.2.1 Control File

The atm\_anc control file is a modified version of the standard GSAS control file. The basic format of this file is documented in Section 5 of this document. atm\_anc does not use the common elements used in other GSAS control files.

The control file section delimiter for atm\_anc is:

```
=atm_anc
```

**Table 14-1 atm\_anc Inputs**

File Spec	Type	Source	Short Description
gla02*.dat	L1A Product	GLAS_L1A	GLAS L1A Atmosphere product file.
anc01*_???.dat	Dynamic Ancillary	met_util	Subsetted MET files. There is a separate MET file per MET data type. All of the MET files must be specified.
anc07*_00.dat	Static Ancillary	Science Team	GLAS error file.
anc07*_02.dat	Static Ancillary	Science Team	GLAS atmosphere constants file.
anc18*.dat	Static Ancillary	Science Team	Standard Atmosphere file
anc35*.dat	Static Ancillary	Science Team	Ozone file
Control File	Control	ISIPS Operations	Control file.

The only keywords atm\_anc uses are “INPUT\_FILE”, “OUTPUT\_FILE” and the control file section delimiter.

### 14.3 Output Files

The software creates an ancillary (ANC36) output file. The output file contains 19 values per segment:

- first record index
- first time (J2000 sec)
- last time (J2000 sec)
- 532 calibration coefficient at the high calibration height
- 532 calibration coefficient at the low calibration height
- 1064 calibration coefficient at the low calibration height
- average 532 lidar value at the high calibration height
- average 532 lidar value at the low calibration height
- average 1064 lidar value at the low calibration height
- average 532 molecular backscatter value at the high calibration height
- average 532 molecular backscatter value at the low calibration height
- average 1064 molecular backscatter value at the low calibration height
- average 532 ozone transmission value at the high calibration height
- average 532 ozone transmission value at the low calibration height
- average 532 background

- high calibration height (m)
- high calibration band width (m)
- low calibration height (m)
- low calibration band width (m)

An example of the output file follows:

```

rec_index first_time last_time ccof_ghi ccof_glo
ccof_irlo lid_ghi lid_glo lid_irlo mol_ghi mol_glo
mol_irlo oz_ghi oz_glo g_bkgrd cht_hi hi_wid
cht_lo lo_wid

      1.           1.           3.   1.24E+18  1.97E+17  -
8.18E-08  3.33E+10  5.00E+10

-1.33E-15  2.71E-08  2.61E-07  1.63E-08  9.95E-01  9.75E-01
3.33E+02  30000.00  2000.00  14924.00  2000.00

      10.          10.          13.   1.13E+18  1.94E+17 -8.10E-
08  3.12E+10  4.98E+10

-1.27E-15  2.66E-08  2.58E-07  1.45E-08  9.63E-01  9.88E-01
3.21E+02  30000.00  2000.00  12764.00  2000.00

```

The output file is meant to be used by the GSAS atmosphere level 1B data processing routines. These routines read the ANC36 file and interpolate the 532 nm and 1064 nm calibration coefficients per segment to once per second. These coefficients are then used to compute the 532 nm and 1064 nm backscatter cross section profiles at once per second for use in the atmosphere level 2 data processing.

These ANC36 file must be named according to standard GSAS naming conventions.

**Table 14-2 atm\_anc Outputs**

File Spec	Type	Destination	Short Description
anc36*.dat	Dynamic Ancillary	GLAS_AtM/Archive	Atm ancillary file.

## 14.4 Startup and Termination

This is an overview of the steps necessary to run atm\_anc. Specific operational procedures for each of the supported scenarios are provided in the ISIPS Operational Procedures Manual.

### 14.4.1 Setup a Runtime Directory

The suggested method of running atm\_anc is to emulate what the SDMS will do. The SDMS will create a temporary directory and link all necessary files into it. For example, to setup a atm\_anc run, one would perform the following steps (Designate TEMP\_DIR as the temporary directory and DATA\_DIR as the location in which input data for this job has been staged):

```
>mkdir $TEMP_DIR
>cd $TEMP_DIR
>ln -s $GLAS_HOME/bin/atm_anc.
>ln -s $GLAS_HOME/lib/*.
>ln -s $GLAS_HOME/data/anc*.dat.
>ln -s $DATA_DIR/*.dat.
```

#### **14.4.2 Create a Control File**

atm\_anc is designed to take the name of a control file as a command-line argument. The suggested method of creating a control file is by copying a template from the \$GLAS\_HOME/data directory and modifying it with desired input/output filenames and data processing options.

```
>cd $TEMP_DIR
>cp $GLAS_HOME/data/control_template ./control_file_name
>vi ./control_file_name
```

#### **14.4.3 Run the PGE**

Error and status messages will be displayed on screen (stdout) and recorded in the ANC06 file.

```
>cd $TEMP_DIR
>./atm_anc control_file_name
```

#### **14.4.4 Run-Time Statistics**

atm\_anc processes one orbit file in approximately x minutes. This may vary due to hardware load and data dependencies.

#### **14.4.5 Termination**

The process will terminate automatically upon reaching the end of all input data. Standard output (stdout) must be examined to determine runtime success. Additionally, the process will return a result code to the operating system which may be used to programmatically determine success or failure (0=success, 3=fatal error).

### **14.5 Error and Warning Messages**

Fatal errors are generated if there is a problem opening or reading a file. When an error occurs, an error message is printed to the standard output. It includes the error number, severity, process name where the error occurred, a short description, and the file name if the error occurred while accessing a file.

Errors possible from atm\_anc with the severity and frequency include:

ERROR=-10001 Error Opening File for Input:	3	1
ERROR=-10002 No control file specified	3	1
ERROR=-10006 Error Opening File for Output	3	1
ERROR=-10008 Error Reading File	3	1

---

ERROR=-10009 Error Writing File	3	1
ERROR=-10014 Unrecognized line in control file	3	1
ERROR=-10015 Unknown value in keyword/value pair	3	1
ERROR=-10017 I/O Error Reading Control File	3	1
ERROR=-10025 Error Reading Standard Atmosphere file header		
3 1		
ERROR=-10026 Error Reading Standard Atmosphere file data		
3 1		
ERROR=-40001 DEM out-of-bounds	1	50
ERROR=-40024 Invalid value written to ancillary file	1	1
ERROR=-40025 Array index is greater than size allowed	3	1

The error severity and frequency may be modified as described in the error section. Explanations of these errors follow:

**Table 14-3 Error Resolution**

Error Type	Ensure that:
No control file specified	- control file name is typed correctly on command line
Opening File	- file is available - control file reflects the correct file name - file name does not exceed 60 characters
Reading File	- file is available - file is not corrupt - regenerate if necessary
Writing File	- file is available - disk space is available
Unrecognized line in control file	- keywords have not been changed in control file - extraneous lines have not been added to control file
Unknown value in keyword/value pair	- input and output file names in control file conform to their correct naming conventions
Array index is greater than size allowed	- the dimension of the array is sufficient for the data it needs to contain - the amount of data is not too large for the array

## 14.6 Recovery Steps

If atm\_anc terminates with an error:

- 1) Review error and status messages on stdout to determine source or location of problem. Use Table 14-3 above for assistance.

- 2) Correct the problem
- 3) Remove previous output files
- 4) Re-run the software

In case of a problematic error, which cannot be easily diagnosed, debug versions of atm\_anc will be available for test use. This is, however, more of a developer procedure than a user procedure.

## 14.7 Sample atm\_anc Control File

```
= atm_anc
INPUT_FILE=gla02_003_12_034_0001_1_00.dat
INPUT_FILE=anc07_001_01_00.dat
INPUT_FILE=anc07_001_01_02.dat
INPUT_FILE=anc18_001_01_00.dat
INPUT_FILE=anc35_001_01_00.dat
INPUT_FILE=anc01_000_20000101_120000_01_00.dat
INPUT_FILE=anc01_000_20000101_120000_01_01.dat
INPUT_FILE=anc01_000_20000101_120000_01_02.dat
INPUT_FILE=anc01_000_20000101_120000_01_03.dat
INPUT_FILE=anc01_000_20000101_120000_01_04.dat
INPUT_FILE=anc01_000_20000101_180000_01_00.dat
INPUT_FILE=anc01_000_20000101_180000_01_01.dat
INPUT_FILE=anc01_000_20000101_180000_01_02.dat
INPUT_FILE=anc01_000_20000101_180000_01_03.dat
INPUT_FILE=anc01_000_20000101_180000_01_04.dat
OUTPUT_FILE=anc36_003_12_034_0001_1_00.dat
=
```

## Appendix A

# GLAS File Summary

This Appendix is a summary of the GLAS File types and provides information about the recommended production naming conventions. Full details regarding the GLAS product and ancillary files are provided in the GLAS Science Data Management Plan and the GLAS Standard Data Products Specifications - Level 1 and Level 2.

### A.1 GLAS Production File Naming Convention

GSAS creates products and uses various ancillary files and other input products that are track/time dependent, or process-specific and created automatically. Some ancillary files are static and others are dynamic. The following scheme outlines the file naming conventions required for each file type.

- 1) Track dependent products processed at ISIPS (GLA01-3,05-15;BRW,QAP)

HHHxx\_mmm \_pr\_ccc\_tttt\_s \_nn\_ff.eee

- 2) Time dependent products: (GLA00 and GLA04, dynamic ANC,

HHHxx\_mmm yyyyymmdd\_hhmmss\_nn\_ff.eee

- 3) Process specific input or output automatically created and not covered under other categories (control files, log files, SCF qa)

HHHxx\_mmm \_yyyyymmdd\_i ii.eee  
)

- 4) Static Ancillary files required for processing (ANC)

HHHxx\_mmm\_nn\_ff.eee

Time for process-specific files is processing date. GLAS file naming keys are defined in Table A-1.

**Table A-1 GLAS File Naming Keys**

Key	Description
HHH	(Specific to 1,2,3 and 4) Type identification – GLA, ANC, SCF, BRW, QAP, ING, ...
HHH	(Specific to 3) Type of job - CF, ING, PRO, DIS, ...
xx	Type ID number (CCB assigned number within a specific HHH)
p	repeat ground track phase
r	reference orbit number
ccc	cycle of reference orbit for this phase

**Table A-1 GLAS File Naming Keys (Continued)**

Key	Description
ttt	track within reference orbit
s	segment of orbit
yyymmdd	starting date in year, month, and day of month
hhmmss	starting time hour, minute, second
mmm	release number for process that created the produce (CCB assigned-combination of software and data)
nn	granule version number (the number of times this granule is created for a specific release)
iii	counting sequence number (incremental sequence per day for each instance of a process specific HHHxx)
ff	file type (numerical, CCB assigned for multiple files as needed for data of same time period for a specific HHHxx, .i.e. multi-file granule)
eee	(specific to 1,2,4) file extension – dat, scf, hdf, eds, pds, met, ctl ...

## A.2 EDOS L0 File Naming Convention

EDOS-delivered files have a different naming convention than standard GLAS product files. The EDOS L0 files will be renamed as part of the ingest process. Incoming filenames are as follows:

foooooooottttthhhhhhdddddddiuu.eeee

Table A-2 defines keys for the EDOS file naming convention.

**Table A-2 EDOS L0 File Naming Keys**

Key	Description
f	E (for EDS) or P (for PDS) (1byte)
ooooooo	First APID in data set (SCID 3 bytes, APID 4 bytes)
tttttt	Second APID in data set (SCID 3 bytes, APID 4 bytes)
hhhhhhh	Third APID in data set (SCID 3 bytes, APID 4 bytes)
ddddddddd	creation GMT/ZULU time (11 bytes)
I	numeric identification (0-9) (1 byte)
uu	Unique file number (00-99) (2 bytes)
eeee	File naming extension PDS or EDS (4 bytes)

### A.3 GLAS File Types

Table A-3 lists GLAS file IDs, a short description, and file type for each file used in GSAS. Note that QAP files, which correspond to each product file, are not listed. The “multi” column indicates if a file type is a multi-file granule. These means there are multiple subtypes within each file type.

**Table A-3 GLAS File Types**

File Type	Short Description	Type	Multi
GLA00	GLAS Instrument Packet File (APIDs)	Product	yes (one file per APID type)
GLA01	Altimetry Data	Product	No
GLA02	Atmosphere Data	Product	No
GLA03	Engineering Data	Product	No
GLA04	SRS and GPS Data	Product	Yes 00= 01= 02= 03= 04=
GLA05	Waveform-based Range Corrections	Product	No
GLA06	Elevation	Product	No
GLA07	Backscatter	Product	No
GLA08	Boundary Layer and Aerosol Layer Heights	Product	No
GLA09	Cloud Height for Multiple Layers	Product	No
GLA10	Aerosol Vertical Structure	Product	No
GLA11	Thin Cloud/Aerosol Optical Depth	Product	No
GLA12	Ice Sheet Products	Product	No
GLA13	Sea Ice Products	Product	No
GLA14	Land Products	Product	No
GLA15	Ocean Products	Product	No
ANC01	Meteorological Data	Dynamic Anc	Yes 00=header 01=precip water 02=height 03=rel humidity 04=temperature
ANC03	Laser Tracking Data	Dynamic Anc	No
ANC04	IERS Rotation	Dynamic Anc	No

**Table A-3 GLAS File Types (Continued)**

ANC05	Magnetic and Solar Flux	Dynamic Anc	No
ANC06	GLAS Metadata and Log	Dynamic Anc	No
ANC07	GLAS Coefficients and Constants	Static Anc	Yes 00=errors 01=global 02=atmosphere 03=elevation 04=waveform 05=L1A 06=utility
ANC08	Precision Orbit Data	Dynamic Anc	No
ANC09	Precision Attitude Data	Dynamic Anc	No
ANC10	GPS Tracking	Dynamic Anc	No
ANC11	Instrument Trend	Dynamic Anc	No
ANC12	Digital Elevation Model	Static Anc	Yes 00=DEM 01=Mask
ANC13	Geoid	Static Anc	No
ANC16	Load Tide Model	Static Anc	No
ANC17	Ocean Tide Model	Static Anc	No
ANC18	Standard Atmosphere	Static Anc	No
ANC20	Predicted Orbit	Dynamic Anc	No
ANC21	Science Trend Data	Dynamic Anc	No
AN 22	Reference orbit	Dynamic Anc	No
ANC23	Reference ascending node	Dynamic Anc	No
ANC24	ITRF Rotation Matrix	Dynamic Anc	No
ANC25	GPS-UTC time	Dynamic Anc	No
ANC27	Regional masks	Static Anc	No
ANC28	Rev node table	Dynamic Anc	No
ANC29	Index	Dynamic Anc	No
ANC30	Global aerosol categorization map	Static Anc	No
ANC31	Aerosol tropospheric classification map)	Static Anc	No
ANC32	GPS time correction	Dynamic Anc	No
ANC33	MET Counter to UTC conversion	Dynamic Anc	No
ANC34	BCTCW counter to UTC conversion	Dynamic Anc	No

**Table A-3 GLAS File Types (Continued)**

ANC35	Ozone	Static Anc	No
ANC36	Atmosphere Utility	Dynamic Anc	No
ANC37	Spacecraft CG	Dynamic Anc	No
ANC38	Multiple-scattering table	Dynamic Anc	No
ANC39	GPS Data	Dynamic Anc	No
ANC40	Raw Meteorological File	Dynamic Anc	No
ANC41	JPL Planetary Ephemeris	Dynamic Anc	No
ANC42	Reference Orbit Table	Dynamic Anc	No
ANC43	Track File	Dynamic Anc	No

## A.4 GLAS File Associations

Table A-4 lists each GLAS file and its associated source or PGE. Those inputs in *italics* are for special processing scenarios. Note that GLAS\_Reader, though not listed as a destination, can read most of these files.

**Table A-4 GSAS File Associations**

File Type	Short Description	Source (output from)	Destination (input to)
GLA00	GLAS Instrument Packet File (APIDs)	EDOS	GLAS_L0proc, GLAS_L1A
GLA01	Altimetry Data	GLAS_L1A	GLAS_Alt, Archive
GLA02	Atmosphere Data	GLAS_L1A	GLAS_AtM, Archive
GLA03	Engineering Data	GLAS_L1A	Archive
GLA04	SRS and GPS Data	GLAS_L1A	GLAS_L1A, UTexas
GLA05	Waveform-based Range Corrections	GLAS_Alt	GLAS_Alt, Archive
GLA06	Elevation	GLAS_Alt	GLAS_Alt, Archive
GLA07	Backscatter	GLAS_AtM	GLAS_AtM, Archive
GLA08	Boundary Layer and Elevated Aerosol Layer Heights	GLAS_AtM	Archive
GLA09	Cloud Height for Multiple Layers	GLAS_AtM	Archive'

**Table A-4 GSAS File Associations (Continued)**

GLA10	Aerosol Vertical Structure	GLAS_Atm	Archive
GLA11	Thin Cloud/Aerosol Optical Depth	GLAS_Atm	Archive
GLA12	Ice Sheet Products	GLAS_Alt	Archive'
GLA13	Sea Ice Products	GLAS_Alt	Archive
GLA14	Land Products	GLAS_Alt	Archive'
GLA15	Ocean Products	GLAS_Alt	Archive
ANC01	Meteorological Data	met_util	GLAS_Alt GLAS_Atm
ANC06	GLAS Metadata and Log	All core PGEs	Archive
ANC07	GLAS Coefficients and Constants	Science Team	All PGEs
ANC08	Precision Orbit Data	UTexas	GLAS_Alt GLAS_Atm
ANC09	Precision Attitude Data	UTexas	GLAS_Alt GLAS_Atm
ANC12	Digital Elevation Model	Science Team	GLAS_Alt GLAS_Atm
ANC13	Geoid	Science Team	GLAS_Alt GLAS_Atm
ANC16	Load Tide Model	Science Team	GLAS_Alt
ANC17	Ocean Tide Model	Science Team	GLAS_Alt
ANC18	Standard Atmosphere	Science Team	GLAS_Atm
ANC20	Predicted Orbit	UTexas	createGran, GLAS_L1A, GLAS_Alt, GLAS_Atm
ANC24	ITRF Rotation Matrix	UTexas	GLAS_L1A, GLAS_Alt, GLAS_Atm
ANC25	GPS-UTC time	UTexas	GLAS_L1A
ANC27	Regional masks	Science Team	GLAS_Atm
ANC29	Index files	GLAS_L0proc	GLAS_L1A
ANC30	Global aerosol categorization map	Science Team	GLAS_Atm
ANC31	Aerosol tropospheric classification map)	Science Team	GLAS_Atm
ANC32	GPS time correction	GLAS_L0proc	GLAS_L1A
ANC33	MET Counter to UTC conversion	Instrument Team	GLAS_L0proc

**Table A-4 GSAS File Associations (Continued)**

ANC35	Ozone file	Science Team	Atm_anc
ANC36	Atmosphere Utility	Atm_anc	GLAS_AtM
ANC40	Raw meteorological file.	GSFC DAAC	met_util



## Appendix B

# ANC07 Format, Files and Contents

### B.1 ANC07 Format

ANC07 files are in standard GSAS “keyword=value” format. ANC07 files contain sections for errors messages, status messages, global constants, and subsystem-specific constants. Sections may be combined into a single file or separated into multiple files. Not all sections need be present. The sections are delimited as follows:

```
BEG_OF_STATUS=
...Status section contents...
END_OF_STATUS=

BEG_OF_ERROR=
...Error section contents...
END_OF_ERROR

BEG_OF_GLOBALS=
...Global constants section contents...
END_OF_GLOBALS

BEG_OF_ATM=
...Atmosphere constants section contents...
END_OF_ATM

BEG_OF_ELEV=
...Elevation constants section contents...
END_OF_ELEV

BEG_OF_L1A=
...L1A constants section contents...
END_OF_L1A

BEG_OF_UTIL=
...Utility constants section contents...
END_OF_UTIL
```

## B.2 ANC07 Files

In production, ANC07 is defined as a multi-granule file with a single granule representing a different section (for the most part). Table B-1 lists the granule names and contents. See Appendix A for more information regarding file naming conventions.

**Table B-1 ANC07 Granule Names and Contents**

Naming Convention	Contents
anc07_mmm_nn_00.dat	Error and Status sections
anc07_mmm_nn_01.dat	Global constants
anc07_mmm_nn_02.dat	Atmosphere constants
anc07_mmm_nn_03.dat	Elevation constants
anc07_mmm_nn_04.dat	Waveform constants
anc07_mmm_nn_05.dat	L1A constants
anc07_mmm_nn_06.dat	Utility constants

## B.3 ANC07 Contents

Global constants and those used by the L1A, Atmosphere, Elevation, and Waveforms are listed in this section. Error and Status messages are listed in Appendix C. Values listed here are current as of V2.0

### B.3.1 Global Constants

```
GLOB_VERS = ANC07 Globals v2.0 October 2001
#
# Mean Ellipsiod Radius
#
ELLIPAE = 6378136.49d0
#
# Ellipsiod Flattening
#
ELLIPF = 298.25645d0
#
# delta lat for DEM grid
#
DEMdLat = 0.0083333333333d0
#
# delta lon for DEM grid
#
DEMdLon = 0.0083333333333d0
#
# Start latitude on the DEM grid
#
DEMLAT_BEG = 90.0041666666667d0
#
# Start longitude on the DEM grid
#
DEMLON_BEG = -0.0041666666667d0
```

---

```

#
# The offset from the GPS reference time (00:00 Jan 1, 1980)
# to the UTC reference time (12:00 Jan 1, 2000)
#
GPSToUTCoffset = -2001.10980499199991
#
# Max PAD offset allowed (max off-nadir pointing angle)
#
MAXPADOFF = 0.5d0
#
# 1064 energy Calibration coefficient for Received WFs
#
gd_calibcoefrec = 0.002351d0
#
# 1064 energy Calibration coefficient for transmitted WFs
#
gd_calibcoeftr = 0.00018d0
#

```

### B.3.2 L1A Constants

```

L1A_VERS = ANC07 L1a V2.0 October 2001
#
# 1064 transmit energy default to use when computed energy is unavailable
#
GD_IR_TXNRG = 70.0D-3
#
# 532 / 1064 Lower energy threshold (Joules)
#
GD_NRG_THR1 = 1.0D-3
#
# 532 / 1064 Upper energy threshold (Joules)
#
GD_NRG_THR2 = 100.0D-3
#
# 532 energy mJ per count
#
GD_G_NRG_MJ_CT = 0.25d0
#
# Default value for range from satellite to 532 profile (m)
#
GD_RNG2PCPROF = 5.6d5
#
# Lower threshold for range from satellite to 532 profile (m)
#
GD_RNG2PCPROF1 = 5.0d5
#
# Upper threshold for range from satellite to 532 profile (m)
#
GD_RNG2PCPROF2 = 6.2d5
#
# ground ret threshold
#
GI_GRND_THRESH = 20
#
# cloud ret threshold
#
GI_CLD_THRESH = 5
#

```

```

#lidar bin sat val
#
GI_LID_SATVAL = 80
#
# quality flag(1hz) for integrated return
#
GI_INT_QFVAL= 1500,1200,800,200
#
# 532 laser energy max value
#
GI_G_NRGMAX = 36
#
# 1064 laser energy max value
#
GI_IR_NRGMAX = 73
#
#background index used for 532/1064
#
GI_G_USEDDBG = 3
#
# background index used for 532/1064
#
GI_IR_USEDDBG = 3
#
# deadtime correction lookup table - allows for up to 255 entries in the table
#   note : each keyword value can not exceed 255 characters therefore value
#   distributed between several keywords.
#
D_DTC_TBL1=1.00000D0, 1.00000D0, 1.00000D0, 1.00000D0, 1.00000D0, 1.00000D0, 1.000
00D0, 1.00000D0, 1.00000D0, 1.10000D0, 1.09091D0, 1.08333D0, 1.07692D0, 1.07143D0,
1.06667D0, 1.12500D0, 1.11765D0, 1.11111D0, 1.10526D0, 1.15000D0
D_DTC_TBL2=1.14286D0, 1.13636D0, 1.17391D0, 1.16667D0, 1.16000D0, 1.19231D0, 1.185
19D0, 1.21429D0, 1.20690D0, 1.23333D0, 1.22581D0, 1.25000D0, 1.24242D0, 1.26471D0,
1.28571D0, 1.27778D0, 1.29730D0, 1.31579D0, 1.30769D0, 1.32500D0
D_DTC_TBL3=1.34146D0, 1.35714D0, 1.37209D0, 1.38636D0, 1.40000D0, 1.41304D0, 1.425
53D0, 1.43750D0, 1.44898D0, 1.46000D0, 1.47059D0, 1.50000D0, 1.50943D0, 1.51852D0,
1.54545D0, 1.55357D0, 1.57895D0, 1.58621D0, 1.61017D0, 1.61667D0
D_DTC_TBL4=1.63934D0, 1.66129D0, 1.66667D0, 1.68750D0, 1.70769D0, 1.72727D0, 1.746
27D0, 1.76471D0, 1.78261D0, 1.80000D0, 1.83099D0, 1.86111D0, 1.87671D0, 1.90541D0,
1.93333D0, 1.96053D0, 2.00000D0, 2.02564D0, 2.06329D0, 2.08750D0
D_DTC_TBL5=2.12346D0, 2.17073D0, 2.20482D0, 2.23810D0, 2.28235D0, 2.32558D0, 2.367
82D0, 2.40909D0, 2.46067D0, 2.50000D0, 2.56044D0, 2.60870D0, 2.66667D0, 2.71277D0,
2.76842D0, 2.84375D0, 2.90722D0, 2.97959D0, 3.05051D0, 3.12000D0
D_DTC_TBL6=3.19802D0, 3.28431D0, 3.36893D0, 3.45192D0, 3.49524D0, 3.51887D0, 3.551
40D0, 3.58333D0, 3.61468D0, 3.64545D0, 3.67568D0, 3.71429D0, 3.74336D0, 3.78070D0,
3.81739D0, 3.84483D0, 3.87179D0, 3.89830D0, 3.92437D0, 3.94167D0
D_DTC_TBL7=3.96694D0, 4.00000D0, 4.02439D0, 4.05645D0, 4.08000D0, 4.11111D0, 4.141
73D0, 4.17188D0, 4.20155D0, 4.23846D0, 4.27481D0, 4.31061D0, 4.34586D0, 4.38806D0,
4.42963D0, 4.47059D0, 4.51095D0, 4.55797D0, 4.60432D0, 4.65714D0
D_DTC_TBL8=4.70922D0, 4.76056D0, 4.81818D0, 4.87500D0, 4.94483D0, 5.01370D0, 5.081
63D0, 5.15541D0, 5.24161D0, 5.34667D0, 5.44371D0, 5.54605D0, 5.65359D0, 5.76623D0,
5.89032D0, 6.01923D0, 6.15924D0, 6.32911D0, 6.49686D0, 6.68125D0
D_DTC_TBL9=6.93789D0, 7.19753D0, 7.53374D0, 7.92683D0, 8.61818D0, 8.93976D0, 9.089
82D0, 9.25595D0, 9.53255D0, 9.82353D0, 10.1462D0, 10.6105D0, 11.2601D0, 11.2586D0,
11.2571D0, 11.2557D0, 11.2599D0, 11.2584D0, 11.2570D0, 11.2611D0
D_DTC_TBL10=11.2597D0, 11.2582D0, 11.2568D0, 11.2609D0, 11.2595D0, 11.2581D0, 11.2
567D0, 11.2606D0, 11.2593D0, 11.2579D0, 11.2565D0, 11.2604D0, 11.2591D0, 11.2577D0
, 11.2564D0, 11.2602D0, 11.2589D0, 11.2576D0, 11.2563D0, 11.2600D0
D_DTC_TBL11=0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0,
```

```

0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.
0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0
D_DTC_TBL12=0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0,
0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.
0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0
D_DTC_TBL13=0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0,
0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.0000D0, 0.
0000D0
#
# Maximum LIDAR value for 532 nm
#
GD_G_MAXLID = 100.0d0
#
# digital to analog convrsn lookup table
#
D_D2A_TBL1=0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 2
0
D_D2A_TBL2=21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38,
39, 40, 41
D_D2A_TBL3=42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59,
60, 61, 62
D_D2A_TBL4=63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80,
81, 82, 83
D_D2A_TBL5=84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 10
1, 102, 103
D_D2A_TBL6=104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 1
18, 119, 120
D_D2A_TBL7=121, 122, 123, 124, 125, 126, 127, 128, 129, 130 ,131, 132, 133, 134, 1
35, 136, 137
D_D2A_TBL8=138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 1
52, 153, 154
D_D2A_TBL9=155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 1
69, 170, 171
D_D2A_TBL10=172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185,
186, 187, 188
D_D2A_TBL11=189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202,
203, 204, 205
D_D2A_TBL12=206, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218,
219, 220, 221
D_D2A_TBL13=222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235,
236, 237, 238
D_D2A_TBL14=239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252,
253, 254, 255
#
# Maximum LIDAR value for 1064 nm
#
GD_IR_MAXLID = 255.0d0
#
# Number of coeffs in polynomial calculations for Apid21 (starting index is 16)
#
I_POLDEG21 = 2, 2, 2, 2, 2, 2, 2, 2, 2, 2, 2, 2, 0, 0, 2, 2, 2, 2, 2, 2, 2, 2, 2,
2, 2, 2, 2, 2, 2, 2, 2, 2, 2, 0, 2, 2
#
# Number of coefficients in polynomial calculations for each lookup columns
#
I_POLDEG = 2, 2, 2, 2, 2, 2, 2, 2, 2, 2, 2
#
# offsets in polynomial calculations for the lookup table
#

```

```
D_OFFSET = -29.4d0, 0.0d0, 0.0d0, -22.2d0, -16.6d0, 0.0d0, 0.0d0, 27.0d0, -8.0d0,
0.0d0, -273.15d0, 0.0d0
#
# First degree coefficients in polynomial calculations for the lookup table
#
D_XA = 0.361d0, 0.391d0, 2.686d0, 0.34d0, 0.3133d0, 0.2949d0, 0.1172d0, 0.0859d0,
0.1172d0, 0.0039d0, 0.2219d0, 0.0049d0
#
# Laser Oscillator Temperature(Celsius) (use lookup table column 1)
#
I_LSRROSCT_N = 1
#
# Laser Doubler Temperature(Celsius)
#
I_LSRDBLRT_N = 1
#
# Laser Power Supply Temperature (Celsius)
#
I_LSRPST_N = 1
#
# Laser Preamp Temperature(Celsius)
#
I_LSRPAT_N = 1
#
# 532 Energy (Percent) (use lookup table column 2)
#
I_532NRG_N = 2
#
# Dual Pin -A (Percent)
#
I_DPIN_A_N = 2
#
# Dual Pin -B (Percent)
#
I_DPIN_B_N = 2
#
# Primary Altimeter Detector 550v(Volts) (use lookup table column 3)
#
I_PAD550V_N = 3
#
# Secondary Altimeter Detector 550v (Volts)
#
I_SAD550V_N = 3
#
# SPCM Detector #1 550V (Volts)
#
I_SPCMD1_N = 3
#
# SPCM Detector #2 550V (Volts)
#
I_SPCMD2_N = 3
#
# SPCM Detector #3 550V (Volts)
#
I_SPCMD3_N = 3
#
# SPCM Detector #4 550V (Volts)
#
I_SPCMD4_N = 3
```

```
#  
# SPCM Detector #5 550V (Volts)  
#  
I_SPCMD5_N = 3  
#  
# SPCM Detector #6 550V (Volts)  
#  
I_SPCMD6_N = 3  
#  
# SPCM Detector #7 550V (Volts)  
#  
I_SPCMD7_N = 3  
#  
# SPCM Detector #8 550V (Volts)  
#  
I_SPCMD8_N = 3  
#  
# 28V Bus A Instrument (Volts)  
#  
D_BA28INST_SF = 0.0d0, 9.22d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# Hybrid Supplies (Amps)  
#  
D_HYBSUPP_SF = 0.0d0, 1.9d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# HVPS Detector Supplies(Amps)  
#  
D_HVPSDET_SF = 0.0d0, 0.405d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# Operational Heaters (Amps)  
#  
D_OPHTRS_SF = 0.0d0, 0.395d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# Mechanical System (Amps)  
#  
D_MECHSYS_SF = 0.0d0, 0.395d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# 28V Bus B Laser 1 (Volts)  
#  
D_BB28L1V_SF = 0.0d0, 9.35d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# 28V Bus B Laser 1 (Amps)  
#  
D_BB28L1A_SF = 0.0d0, 1.551d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# 28V Bus C Laser 2 (Volts)  
#  
D_BC28L2V_SF = 0.0d0, 9.35d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# 28V Bus C Laser 2 (Amps)  
#  
D_BC28L2A_SF = 0.0d0, 1.511d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# 28V Bus D Laser 3 (Volts)  
#  
D_BD28L3V_SF = 0.0d0, 9.35d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# 28V Bus D Laser 3 (Amps)  
#
```

```
D_BD28L3A_SF = 0.0d0, 1.555d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0
#
# 5V Hybrid #1 (Volts)
#
D_5VHYB1V_SF = 0.0d0, 1.54d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0
#
# 5V Hybrid #1 (Amps)
#
D_5VHYB1A_SF = 0.0d0, 1.91d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0
#
# 12V Hybrid #2 (Volts)
#
D_12VHYB2V_SF = 0.0d0, 3.52d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0
#
# 12V Hybrid #2 (Amps)
#
D_12VHYB2A_SF = 0.0d0, 0.66d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0
#
# m12V Hybrid #3 (Volts)
#
D_M12VHYB3V_SF = 0.0d0, -3.52d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0
#
# m12V Hybrid #3 (Amps)
#
D_M12VHYB3A_SF = 0.0d0, 0.63d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0
#
# 5V Hybrid #4 (Volts)
#
D_5VHYB4V_SF = 0.0d0, 1.532d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0
#
# 5V Hybrid #4 (Amps)
#
D_5VHYB4A_SF = 0.0d0, 1.91d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0
#
# m5V Hybrid #5 (Volts)
#
D_M5VHYB5V_SF = 0.0d0, -1.532d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0
#
# m5V Hybrid #5 (Amps)
#
D_M5VHYB5A_SF = 0.0d0, 1.91d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0
#
# m5V Hybrid #6 (Volts)
#
D_M5VHYB6V_SF = 0.0d0, -1.532d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0
#
# m5V Hybrid #6 (Amps)
#
D_M5VHYB6A_SF = 0.0d0, 1.95d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0
#
# 15V Boost Post Reg (Volts)
#
D_15VBPR_SF = 0.0d0, 4.08d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0
#
# m15V Boost Post Reg (Volts)
#
D_M15VBPR_SF = 0.0d0, -4.09d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0
#
# 12V Prim Osc Thermal Control (Amps)
```

```
#  
D_12VPOTC_SF = 0.0d0, 0.04d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# 12V Sec Osc Thermal Control (Amps)  
#  
D_12VSOTC_SF = 0.0d0, 0.04d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# m2V Discrete Voltage (Volts)  
#  
D_M2VDV_SF = 0.0d0, 2.0d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# Hybrid Heatsink (deg C)  
#  
D_HBHS_SF = 0.0d0, 30.2d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# FET Switch Bank Heatsink (deg C)  
#  
D_FETSBHS_SF = 0.0d0, 30.2d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# HVPS 0V Reference (Volts)  
#  
D_HVPS0VR_SF = 0.0d0, 0.0195d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# HVPS 5V Reference (Volts)  
#  
D_HVPS5VR_SF = 0.0d0, 0.0391d0, 0.0d0, 0.0d0, 0.0d0, 0.0d0  
#  
# "Housekeeping Board Temperature, Ch 0 (use lookup table column 4)"  
#  
I_HKBDC0_N = 4  
#  
# "Instrument Processor Sys Bord Temp, Ch1"  
#  
I_INSPSBDC1_N = 4  
#  
# "Photon Counter Board Temp, Ch2"  
#  
I_PCBDC2_N = 4  
#  
# "Cloud Digitizer/Frequency & Time Board Temp, Ch3"  
#  
I_CDFTBDC3_N = 4  
#  
# "Altimeter Digitizer 1 Board Temp 1, Ch4"  
#  
I_AD1BDC4_N = 4  
#  
# "Altimeter Digitizer 1 Board Temp 1, Ch5"  
#  
I_AD1BDC5_N = 4  
#  
# "Altimeter Digitizer 2 Board Temp 1, Ch6"  
#  
I_AD2BDC6_N = 4  
#  
# "Altimeter Digitizer 2 Board Temp 2, Ch7"  
#  
I_AD2BDC7_N = 4  
#
```

```
# "Data Collection & Handling Board Temp, Ch8"
#
I_DCHBDC8_N = 4
#
# "Laser Monitor Board Temp, Ch9"
#
I_LMBDC9_N = 4
#
# "Temperature Controller Monitor Board Temp, Ch10"
#
I_TCMBDC10_N = 4
#
# "Oven-crystal-controlled Oscillator 1 Board Temp, Ch11"
#
I_OXCO1BC11_N = 4
#
# "Oven-crystal-controlled Oscillator 2 Board Temp, Ch12"
#
I_OXCO2BC12_N = 4
#
# "Oscillator Board Temp, Ch13"
#
I_OSCBDC13_N = 4
#
# "Optical Test Source Board Temp, Ch14"
#
I_OTSBDC14_N = 4
#
# "Laser Profile Array Temp 1, Ch15"
#
I_LPAC15_N = 4
#
# "Laser Profile Array Temp 2, Ch16"
#
I_LPAC16_N = 4
#
# "Altimeter Digitizer 1 Board Temp 3, Ch17"
#
I_AD1BDC17_N = 4
#
# "Altimeter Digitizer 2 Board Temp 3, Ch18"
#
I_AD2BDC18_N = 4
#
# "Altimeter Digitizer 1 Board Temp 4, Ch19"
#
I_AD1BDC19_N = 4
#
# "Altimeter Digitizer 2 Board Temp 4, Ch20"
#
I_AD2BDC20_N = 4
#
# "Altimeter Digitizer 1 Board Temp 5, Ch21"
#
I_AD1BDC21_N = 4
#
# "Altimeter Digitizer 2 Board Temp 5, Ch22"
#
I_AD2BDC22_N = 4
```

```
#  
# "PRT Gyro Temperature, Ch24 (use lookup table column 5)"  
#  
I_PRTGYRO_N = 5  
#  
# "PRT, Star Camera Temperature, Ch25"  
#  
I_PRTSTCM_N = 5  
#  
# "PRT, Stellar Reference System Temperature, Ch26"  
#  
I_PRTSRSC26_N = 5  
#  
# "PRT, Lidar Detector Pkg Temperature, Ch27"  
#  
I_PRTLIDT_N = 5  
#  
# "PRT, Altimeter Detector 1 Temperature, Ch28"  
#  
I_PRTAD1_N = 5  
#  
# "PRT, Altimeter Detector 2 Temperature, Ch29"  
#  
I_PRTAD2_N = 5  
#  
# "PRT, Spacecraft Interface Temperature, Ch30"  
#  
I_PRTSCINF_N = 5  
#  
# "PRT, Telescope Mount Temperature, Ch31"  
#  
I_PRTTSMT_N = 5  
#  
# "PRT, Telescope Baffle Temperature, Ch32"  
#  
I_PRTTSBF_N = 5  
#  
# "PRT, Temperature Region 10, Ch33, Spare"  
#  
I_PRTSR10_N = 5  
#  
# "PRT, Temperature Region 11, Ch34, Spare"  
#  
I_PRTSR11_N = 5  
#  
# "PRT, Cal Low, Ch35"  
#  
I_PRTCALL_N = 5  
#  
# "PRT, Cal High, Ch36"  
#  
I_PRTCALH_N = 5  
#  
# Pin Diode Bias Voltage (use lookup table column 6)  
#  
I_PDBIASV_N = 6  
#  
# Telescope Region 0 primary Mirror (Celsius)(use lookup table column 7)  
#
```

```
I_TSROPMIR_N = 7
#
# Telescope Region 1 Secondary Mirror (Celsius)
#
I_TSRS1SMIR_N = 7
#
# Telescope Region 2 Tower (Celsius)
#
I_TSRS2TWR_N = 7
#
# "Etalon Temperature, Ch37d (Celsius) (use lookup table column 8)"
#
I_ETC37I_N = 8
#
# "Loop Heat Pipe 1 Temperature, Ch37e (Celsius) (use lookup table column 9)"
#
I_LHP1C37E_N = 9
#
# "Loop Heat Pipe 2 Temperature, Ch37f (Celsius)"
#
I_LHP2C37F_N = 9
#
# Telescope Primary Mirror Heater Drive (Amps) (use lookup table column 10)
#
I_TSPMIRHD_N = 10
#
# Telescope Secondary Mirror Heater Drive (Amps)
#
I_TSSMIRHD_N = 10
#
# Telescope Tower Heater drive current (Amps)
#
I_TSTWRHD_N = 10
#
# "Etalon Heater Current, Ch37j (Amps)"
#
I_ETHCC37J_N = 10
#
# HOP and VC Thermistors - 1 (Celsius) (use lookup table column 11)
#
I_HOPVC1_N = 11
#
# HOP and VC Thermistors - 2 (Celsius)
#
I_HOPVC2_N = 11
#
# HOP and VC Thermistors - 3 (Celsius)
#
I_HOPVC3_N = 11
#
# HOP and VC Thermistors - 7 (Celsius)
#
I_HOPVC7_N = 11
#
# HOP and VC Thermistors - 8 (Celsius)
#
I_HOPVC8_N = 11
#
# HOP 1 Actuator Current - Heater 1 (Amps) (use lookup table column 12)
```

```
#  
I_HOP1ACH1_N = 12  
#  
# HOP 2 Actuator Current - Heater 1 (Amps)  
#  
I_HOP2ACH1_N = 12  
#  
# HOP 3 Actuator Current - Heater 1 (Amps)  
#  
I_HOP3ACH1_N = 12  
#  
# HOP 4 Actuator Current - Heater 2 (Amps)  
#  
I_HOP4ACH2_N = 12  
#  
# HOP 5 Actuator Current - Heater 2 (Amps)  
#  
I_HOP5ACH2_N = 12  
#  
# HOP 6 Actuator Current - Heater 2 (Amps)  
#  
I_HOP6ACH2_N = 12  
#  
# Number of bad lidar values within profile that will generate error  
#  
gi_bad_lid_num = 100  
#  
# Number of bins to average over for background(4)  
#  
gi_bg_bin = 8  
#  
# 1064 amplifier gain  
#  
gd_ir_gain = 18.0d0  
#  
# 1064 volts per count conversion (Volts/cnt)  
#  
gd_volts_cnt = 0.01560d0  
#  
# 1064 voltage offset  
#  
gd_volt_offset = 0.90d0  
#  
# 1064 detector responsivity factor (Volts/Watt)  
#  
gd_det_res_ftr = 4.4d7  
#  
# 1064 Basic time interval - nominally 1 ns  
#  
d_dthires = 1.0d0  
#  
# Threshold for computing the received and transmit energy from waveform peak  
#  
d_thrcnt = 0.03d0  
#
```

### B.3.3 Elevation Constants

ELEV\_VERS = ANC07 Elev Globals v1.0 Fri Mar 10 11:23:21 EST 2000

```

#
# gravity effect in milligals
#
gravEffTide = 9.8d0
#
# Constants used in calc of earth tide
#
earthTdh2 = 0.609d0
#
# Constants used in calc of earth tide
#
earthTdh3 = 0.291d0
#
# Receiver Impulse Width (in ns)
#
REC_IMPULSE = 4.0d-09
#
# Beam Divergence Angle
#
DIVANGLE = 0.00011d0
#
# QAP Track length (in secs)
#
QAPTRKLEN = 16.0d0
#

```

### B.3.4 Waveform Constants

```

#
# Waveform Constants Mod Entries
#
# Refer to Waveform and Elevation ATBD for further description of each
# parameter defined here a 1 delimiting the name means that parameter is
# used for alternate parameterization and a 2 means it is used for standard
# parameterization
#
WF_VERS = ANC07 wf V2.0 October 2001
#
# Don't process wf
# if the fraction of gates saturated within the signal region is greater
# than or equal to d_psat_stopn where n=1, for alternate, n=2 for standard
#
D_PSAT_STOP1 = 0.9d0
#
D_PSAT_STOP2 = 0.8d0
#
# Use special "saturation" processing for waveform algorithm if
# the fraction of the waveform saturated within the signal region is
# greater than or equal to d_psat_specn and less than < d_psat_stopn
#
D_PSAT_SPEC1 = 0.2d0
#
D_PSAT_SPEC2 = 0.25d0
#
# i_offsetbn is the offset subtracted from the signal begin gate calculated
# using a threshold algorithm to reset the index of signal begin to use more
# of the waveform in the fitting algortihms.
#
# "If i_slctRegn1 is set, indexSignalBegin1 = indexSignalBegin1 - i_offsetb1"

```

```
#  
I_OFFSETB1 = 12  
#  
# "If i_slctRegn2 is set, indexSignalBegin2 = indexSignalBegin2 - i_offsetb2"  
#  
I_OFFSETB2 = 10  
#  
# i_offseten is the offset added to the signal ending gate calculated using a  
# threshold algorithm to reset the index of the signal ending to use more  
# of the waveform in the fitting algorithm n=1, for alternate; n=2 for  
# standard  
#  
# "If i_slctRegn1 is set, indexSignalEnd1 = indexSignalEnd1 + i_offsetel"  
#  
I_OFFSETE1 = 12  
#  
# "If i_slctRegn2 is set, indexSignalEnd2 = indexSignalEnd2 + i_offsete2"  
#  
I_OFFSETE2 = 10  
#  
# i_maxitern; Max number of iterations allowed during functional fit  
# if the fit does not converge at this number, a flag is set and the  
# set of fit parameters calculated from the last iteration is output on the  
# product- n=1 for alternate; n=2 for standard parameterization  
#  
I_MAXITER1 = 12  
#  
#  
I_MAXITER2 = 12  
#  
# i_maxfitn Max number of peaks to fit - n=1 alternate parameters; n=2  
# standard parameters  
#  
I_MAXFIT1 = 6  
#  
#  
I_MAXFIT2 = 6  
#  
# d_npeak_minn used to set the Minimum peak amplitude accepted for calculating  
# initial parameter estimates for the return waveform.  
# peaks with less power than d_npeak_minn*maxamp are deleted  
# n=1 for alternate; n=2 for standard  
#  
D_NPEAK_MIN1 = 3.5d0  
#  
#  
#  
D_NPEAK_MIN2 = 3.5d0  
#  
# d_minamppcntn is used to check validity of peaks of gaussians during the  
# least squares fitting procedure - any peaks less than  
# minimum peak amplitude = d_minamppcntn*(maxamp-noise)+noise  
# n=1 for alternate; n=2 for standard  
# note not really % but a fraction  
#  
D_MINAMPPCNT1 = 0.10d0  
#  
D_MINAMPPCNT2 = 0.12d0  
#
```

```

# Noise threshold = d_nsign * sDevNoise; this is used to calculate
# signal begin and end
#      n=1 for alternate; n=2 for standard
#
D_NSIG1 = 2.1d0
#
#
D_NSIG2 = 2.0d0
#
# d_intv_minn - Min interval between peaks allowed during fit and initial
# estimates; n=1 for alternate; n=2 for standard
#
D_INTV_MIN1 = 2.0d0
#
D_INTV_MIN2 = 2.0d0
#
# i_slctregnn "0==use all gates for parameterization and fitting
# , 1==use selected region based on thresholds and offsets defined above"
# n=1, alternate; n=2 for standard parameterization
#
I_SLCTREGN1 = 0
#
I_SLCTREGN2 = 0
#
# Min filter width used by W_Smooth1 to smooth waveform
#
D_FLTRWDMIN = 4.0d0
#
# Max filter width used by W_Smooth1
#
D_FLTRWDMAX = 128.0d0
#
# Time between gates for highest resolution telemetry
#
D_DTHIRES = 1.0d0
#
# d_cmbn set to 0 or 1 => weight peaks by area when combining"
# n=1, alternate; n=2 for standard parameterization
#
D_CMB1 = 0.0d0
#
# "(1,0) => use straight average when combining peaks"
#
D_CMB2 = 1.0d0
#
# d_sigmaminit is the minimum value of the Gaussian width (sigma) accepted
# for a solved for Gaussian, if calculated value is less than this
# then this peak is removed from solution and if this results in no
# peaks found then solution is considered invalid nofit flag is set
#
# this should be set based on knowledge of transmit pulse width
# note that setting this at 1.1 was the reason most ocean-type waveforms
# in simulated data were not fit
#
D_SIGMAMINIT = 1.1d0
#
# d_dnoisen, d_ampckn, d_dtmckn, and d_sgmckn are values used to check
# convergence of the noise, and gaussian (amplitude, centroid, and sigma)
# parameters calculated during the fit. If a value from iteration i when

```

```
# compared to interation i-1 for any of this values agrees to within this
# number * the previous value, then that parameter is said to converge;
# all parameters must converge for the fit to converge.
# n=1 for alternate parameterization; n=2 for standard
#
D_DNOISE1 = 0.02d0
D_DNOISE2 = 0.02d0
#
# d_dampckn - convergence criteria for amplitude of individual Gaussian
#
D_DAMPCK1 = 0.02d0
D_DAMPCK2 = 0.02d0
#
# d_dtmcn; convergence criteria for centroid location of individual Gaussian
#
D_DTMCK1 = 0.02d0
D_DTMCK2 = 0.02d0
#
# d_dsgmckn; convergence criteria for sigma of individual Gaussian
#
D_DSGMCK1 = 0.02d0
D_DSGMCK2 = 0.02d0
#
# i_miniter Min number of iterations for functional fit
#
I_MINITER = 3
#
# ingates2usen number of gates to use to calculate noise value of
# return waveform: must be greater than iminng2use
# n=1 for alternate parameterization; n=2 for standard
#
INGATES2USE1 = 20
#
INGATES2USE2 = 20
#
# Min number of gates to use to calculate noise
#
IMINNG2USE = 10
#
# i_nscln "0==use observed noise & sDevNoise, 1==calculate noise & sDevNoise"
#
I_NSCL1 = 0
I_NSCL2 = 0
#
# n=1 for alternate parameterization; n=2 for standard
#
# Min number of maxAmp in a row to count as saturated
#
I_MIN4SAT = 3
#
# d_thresh_lvln - sets retracker threshhold = d_thresh_lvln * maxSmoothAmp(WF)
# used for calculating signal begin and end
#
D_THRESH_LVL1 = 0.11d0
D_THRESH_LVL2 = 0.15d0
#
# d_v0nsn-a priori fit-matrix-sigma for noise parameter of fit = 1/SQRT(d_V0ns)
#
D_VONS1 = 5.0d0
D_VONS2 = 5.0d0
```

```

#
# d_v0ampn-a priori fit-matrix-sigma for Gaussian amplitude = 1/SQRT(d_V0amp)
#
D_V0AMP1 = 5.0d0
D_V0AMP2 = 5.0d0
#
# d_v0locn-a priori fit-matrix-sigma for Gaussian centroid location
#   = 1/SQRT(d_V0loc)
#
D_V0LOC1 = 5.0d0
D_V0LOC2 = 5.0d0
#
# d_v0sgmn-a priori fit-matrix-sigma for Gaussian sigma = 1/SQRT(d_V0sgm)
#
D_V0SGM1 = 5.0d0
D_V0SGM2 = 5.0d0
#
# Minimum noise allowed
#
D_MINNOISE = 0.5d0
#
#
#
# Area of telescope
#
D_AREATELE = 0.709d0
#
#
#
# Optics transmission
#
D_OPTTRANS = 0.555d0
#

```

### B.3.5 Atmosphere Constants

```

atm_VERS = ANC07 atm Globals v2.0 October 2001
#
# Aerosol scaling factor for 20 sec search
#
GD_AER_20S_FTR = 5.0d0
#
# Aerosol scaling factor for 4 sec search
#
GD_AER_4S_FTR = 0.4d0
#
# Aerosol threshold factors for new molecular threshold at 20 sec
#
GD_AER_FTR1 = 3.0d0
GD_AER_FTR2 = 1.2d0
GD_AER_FTR3 = 1.2d0
#
# Factor to multiply molecular difference for bot threshold for 20 s algm
#
GD_BMDIFF_FTR = 0.98d0
#
# Factor to multiply top threshold for bot threshold for 20 s algm
#

```

```
GD_BTHR_FTR = 0.96d0
#
# Calibration cloud factor for determining cloud threshold
#
GD_CAL_CLD_FTR = 5.0d0
#
# Percent of good records needed (in decimal form) for cal cof sums to be
# averaged and output to ancillary file
#
GD_CAL_PCT = 0.5d0
#
# Number of standard deviations to eliminate calibration coefficients
#
GD_CC_NUM_STD = 2.0d0
#
# Use previous granule data if last time is within this number secs of
# current granule time
#
GD_CC_PREV_SEC = 3600.0d0
#
# Ratio to eliminate calibration coefficients
#
GD_CC_RATIO = 0.50
#
# Cloud density threshold
#
GD_CLD_DENSE = 25.0d0
#
# Cloud separation height for using low and high consec values (m)
#
GD_CLD_SEP_HT = 5.0d3
#
# Cloud thickness threshold (m)
#
GD_CLD_THICK = 230.0d0
#
# Cloud threshold factor
#
GD_CLD THR_FTR = 4.0d0
#
# Critical ratio threshold for 20 s algm
#
GD_CRAT_THR20 = 1.5d0
#
# Critical ratio threshold for 4 s algm
#
GD_CRAT_THR4 = 1.6d0
#
# Upper limit for valid DEM (meters)
#
GD_DEM_HI = 10000.0d0
#
# Lower limit for valid DEM (meters)
#
GD_DEM_LO = -2000.0d0
#
# GLA02%d_DEMmin must be offset by this amount (m)
#
GD_DEM_OFFSET = 1000.0d0
```

```
#  
# Cloud/aerosol discrimination thresholds  
# from 21 km to ground by 1 km increments  
#  
GD_DISCRIM_THR = 6.0d-13, 6.0d-13, 6.0d-13, 6.0d-13, 6.0d-13, 6.0d-13, 6.  
0d-13, 6.0d-13, 6.0d-13, 6.0d-13, 7.0d-13, 8.0d-13, 1.0d-12, 1.5d-12, 4.0d-12, 6.  
0d-12, 6.0d-12, 6.0d-12, 6.0d-12  
#  
# Diurnal threshold factor  
#  
GD_DIURNAL_FTR = 0.5d0  
#  
# Lower threshold for 532 day/night flag  
#  
GD_DNF_THR1 = 1.0d5  
#  
# Upper threshold for 532 day/night flag  
#  
GD_DNF_THR2 = 1.0d6  
#  
# 532 background threshold for calibration coefficient elimination  
#  
GD_G_BKGD THR = 6.0d0  
#  
# Ground detection factor  
#  
GD_GDET_FTR = 5.0d0  
#  
# Lab measured 532 calibration coefficient  
#  
GD_G_LMCALCOF = 3.0d13  
#  
# Half width of calibration band around high calibration height (km)  
#  
GD_HI_HALFWID = 1.0d0  
#  
# Lab measured 1064 calibration coefficient  
#  
GD_IR_LMCALCOF = 6.0d2  
#  
# Half width of calibration band around low calibration height (km)  
#  
GD_LO_HALFWID = 1.0d0  
#  
# Factor to multiply average molecular bscs for top threshold for 4 s algm  
#  
GD_MAER_FTR = 0.8d0  
#  
# Factor to multiply average molecular bscs for top threshold for 20 s algm  
#  
GD_MAVG_FTR = 10.0d0  
#  
# Cloud integrated signal threshold  
#  
GD_MIN_CLD_SIG = 5.0d-5  
#  
# PBL threshold factor  
#  
GD_PBL_THR_FTR = 0.60d0
```

```
#  
# Lower threshold for ratio of GLA07 integrated returns  
#  
GD_RAT_THR1 = 1.0d0  
#  
# Upper threshold for ratio of GLA07 integrated returns  
#  
GD_RAT_THR2 = 1.0d1  
#  
# Threshold for range from satellite to geoid (m)  
#  
GD RNG THR = 5.0d5  
#  
# Segment heights for cloud detection (tops of bins)  
#  
GD SEG HTS = 20.5d0, 19.0d0, 17.0d0, 15.0d0, 13.d0, 11.0d0, 10.0d0, 9.0d0, 8.0d0,  
7.0d0, 6.0d0, 5.0d0, 4.0d0 3.0d0, 2.0d0, 1.0d0, 0.0d0, -2.0d0, -2.0d0, -2.0d0  
#  
# Factor to multiply molecular difference for top threshold for 20 s algm  
#  
GD_TMDIFF_FTR = 0.98d0  
#  
# Minimum number of valid 5 Hz profiles in 1 sec buffer  
#  
GI_1SEC_MIN = 2  
#  
# Min number of valid 5 Hz profiles in 20 sec buffer  
#  
GI_20SEC_MIN = 50  
#  
# Minimum number of valid 1 sec profiles in 20 sec buffer  
#  
GI_20SEC_MIN1 = 10  
#  
# Min number of valid 5 Hz profiles in 4 sec buffer  
#  
GI_4SEC_MIN = 8  
#  
# Minimum number of valid 1 sec profiles in 4 sec buffer  
#  
GI_4SEC_MIN1 = 2  
#  
# Number of bins to constrain the search for the PBL layer at 4 sec  
#  
GI_4S_LIM_BIN = 5  
#  
# Number of bins to constrain the search for the PBL layer at 5 Hz  
#  
GI_5HZ_LIM_BIN = 4  
#  
# Height (m) above PBL or surface for aerosol search limit  
#  
GI_AER_BOT_HT = 250  
#  
# Number of bins above optically thick cloud top to end aerosol search at 4 sec  
#  
GI_AER_CLD_OFF = 5  
#  
# Number of bins to constrain the search for aerosol top at 4 sec
```

```
#  
GI_AER_LIM_BIN = 13  
#  
# Number of bins for new molecular threshold in 20 sec aerosol detection  
#  
GI_AER_NPTS = 450  
#  
# Minimum number of bins in an aerosol layer in 20 sec algm  
#  
GI_AER_NUM_BIN = 5  
#  
# Flag indicating threshold algorithm to use in 20 sec aerosol detection  
# 0=old threshold, 1=new molecular threshold  
#  
GI_AER_THR_F = 1  
#  
# Lower limit for std for new molecular threshold in 20 sec aerosol detection  
#  
GI_AER_THR_LL = 40  
#  
# Upper limit for std for new molecular threshold in 20 sec aerosol detection  
#  
GI_AER_THR_UL = 160  
#  
# Start Height (m) for 20 sec aerosol search limit  
#  
GI_AER_TOP_HT = 36000  
#  
# Limit for number of bad locations allowed  
#  
GI_BAD_LOC_LIMIT = 30  
#  
# Flag to indicate if backscatter quality flags are used to eliminate data  
# Not used = 0, used = 1  
#  
GI_BSCS_QF_CHK = 0  
#  
# Flag indicating if 4 sec aerosol layers should be calculated using aerosol  
# routine or if aerosol layers found by cloud algorithm should be used.  
# 0 = use cloud algorithm, 1 = use aerosol algorithm  
#  
GI_CALC_AER_F = 1  
#  
# Start height for cal cof cloud search (m)  
#  
GI_CAL_CLD_HT = 22000  
#  
# Number of seconds that cal cof sums are averaged over (segment length)  
#  
GI_CAL_TIME = 600  
#  
# Flag to eliminate calibration coefficients (0=no, 1=yes)  
#  
GI_CC_ELIM_F = 1  
#  
# Flag to designate how cal coeffs are converted from granule segment to sec  
# 0 - perform granule mean over high calibration height  
# 1 - perform granule mean over low calibration height  
# 2 - perform running smoother over high calibration height
```

```
# 3 - perform running smoother over low calibration height
#
GI_CC_INTERP_F = 0
#
# Number of points to use in calibration coefficient Interpolation
#
GI_CC_NUM PTS = 3
#
# Number of consecutive bins for aerosol layer at 20 sec
#
GI_CLD_BIN = 7
#
# Number of consecutive bins for aerosol layer at 20 sec
#
GI_CONS_AER20 = 3
#
# Number of consecutive bins for aerosol layer at 4 sec
#
GI_CONS_AER4 = 3
#
# Number of consecutive bins for ground detection
#
GI_CONS_GRD = 2
#
# Number of consecutive bins for PBL
#
GI_CONS_PBL = 2
#
# Lower threshold for DEM (bins)
#
GI_DEM_THR1 = -13
#
# Upper threshold for DEM (bins)
#
GI_DEM_THR2 = 156
#
# Number of bins above surface to start search for ground detection
#
GI_DET_TOP_BIN = 7
#
# If ground detection is less than DEM by this number of bins, use DEM
# for lower limit of profile search
#
GI_GDET_BIN = 0
#
# Don't add profile to cal cof sums if number invalid bins in profile > this
# threshold
#
GI_INVALID THR = 100
#
# Number of consecutive bins for clouds from 10 to 20 km
#
GI_NUM_CLD_HI = 3
#
# Number of consecutive bins for clouds from 0 to 10 km
#
GI_NUM_CLD_LO = 2
#
# Number of consecutive bins for clear sky for 10 to 20 km
```

```
#  
GI_NUM_CLR_HI = 3  
#  
# Number of consecutive bins for clear sky for 0 to 10 km  
#  
GI_NUM_CLR_LO = 2  
#  
# Backscatter profile is excluded from PBL search if a cloud top is detected  
# above this height (m) + 20 sec average PBL height and no cloud bottom or  
# ground is detected  
#  
GI_PBL_CLD_HT = 3000  
#  
# Lower limit for input PBL height  
#  
GI_PBL_LIM1 = 200  
#  
# Upper limit for input PBL height  
#  
GI_PBL_LIM2 = 6000  
#  
# Height (m) above ground detection for PBL search  
#  
GI_PBL_TOP_HT = 7000  
#  
# Troposphere height (m) above average PBL height  
#  
GI_PBL_TROP_HT = 700  
#  
# Height (m) above which polar stratospheric clouds are detected  
#  
GI_PSC_HT = 14000  
#  
# Flag indicating if saturated 532 backscatter values should be replaced  
# with 1064 backscatter values: Do not replace = 0, replace = 1  
#  
GI_REPLACE_F = 0  
#  
# Lower height (m) for random noise calculation  
#  
GI_RN_BOT = 22000  
#  
# Upper height (m) for random noise calculation  
#  
GI_RN_TOP = 23000  
#  
# Day number of the year for start of Summer  
#  
GI_SEASON_DEMARC = 111  
#  
# Flag to use calculated or lab-measured constant 532 calib coeff; use  
# constant value = 0; use calculated value = 1  
#  
GI_USE_GCC_F = 1  
#  
# Flag to use calculated or lab-measured constant 1064 calib coeff; use  
# constant value = 0; use calculated value = 1  
#  
GI_USE_IRCC_F = 1
```

#

### B.3.6 Utility Constants

```
UTIL_VERS = ANC07 Util Globals v2.0 October 2001
#
# CONSTANTS FOR PRODUCT VERIFICATION UTILITY
#
# Constant to indicate that a real parameter was not available in the QA file
#
GD_NOT_AVAIL = -9999.0d0
#
# Constant to indicate that an integer parameter was not available in the
# QA file
#
GI_NOT_AVAIL = -9999
#
# Threshold used for comparing QA and calculated values for parameters.
#
GD_THRESH = 2.0d0
#
# The percent of parameter elements that need to be correct based on
# the threshold for the parameter to be considered correct.
#
GD_ARR_PCT = 50.0d0
#
# The number of elements to print from an parameter with many elements
#
GI_PR_ARR_NUM = 5
#
# The percent of granule elements that determines whether a product file
# is good or bad. A quality flag is set based on this value.
#
GI_C_FLAG_THR = 70
```



## Appendix C

# GSAS ANC06 File Content

### C.1 ANC06 Overview

GSAS software creates ANC06 output files as required by GSDP-31100 (refer to the GLAS Science Software Requirements Document). The ANC06 file contains processing information, error messages, and status messages. The file is in standard GSAS keyword=value format. The format of an ANC06 entry is:

```
[keyword]=[value]
```

The first field [keyword] is a keyword describing the type of information presented. The second field [value] is standardized for use in ANC06. It contains two subfields: the time and a text message. The time is that of the data being processed when the entry was written (if no data have been processed, the time may be 0 or an invalid value). The time is a GSAS-standard time representation (currently UTC seconds).

```
[time] [message]
```

Each type of message may have different message field formats. The rules for parsing an ANC06 entry are:

- the keyword is the string left of the “=”
- the data time is the number immediately to the right of the “=”
- the messages text is the information after the data time

### C.2 ANC06 Example and Description

A sample ANC06 file, created during V1 Acceptance Testing, is examined below. In this example, multiple spaces have been compressed to a single space for readability.

The first entries in the example ANC06 file show what files were initially opened. The message part of each entry is a GSAS standard error/status message. The first field of the error/status message is the error code, the second is the error severity, the third is the reporting routine and the last is the error text.

All initial input files are opened. (this section has been edited for brevity)

```
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
gla05_002_11_0001_0028_2_00_00.dat
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_060000_01_00.dat
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_060000_01_02.dat
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_060000_01_03.dat
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_060000_01_04.dat
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
```

```

anc01_001_20000101_060000_01_01.dat
  0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input) anc07_001_01_00.dat
  0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input) anc07_001_01_01.dat
  0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input) anc07_001_01_03.dat
  0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc08_001_20000101_000000_01_00.dat
  0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc09_001_20000101_000000_01_00.dat
  0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input) anc12_000_00_00.dat
  0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input) anc12_000_00_01.dat
  0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input) anc13_001_01_00.dat
  0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input) anc16_001_01_00.dat
  0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input) anc17_001_01_00.dat
  0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc24_001_20000101_000000_01_00.dat
  0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input) anc27_001_01_00.dat
  0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input) anc27_001_01_01.dat
  0 STATUS= 10005, 0, OpenFOutFile, Opened file: (Output)
gla06_002_11_0001_0028_2_00_00.dat
  0 STATUS= 10005, 0, OpenFOutFile, Opened file: (Output)
gla12_002_11_0001_0015_0_00_00.dat
  0 STATUS= 10005, 0, OpenFOutFile, Opened file: (Output)
gla13_002_11_0001_0015_0_00_00.dat
  0 STATUS= 10005, 0, OpenFOutFile, Opened file: (Output)
gla14_002_11_0001_0015_0_00_00.dat
  0 STATUS= 10005, 0, OpenFOutFile, Opened file: (Output)
gla15_002_11_0001_0015_0_00_00.dat
  0 STATUS= 10005, 0, OpenFOutFile, Opened file: (Output)
qap06_002_11_0001_0028_2_00_00.dat
  0 STATUS= 10005, 0, OpenFOutFile, Opened file: (Output)
qap12_002_11_0001_0015_0_00_00.dat
  0 STATUS= 10005, 0, OpenFOutFile, Opened file: (Output)
qap13_002_11_0001_0015_0_00_00.dat
  0 STATUS= 10005, 0, OpenFOutFile, Opened file: (Output)
qap14_002_11_0001_0015_0_00_00.dat
  0 STATUS= 10005, 0, OpenFOutFile, Opened file: (Output)
qap15_002_11_0001_0015_0_00_00.dat
  0 STATUS= 10010, 0, exec_lib, OpenFiles Subroutine status End of execution

```

The control file name is referenced.

```

0 #-----
0 #=Control File Name
0 #-----
0 CF_NAME=cf_p3t1.ctl

```

The control file contents are listed. Notice that “=” is replaced with “:” so there is no chance of the keyword/value processor being confused. Comments are retained.  
(this section has been edited for brevity)

```

0 CONTROL=# 
0 CONTROL=#-----Execution Information
0 CONTROL=#
0 CONTROL= EXEC_KEY:p3t1
0 CONTROL= DATE_GENERATED:21 September 2001
0 CONTROL= OPERATOR:jlee
0 CONTROL=#
0 CONTROL=-----Static ANC Files
0 CONTROL=#

```

```

0 CONTROL=# Input ANC07 Files : 00=error, 01=global, 03=atmosphere
0 CONTROL=#
0 CONTROL= INPUT_FILE:anc07_001_01_00.dat 0000000 1000000
0 CONTROL= INPUT_FILE:anc07_001_01_01.dat 0000000 1000000
0 CONTROL= INPUT_FILE:anc07_001_01_03.dat 0000000 1000000

.

.

0 CONTROL= OUTPUT_FILE:qap14_002_11_0001_0043_0_00_00.dat 84922.3646 90000.0000
0 CONTROL= OUTPUT_FILE:qap15_002_11_0001_0043_0_00_00.dat 84922.3646 90000.0000
0 CONTROL=#
0 CONTROL=-----Execution Control
0 CONTROL=#
0 CONTROL= WAVEFORM_PROCESS:NONE
0 CONTROL= ELEVATION_PROCESS:ALL
0 CONTROL= SURFACE_TYPE:ALL
0 CONTROL=#
0 CONTROL=-----End of Control File
0 CONTROL=#

```

The exec version number is referenced.

```

0 #-----
0 #=Exec Version Information
0 #-----
0 EXE_VERSION=GLAS_Alt v2.0, October 2001

```

The associated library version numbers are referenced.

```

0 #-----
0 #=Common Library Version Information
0 #-----
0 LIB_VERSION=libexec V2, October 2001
0 LIB_VERSION=libplatform V2.0, October 2001
0 LIB_VERSION=libcntrl V2.0, October 2001
0 LIB_VERSION=libprod V2.0, October 2001
0 LIB_VERSION=libfile V2.0, October 2001
0 LIB_VERSION=libtime V2.0, October 2001
0 LIB_VERSION=liberr V2.0, October 2001
0 LIB_VERSION=libanc V2.0, October 2001
0 LIB_VERSION=libmath V2.0, October 2001
0 LIB_VERSION=libgeo V2.0, October 2001

```

The associated subsystem version number is referenced.

```

0 #-----
0 #=Subsystem Version Information
0 #-----
0 WF_VERSION=libwf v2.0, October 2001
0 ELEV_VERSION=libelev v2.0, October 2001

```

Ancillary files which remain resident in core are read are then closed.

```

0 STATUS= 10011, 0, ReadAnc, ReadAnc Subroutine status Start of execution
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_060000_01_00.dat
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_060000_01_02.dat
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_060000_01_04.dat

```

```

    0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_060000_01_03.dat
    0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_060000_01_01.dat
    0 STATUS= 10007, 0, ReadANC, Finished reading file:
anc01_001_20000101_060000_01_00.dat
    0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_120000_01_00.dat
    0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_120000_01_02.dat
    0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_120000_01_04.dat
    0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_120000_01_03.dat
    0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_120000_01_01.dat
    0 STATUS= 10007, 0, ReadANC, Finished reading file:
anc01_001_20000101_120000_01_00.dat
    0 STATUS= 10007, 0, ReadANC, Finished reading file: anc07_001_01_00.dat
    0 STATUS= 10006, 0, CloseFile, Closed file: anc07_001_01_00.dat
    0 STATUS= 10007, 0, ReadANC, Finished reading file: anc07_001_01_01.dat
    0 STATUS= 10006, 0, CloseFile, Closed file: anc07_001_01_01.dat
    0 STATUS= 10007, 0, ReadANC, Finished reading file: anc07_001_01_03.dat
    0 STATUS= 10006, 0, CloseFile, Closed file: anc07_001_01_03.dat
    0 STATUS= 10015, 0, ReadANC, Initialized file information
anc08_001_20000101_000000_01_00.dat
    0 STATUS= 10015, 0, ReadANC, Initialized file information anc12_000_00_00.dat
    0 STATUS= 10007, 0, ReadANC, Finished reading file: anc12_000_00_01.dat
    0 STATUS= 10006, 0, CloseFile, Closed file: anc12_000_00_01.dat
    0 STATUS= 50005, 0, C_LoadGeoid, IN E_GETGEOID subroutine status
    0 STATUS= 10007, 0, ReadANC, Finished reading file: anc13_001_01_00.dat
    0 STATUS= 10006, 0, CloseFile, Closed file: anc13_001_01_00.dat
    0 STATUS= 10015, 0, ReadANC, Initialized file information anc16_001_01_00.dat
    0 STATUS= 10015, 0, ReadANC, Initialized file information anc17_001_01_00.dat
    0 STATUS= 10015, 0, ReadANC, Initialized file information
anc24_001_20000101_000000_01_00.dat
    0 STATUS= 10006, 0, CloseFile, Closed file: anc27_001_01_01.dat
    0 STATUS= 10011, 0, ReadAnc, ReadAnc Subroutine status End of execution

```

**Parsed execution flag values are referenced.**

```

0 #-----
0 #=Execution Control Flags
0 #-----
0 SURFACE_TYPE=Land = T
0 SURFACE_TYPE=Ocean = T
0 SURFACE_TYPE=Sea_Ice = T
0 SURFACE_TYPE=Ice_Sheet = T
0 MANAGER_EXEC=Waveform = F
0 MANAGER_EXEC=Elevation = T
0 ELEVATION_PROCESS=E_CalcLoadTD = T
0 ELEVATION_PROCESS=E_CalcOceanTD = T
0 ELEVATION_PROCESS=E_CalcEarthTD = T
0 ELEVATION_PROCESS=E_CalcPoleTD = T
0 ELEVATION_PROCESS=E_GetGeoid = T
0 ELEVATION_PROCESS=E_CalcTrop = T
0 ELEVATION_PROCESS=E_IntrpPOD = T
0 ELEVATION_PROCESS=E_CalcStdIR = T
0 ELEVATION_PROCESS=E_CalcLdIR = T

```

---

```

0 ELEVATION_PROCESS=E_CalcOcIR = T
0 ELEVATION_PROCESS=E_CalcSiIR = T
0 ELEVATION_PROCESS=E_CalcIsIR = T
0 ELEVATION_PROCESS=E_CalcSpLoc = T
0 ELEVATION_PROCESS=E_AtMqF = T
0 ELEVATION_PROCESS=E_CalcSlope = T
0 ELEVATION_PROCESS=E_CalcRefl = T
0 ELEVATION_PROCESS=E_ChckReg = T
0 ELEVATION_PROCESS=E_CalcRegRng = T
0 ELEVATION_PROCESS=E_CalcRegParm = T
0 ELEVATION_PROCESS=E_CalcDEM = T

```

Version information from applicable ancillary files is referenced.

```

0 #-----
0 ##Ancillary File Version Information
0 #-----
0 ANC_VERSION=ANC07 Error V2.0 October 2001
0 ANC_VERSION=ANC07 Status V2.0 October 2001
0 ANC_VERSION=ANC07 Globals v2.0 October 2001
0 ANC_VERSION=no ANC07 Atm globals read
0 ANC_VERSION=ANC07 Elev Globals v1.0 Fri Mar 10 11:2
0 ANC_VERSION=no ANC07 WF globals read
0 ANC_VERSION=no ANC07 L1A globals read
0 ANC_VERSION=
0 ANC_VERSION=Version 1.0, 04/12/2000*
0 ANC_VERSION=anc13_dem not read
0 ANC_VERSION=anc16_ltide not read
0 ANC_VERSION=anc17_otide not read

```

Execution trace proceeds. Granules are opened/closed dynamically. (this section has been edited for brevity)

```

0 #-----
0 ##Execution Status
0 #-----
0 STATUS= 10012, 0, ReadData, ReadData Subroutine status
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_120000_01_00.dat
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_120000_01_02.dat
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_120000_01_04.dat
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_120000_01_03.dat
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_120000_01_01.dat
0 STATUS= 10006, 0, CloseFile, Closed file: anc01_001_20000101_060000_01_00.dat
0 STATUS= 10006, 0, CloseFile, Closed file: anc01_001_20000101_060000_01_02.dat
0 STATUS= 10006, 0, CloseFile, Closed file: anc01_001_20000101_060000_01_04.dat
0 STATUS= 10006, 0, CloseFile, Closed file: anc01_001_20000101_060000_01_03.dat
0 STATUS= 10006, 0, CloseFile, Closed file: anc01_001_20000101_060000_01_01.dat
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_180000_01_00.dat
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_180000_01_02.dat
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_180000_01_04.dat
0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)

```

```

anc01_001_20000101_180000_01_03.dat
    0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
anc01_001_20000101_180000_01_01.dat
    0 STATUS= 50006, 0, C_IntrpPOD, IN C_IntrpPOD subroutine status
    0 STATUS= 50008, 0, C_CalcSpLoc, IN C_CALCSLOC subroutine status
    0 STATUS= 50002, 0, E_CalcOceanTD, IN E_CalcOceanTd subroutine status
    0 STATUS= 50003, 0, E_CalcEarthTD, IN E_CalcEarthTd subroutine status
    0 STATUS= 50001, 0, E_CalcLoadTD, In E_CalcLoadTd subroutine status
    0 STATUS= 50013, 0, E_CalcTrop, IN E_CalcTrop subroutine status
    0 STATUS= 50017, 0, E_CalcDEM, IN E_CalcDEM subroutine status
    0 STATUS= 50010, 0, E_CalcSlope, IN E_CALCSLOPE subroutine status
    0 ERROR=-50022, 2, e_calcslope, Cannot take sq. root of negative quantity cant
take square root of a negative quantity
    0 STATUS= 50021, 0, E_OceanParm, IN E_OceanParm subroutine status
.

.

.

    0 STATUS= 10007, 0, NextGranule, Finished reading file:
gla05_002_11_0001_0028_2_00_00.dat
    0 STATUS= 10006, 0, CloseFile, Closed file: gla05_002_11_0001_0028_2_00_00.dat
    0 STATUS= 10005, 0, OpenFInFile, Opened file: (Input)
gla05_002_11_0001_0028_3_00_00.dat
    8100 STATUS= 10006, 0, CloseFile, Closed file: gla06_002_11_0001_0028_2_00_00.dat
    8100 STATUS= 10005, 0, OpenFOutFile, Opened file: (Output)
gla06_002_11_0001_0028_3_00_00.dat
    8100 STATUS= 10005, 0, OpenFiles, Opened file: (In-
put)gla06_002_11_0001_0028_3_00_00.dat
    8100 STATUS= 10006, 0, CloseFile, Closed file: qap06_002_11_0001_0028_2_00_00.dat
    8100 STATUS= 10005, 0, OpenFOutFile, Opened file: (Output)
qap06_002_11_0001_0028_3_00_00.dat
    8100 STATUS= 10005, 0, OpenFiles, Opened file: (In-
put)qap06_002_11_0001_0028_3_00_00.dat
.

.

.

    899590 STATUS= 50013, 0, E_CalcTrop, IN E_CalcTrop subroutine status
    899790 STATUS= 50017, 0, E_CalcDEM, IN E_CalcDEM subroutine status
    899800 STATUS= 50010, 0, E_CalcSlope, IN E_CALCSLOPE subroutine status
    0 STATUS= 10007, 0, NextGranule, Finished reading file:
gla05_002_11_0001_0043_4_00_00.dat
    0 STATUS= 10006, 0, CloseFile, Closed file: gla05_002_11_0001_0043_4_00_00.dat
    899990 STATUS= 10006, 0, CloseFile, Closed file: gla06_002_11_0001_0043_4_00_00.dat
    899990 STATUS= 10006, 0, CloseFile, Closed file: qap06_002_11_0001_0043_4_00_00.dat
    899990 STATUS= 10006, 0, CloseFile, Closed file: gla12_002_11_0001_0043_0_00_00.dat
    899990 STATUS= 10006, 0, CloseFile, Closed file: gla13_002_11_0001_0043_0_00_00.dat
    899990 STATUS= 10006, 0, CloseFile, Closed file: gla14_002_11_0001_0043_0_00_00.dat
    899990 STATUS= 10006, 0, CloseFile, Closed file: gla15_002_11_0001_0043_0_00_00.dat
    899990 STATUS= 10006, 0, CloseFile, Closed file: qap12_002_11_0001_0043_0_00_00.dat
    899990 STATUS= 10006, 0, CloseFile, Closed file: qap13_002_11_0001_0043_0_00_00.dat
    899990 STATUS= 10006, 0, CloseFile, Closed file: qap14_002_11_0001_0043_0_00_00.dat
    899990 STATUS= 10006, 0, CloseFile, Closed file: qap15_002_11_0001_0043_0_00_00.dat
    899990 STATUS= 10013, 0, exec_lib, MainWrap Subroutine status Start of execution

```

An summary of input files/records is created. (this section has been edited for brevity)

```

899990 STATUS= 10013, 0, exec_lib, MainWrap Subroutine status Start of execution
899990 #-----

```

```

899990 #=Input/Output Wrapup Summary
899990 #-----
899990 INPUT_SUMMARY=gla05_002_11_0001_0028_2_00_00.dat: read 810 records
899990 INPUT_SUMMARY=gla05_002_11_0001_0028_3_00_00.dat: read 1287 records
899990 INPUT_SUMMARY=gla05_002_11_0001_0028_4_00_00.dat: read 1616 records
899990 INPUT_SUMMARY=gla05_002_11_0001_0029_1_00_00.dat: read 1281 records
899990 INPUT_SUMMARY=gla05_002_11_0001_0029_2_00_00.dat: read 1616 records
899990 INPUT_SUMMARY=gla05_002_11_0001_0029_3_00_00.dat: read 1287 records
899990 INPUT_SUMMARY=gla05_002_11_0001_0029_4_00_00.dat: read 1617 records
899990 INPUT_SUMMARY=gla05_002_11_0001_0030_1_00_00.dat: read 1281 records
899990 INPUT_SUMMARY=gla05_002_11_0001_0030_2_00_00.dat: read 1616 records
899990 INPUT_SUMMARY=gla05_002_11_0001_0030_3_00_00.dat: read 1287 records
899990 INPUT_SUMMARY=gla05_002_11_0001_0030_4_00_00.dat: read 1617 records
899990 INPUT_SUMMARY=gla05_002_11_0001_0031_1_00_00.dat: read 1280 records

.

899990 INPUT_SUMMARY=anc17_001_01_00.dat: read 0 records
899990 INPUT_SUMMARY=anc24_001_20000101_000000_01_00.dat: read 0 records
899990 INPUT_SUMMARY=anc27_001_01_00.dat: read 0 records
899990 INPUT_SUMMARY=anc27_001_01_01.dat: read 0 records

```

An summary of output files/records is created. (this section has been edited for brevity)

```

899990 OUTPUT_SUMMARY=gla06_002_11_0001_0028_2_00_00.dat: wrote 811 records
899990 OUTPUT_SUMMARY=gla06_002_11_0001_0028_3_00_00.dat: wrote 1288 records
899990 OUTPUT_SUMMARY=gla06_002_11_0001_0028_4_00_00.dat: wrote 1617 records
899990 OUTPUT_SUMMARY=gla06_002_11_0001_0029_1_00_00.dat: wrote 1282 records
899990 OUTPUT_SUMMARY=gla06_002_11_0001_0029_2_00_00.dat: wrote 1617 records
899990 OUTPUT_SUMMARY=gla06_002_11_0001_0029_3_00_00.dat: wrote 1288 records
899990 OUTPUT_SUMMARY=gla06_002_11_0001_0029_4_00_00.dat: wrote 1618 records
899990 OUTPUT_SUMMARY=gla06_002_11_0001_0030_1_00_00.dat: wrote 1282 records
899990 OUTPUT_SUMMARY=gla06_002_11_0001_0030_2_00_00.dat: wrote 1617 records
899990 OUTPUT_SUMMARY=gla06_002_11_0001_0030_3_00_00.dat: wrote 1288 records

.

899990 OUTPUT_SUMMARY=qap14_002_11_0001_0029_0_00_00.dat: wrote 0 records
899990 OUTPUT_SUMMARY=qap14_002_11_0001_0043_0_00_00.dat: wrote 0 records
899990 OUTPUT_SUMMARY=qap15_002_11_0001_0015_0_00_00.dat: wrote 0 records
899990 OUTPUT_SUMMARY=qap15_002_11_0001_0029_0_00_00.dat: wrote 0 records
899990 OUTPUT_SUMMARY=qap15_002_11_0001_0043_0_00_00.dat: wrote 0 records

```

An summary of error/status messages is created. (this section has been edited for brevity)

```

899990 #-----
899990 #=Status/Error Wrapup Summary
899990 #-----
899990 ERROR_SUMMARY= 2833426 Cannot take sq. root of negative quantity
899990 STATUS_SUMMARY= 356 Opened file:
899990 STATUS_SUMMARY= 244 Closed file:
899990 STATUS_SUMMARY= 68 Finished reading file:
899990 STATUS_SUMMARY= 1 ReadAnc Subroutine status
899990 STATUS_SUMMARY= 89693 ReadData Subroutine status
899990 STATUS_SUMMARY= 1 MainWrap Subroutine status
899990 STATUS_SUMMARY= 5 Initialized file information
899990 STATUS_SUMMARY= 358731 In E_CalcLoadTd subroutine status

```

```
899990 STATUS_SUMMARY= 179370 IN E_CalcOceanTd subroutine status
899990 STATUS_SUMMARY= 179370 IN E_CalcEarthTd subroutine status
899990 STATUS_SUMMARY= 179371 IN E_GETGEOID subroutine status
899990 STATUS_SUMMARY= 3587400 IN C_IntrpPOD subroutine status
899990 STATUS_SUMMARY= 13915989 IN C_CALCSPLLOC subroutine status
899990 STATUS_SUMMARY= 2838356 IN E_CALCSLOPE subroutine status
899990 STATUS_SUMMARY= 3587215 IN E_CalcTrop subroutine status
899990 STATUS_SUMMARY= 8425624 IN E_CalcDEM subroutine status
899990 STATUS_SUMMARY= 1024984 IN E_LandParm subroutine status
899990 STATUS_SUMMARY= 2557848 IN E_OceanParm subroutine status
```

Any remaining open files are closed.

```
899990 STATUS= 10013, 0, exec_lib, MainWrap Subroutine status End of execution
899990 STATUS= 10014, 0, exec_lib, CloseFiles Subroutine status Start of execution
899990 STATUS= 10006, 0, CloseFile, Closed file: anc01_001_20000102_120000_01_00.dat
899990 STATUS= 10006, 0, CloseFile, Closed file: anc01_001_20000102_180000_01_00.dat
899990 STATUS= 10006, 0, CloseFile, Closed file: anc01_001_20000102_120000_01_02.dat
899990 STATUS= 10006, 0, CloseFile, Closed file: anc01_001_20000102_180000_01_02.dat
899990 STATUS= 10006, 0, CloseFile, Closed file: anc01_001_20000102_120000_01_03.dat
899990 STATUS= 10006, 0, CloseFile, Closed file: anc01_001_20000102_180000_01_03.dat
899990 STATUS= 10006, 0, CloseFile, Closed file: anc01_001_20000102_120000_01_04.dat
899990 STATUS= 10006, 0, CloseFile, Closed file: anc01_001_20000102_180000_01_04.dat
899990 STATUS= 10006, 0, CloseFile, Closed file: anc01_001_20000102_120000_01_01.dat
899990 STATUS= 10006, 0, CloseFile, Closed file: anc01_001_20000102_180000_01_01.dat
899990 STATUS= 10006, 0, CloseFile, Closed file: anc08_001_20000101_000000_01_00.dat
899990 STATUS= 10006, 0, CloseFile, Closed file: anc09_001_20000101_000000_01_00.dat
899990 STATUS= 10006, 0, CloseFile, Closed file: anc12_000_00_00.dat
899990 STATUS= 10006, 0, CloseFile, Closed file: anc16_001_01_00.dat
899990 STATUS= 10006, 0, CloseFile, Closed file: anc17_001_01_00.dat
899990 STATUS= 10006, 0, CloseFile, Closed file: anc24_001_20000101_000000_01_00.dat
899990 STATUS= 10006, 0, CloseFile, Closed file: anc27_001_01_00.dat
899990 STATUS= 10014, 0, exec_lib, CloseFiles Subroutine status End of execution
```

## Appendix D

# GSAS Error and Status Codes

This section lists errors and possible solutions for each error defined in GSAS.

### D.1 General Errors

#### **-10001 Error Opening File for Input:**

The operating system was unable to open the specified input file. Verify that the requested file exists in (or is correctly linked into) the current directory. Verify the spelling of the filename within the control file (filenames are case-sensitive). Verify that the user has read permission on the file.

#### **-10002 No control file specified.**

A control file must be specified as a command-line argument when GLAS\_Exec is executed. If a control file was specified, then perform the following verification steps:  
Verify that the control file exists in (or is correctly linked into) the current directory.  
Verify that the user has read permission on the control file

#### **-10003 Bad rec\_ndx in control file.**

A bad start or stop time was specified in the control file. The start/stop times are fractional numbers representing UTC seconds. The times must contain only digits and the decimal point.

#### **-10004 Stop rec\_ndx > start rec\_ndx.**

A start time which was chronologically greater than the stop time was found in the control file. Start times must be less than stop times.

#### **-10005 Previous granule stop > current start.**

Multiple granules of the same type were specified in the control file. The start time of a previous granule was chronologically greater than the stop time of the current granules. Multiple granules of the same type must not have time spans which overlap within the same control file. The granules must be entered in the control file in chronological order.

#### **-10006 Error Opening File for Output:**

The operating system was unable to open the specified output file. Verify that the requested file does not already exist in (or is correctly linked into) the current directory. Verify that the user has write permission on the current directory.

#### **-10007 Error Closing File:**

The operating system returned an error code when attempting to close a file. Verify that opened files were not moved from the current directory while GLAS\_Exec was running. This is an unusual error and would normally indicate a programming error.

#### **-10008 Error Reading File:**

The operating system returned an error code when attempting to read a file. Verify that files listed in the control file are present and accessible in the current directory.

This is an unusual error and would normally indicate a programming error or a corrupt input file.

**-10009 Error Writing File:**

The operating system returned an error code when attempting to write a file. Verify that files listed in the control file are present and accessible in the current directory. This is an unusual error and would normally indicate a programming error or a full file system.

**-10010 Error Reading ANC07:**

The operating system returned an error code when attempting to read the specified ANC07 file. Verify that the ANC07 files listed in the control file are present and accessible in the current directory. If all files are present, this indicates corruption in the ANC07 file. Appendix B describes the format of ANC07 files. Verify the ANC07 file contents.

**-10011 Unknown Keyword in ANC07:**

The ANC07 file reader has found a keyword it does not recognize in the ANC07 file. This usually indicates corruption in the ANC07 file. Appendix B lists recognized ANC07 keywords. Verify the ANC07 file contents.

**-10012 Multiple single-instance keywords:**

The control file parser has detected multiple instances of single-instance keywords in the control file. Appendix C details single and multiple-instance keywords in the control file. Verify the control file contents.

**-10013 Multiple-instance keyword limit exceeded:**

The control file parser has detected that the number of instances of a multiple-instance keyword has been exceeded. Verify the control file contents.

**-10014 Unrecognized line in control file:**

The control file parser has found a line in the control file which it does not recognize. Appendix C details the format of the control file. Verify the control file contents.

**-10015 Unknown value in keyword/value pair:**

The control file parser has found a line in the control file with a value it does not recognize. Certain keywords are required to have only certain values. Appendix C lists possible values within the control file. Verify the control file contents.

**-10016 I/O Error Opening Control File:**

The operating system was unable to open the specified control file. Verify that the requested file exists in (or is correctly linked into) the current directory. Verify the spelling of the filename on the command line. Verify that the user has read permission on the file.

**-10017 Error Reading Control File:**

The operating system returned an error code when attempting to read the control file. Verify that the control file is present and accessible in the current directory. This is an unusual error and would normally indicate a programming error or a corrupt control file.

**-10018 Specified Unknown File Type:**

An unknown file type was specified in the control file. A file type is represented by the first 5 characters of the filename. Appendix A lists recognized GLAS file types. Verify the control file.

**-10019 GLA01 Unknown Record Type**

An unknown record type was found within the GLA01 file. Valid record types are header, body, long and short. This error indicates a corrupt GLA01 file or a program error.

**-10020 GLA01 Exceeded Waveform Record Limit**

The number of waveform records per second was exceeded in the GLA01 file. This error indicates a corrupt GLA01 file or a program error.

**-10021 GLA00 Unknown APid**

An unknown APID was detected in the GLA00 data. This error indicates corrupt GLA00 data.

**-10022 GLA00 Wrong APid**

.

**-10023 Max APIDs per sec exceeded**

This indicates that the maximum number of APIDs per second has been exceeded. This error indicates corrupt GLA00 data.

**-10024 Data Time < Granule Start Time**

This indicates that data was lost because the time of the current record is less than the start time of the current granule. Verify the start and stop times in the control file.

**-10025 Error Reading Standard Atmosphere file header**

An error was detected reading the Standard Atmosphere file header. This indicates a corrupt Standard Atmosphere file.

**-10026 Error Reading Standard Atmosphere file data**

An error was detected reading the Standard Atmosphere file data. This indicates a corrupt Standard Atmosphere file.

**-10027 Error Reading Global Aerosol map**

An error was detected reading the Global Aerosol file data. This indicates a corrupt Global Aerosol file.

**-10028 Error Reading Aerosol Troposphere map**

An error was detected reading the Aerosol troposphere file data. This indicates a corrupt Aerosol Troposphere map file.

**-10029 Duplicate APID found**

An error was detected when duplicate APID records were found while processing GLA00 APID data. A duplicate APID is defined as one having the same APID number and same mission elapsed time.

**-10030 EOF or Error Reading ANC33**

An error was detected while reading the ANC33 file. Verify that the file exists and has the correct format.

**-10031 Exceeded maximum GLA00 index entries**

The number of GLA00 index entries in the ANC29 file exceeded the maximum allowed. Contact the GSAS Development team.

**-10032 Non-zero version in APID Primary Hdr**

An inconsistency was detected in an APID primary header field. This is most likely due to a corrupt APID file.

**-10033 Mismatched APID numbers in phdr and file**

An error was detected when verifying that the APID number within the APID data did not match the expected APID number designated by the file type. This is most likely due to a corrupt APID file.

**-10034 Flag indicates no secondary header in APID**

An error was detected when checking the secondary header flag within the APID data. This is most likely due to a corrupt APID file.

**-10035 Gap in APID sequence count**

A gap was detected in the APID sequence count. This most likely indicates missing data or a corrupt APID file.

**-10036 Mismatch in APID lengths**

A mismatch was detected when verifying the APID length field within the secondary header against the expected APID length, based on the file type of the APID. This is most likely due to a corrupt APID file.

**-10037 GPS Delta time exceeds limit**

The time between consecutive GPS updates exceeds a preset limit. This is most likely due to missing data.

**-10038 Inconsistent APID shot count**

The APID shot counts are inconsistent. This indicates that the APID alignment process may not work correctly. Contact the GSAS Development Team.

**-10039 Overflowed number of reserved header records**

This indicates the number of product header records has exceeded the expected number of product header records. The product header records may be incomplete. Contact the GSAS Development Team.

**-10040 Reference Orbit File is empty**

This indicates the reference orbit file is corrupt.

**-10041 Did not find desired rev in rev file**

This indicates that data time is not within the predicted orbit file.

**-10042 Granule time not within Ref Orb file**

This indicates that data time is not accounted for in the reference orbit id table.

**-10043 Undefined Segment type**

This indicates an error in routine while determining segment type.

**-10044 Error running CreateGran\_util**

This indicates that the utility terminated abnormally. An error code will be generated where the error occurred.

**-10045 Time error: current < previous****-10046 Error returned from script**

An error was returned from the SDMS\_met\_script. This is most likely due to a corrupt ANC40 file.

**-10047 File naming conventions do not match**

met\_util has detected that the file naming conventions do not match when comparing the names of the ANC40 and ANC01 files.

**D.1.1 L1A Errors****-20001 Error reading PAD data Eng data**

No Used.

**-20002 Error reading PAD data Eng data**

Not Used.

**-20003 Background value out of range**

If background value is outside of threshold limits, lidar values are set to invalid and lidar quality flag is set to 3.

**-20004 Energy value out of range**

If transmitted energy value is less than threshold value, lidar values are set to invalid.

**-20005 Large number bad lidar values within profile**

If the number of lidar values, within a profile, that fall outside of threshold limits exceeds a certain number, then the lidar values are set to invalid.

**-20006 APID not available - no atm processed**

Either the ancillary science packet data are unavailable or both the photon science packet and the cloud digitizer packet data are unavailable for the record. No L1A atmosphere data are processed and invalid values are written to GLA02.

**-20007 APID not available - atm processed**

Either the photon science packet data or the cloud digitizer packet data are unavailable for the record. Available L1A atmosphere data are processed. Unavailable values given invalid values on GLA02.

**-20008 Range value out of range**

If range to start of profile value is outside of threshold limits, a default value is used.

**-20009 Attenuation setting <= 0, set to 1**

If the attenuation setting is less than 1, it is set equal to 1.

**-20010 1064 computed transmit energy unavailable**

If the 1064 nm transmitted energy is not available, a default value is used.

**-20011 No ANC32 data available**

No ANC32 data are available for processing. Verify the correctness of the control file.

**-20012 No ANC33 data available**

No ANC33 data are available for processing. Verify the correctness of the control file.

**-20013 No ANC25 data available**

No ANC25 data are available for processing. Verify the correctness of the control file.

**-20014 Current number of seconds exceeds max number****-20015 Using estimated shot time**

Shot time is being estimated instead of calculated. This is most likely due to a missing APID19 record.

## D.2 Waveform Errors

**-30001 Singular Matrix**

Matrix inversion performed as part of the least squares fitting of a waveform to a Gaussian has yielded a singular matrix, and no solution is available.

**-30002 Number of peaks found greater than max**

The number of peaks found compounded within a single returned waveform exceeds the max number allowable.

**-30003 No signal**

Not used.

**-30004 Standard deviation is zero**

Not used.

**-30005 Bad Frame**

Not used.

**-30006 Error from C\_InterpPOD**

Not used.

**-30007 Error from C\_CalcSpLoc**

Not used.

**-30008 Error from WF\_Mgr**

Filter number exceeds known values. It is less than 1 or greater than 6. Probable data error.

**-30009 W\_Estimates, Underflow creating DEXP values**

not used

**-30010 WFMgr, Inconsistent Compression Parameters.**

Compression parameters are inconsistent. Input parameters have not been defined consistently. Probable error in telemetry.

**-30011 GLA05\_scal\_mod, Overflow in sigma computation.**

This implies that the errors of the parameters solved for with the Gaussian fit are not within acceptable bounds.

**-30012 QAP file write error on Packet data**

Write error encountered while writing a record of 16-second processing packet data to the QAP file. Possible system-related error.

**-30013 QAP file write error on Summary data**

Write error encountered while writing a record of granule summary data to the QAP file. Possible system-related error.

**-30014 W\_CalcReflect, Illegal value trans energy pulse.**

An unphysical value for the energy of the transmitted pulse exists, and is equal to or less than 0.0 joules. Reflectance is set to default to avoid division by zero and/or an unphysical computation.

**-30015 GLA05\_scal\_mod, Overflow in reflectivity comp**

This implies that values used in the reflectivity calculation are outside bounds.

**-30016 WFMgr\_mod, Indeterminate waveform type**

Flag that identifies a waveform as short vs. long cannot be properly retrieved. Probable data error or missing data.

### D.3 Atmosphere Errors

Subsystem errors and corrective action will be fully documented in V2 of this document.

**-40001 DEM out-of-bounds**

If the DEM value is invalid or outside of threshold limits, do not process record.

**-40002 532 integrated return flag poor or bad**

If the 532 nm integrated return flag indicates that the 532 nm lidar data are poor, the 1 Hz backscatter quality flag is set to 1.

**-40003 Ratio of integrated returns out-of-bounds**

If the ratio of the 532 nm integrated return / molecular integrated return is outside of threshold limits, then the 1 Hz backscatter quality flag is set to 1.

**-40004 Large num bad recs not incl in data**

Not used.

**-40005 Excessive num bad recs not incl in data**

Not used.

**-40006 Time between recs greater than threshold**

Not used.

**-40007 Divide by zero**

If the denominator value is 0, set it to a default value.

**-40008 Exponent too large**

If the exponent value exceeds a certain threshold limit, set the exponent to that limit.

**-40009 Index beyond gi\_cld\_lays**

Not used.

**-40010 Index beyond gi\_pb\_aer\_lays**

Not used.

**-40011 Deficient 532 laser energy flag**

If the 532 nm energy laser flag indicates that the 532 nm transmitted laser energy is deficient, the 532 nm backscatter quality flag is set to 1.

**-40012 Deficient 1064 laser energy flag**

If the 1064 nm energy laser flag indicates that the 1064 nm transmitted laser energy is deficient, the 1064 nm backscatter quality flag is set to 1.

**-40013 Excess num cloudy recs not incl in data**

Not used.

**-40014 PBL signal ratio less than zero**

Not used.

**-40015 Input PBL height out-of-bounds**

If PBL height value is outside threshold limits, calculate PBL height as height of maximum profile signal.

**-40016 Aerosol signal ratio less than zero**

Not used.

**-40017 Insufficient filtered data for processing**

If the number of valid backscatter values averaged over a period of time is below a certain percentage, then data is not processed for that time span. This affects PBL and aerosol detection.

**-40018 Random noise not valid for cloud detection**

If at least two backscatter values are not available to calculate a standard deviation, then the random noise is set to invalid.

**-40019 Too many bad locations**

This error is for met interpolation only. If the input latitude or longitude value is invalid, use last saved value. If the number of invalid values exceeds a threshold limit, this error is called.

**-40020 PBL QA array index beyond array size**

If the PBL height QA array is indexed by a number greater than the array dimension, no more data is added to the array.

**-40021 Invalid lat/lon from GLA07**

This error is for the atmosphere manager only. If control flags are set to skip POD

processing and the latitude or longitude value from GLA07 is invalid, processing stops.

#### **-40022 Invalid DEM from GLA07**

This error is for the atmosphere manager only. If control flags are set to skip POD processing and the DEM value from GLA07 is invalid, the DEM value is set to 0.0.

#### **-40023 Input product is not GLA02**

Not used.

#### **-40024 Invalid value written to ancillary file**

This error is for the atmosphere utility only. If a certain percentage of lidar values within a time segment are invalid, an invalid average is written to the anc36 file for the segment. This message may be seen often if there were clouds present when the data were collected.

#### **-40025 Array index is greater than size allowed**

If an array is indexed by a number greater than the array dimension, processing stops. Check the array dimension in the atmosphere constants file and increase if necessary.

#### **-40026 No ANC36 data for current granule**

If there is no ANC36 file for the current granule, then atmosphere backscatter processing stops.

#### **-40027 Cal cof avg is invalid after elim tests**

If the calibration coefficient is invalid after the elimination tests, use the original average taken before the tests and set the calibration coefficient quality flag to 2.

#### **-40028 ANC36 current granule data is in first structure**

ANC36 data for the current granule are expected in the second structure and data for the previous granule are expected in the first structure. If data for the current granule are in the first structure, processing may continue, but data for the previous granule are not available.

## **D.4 Elevation Errors**

#### **-50001 Error reading met height file**

An error was detected reading the meteorological height file. This indicates a corrupt met height file.

#### **-50002 Error reading met temperature file**

An error was detected reading the meteorological temperature file. This indicates a corrupt met temperature file.

#### **-50003 Error reading met relative humidity file**

An error was detected reading the meteorological relative humidity file. This indicates a corrupt met relative humidity file.

**-50004 Error reading met precip water table file**

An error was detected reading the meteorological precip water file. This indicates a corrupt met precip water file.

**-50005 Elevation more than max pressure level ht**

The elevation is higher than the maximum pressure level height. This indicates elevation is suspect.

**-50006 Max Iterations exceeded in ODE calcs.**

This indicates that the data is suspect.

**-50007 Step size underflow in BS-step method**

This indicates that the data is suspect.

**-50008 Value of cosine GT 1.0 in Geoloc**

The cosine of angle is greater than 1. Most probably due to round-off errors in calculation.

**-50009 Value of cosine LT -1.0 in Geoloc**

The cosine of angle is less than -1. Most probably due to round-off errors in calculation.

**-50010 Max Iterations exceeded in Geoloc**

This occurs when number of iterations exceeds preset limits. This indicates data is suspect.

**-50011 POD file structure is empty**

This occurs when POD file structure is not loaded from control file. Need to check if control file contains ANC08 or ANC20 input file.

**-50012 Time not within vals in POD file structure**

This occurs when data time is not within time range in the POD file structure. Need to check if correct start/stop times are entered in control file for the ANC08/ANC20 files.

**-50013 Error reading 10 consec recs in POD file**

This occurs when data time is past the last time in the ANC08/ANC20 file.

**-50014 Error reading Load Tide coeffs file**

An error was detected reading the load tide coefficients file. This indicates a corrupt load tide coefficients file.

**-50015 Error reading Geoid coeffs file**

An error was detected reading the geoid file. This indicates a corrupt geoid file.

**-50016 Error reading DEM file**

An error was detected reading the DEM file. This indicates a corrupt DEM file.

**-50017 Error reading 1 deg Ocean Mask file**

An error was detected reading the ocean mask file. This indicates a corrupt ocean mask file.

**-50018 Size of ocean td array must be increased**

Error in legacy code. Need to refer to Richard Ray's GOT00 documentation.

**-50019 Likely error in Check1 of legacy ocean td**

Error in legacy code. Need to refer to Richard Ray's GOT00 documentation.

**-50020 Lat/Lon out of bounds in legacy ocean td**

Error in legacy code. Need to refer to Richard Ray's GOT00 documentation.

**-50021 Increase dimensions in call to UTCSRI**

Error in legacy code. Need to refer to Richard Ray's GOT00 documentation.

**-50022 Cannot take sq. root of negative quantity**

This indicates data is suspect.

**-50023 Bad Frame flag set in E\_SealIceParm (rem)**

Not used.

**-50024 Bad Frame flag set in E\_LandParm (rem)**

Not used.

**-50025 Bad Frame flag set in E\_OceanParm (rem)**

Not used.

**-50026 Bad Frame flag set in E\_CalcSlope (rem)**

Not used.

**-50027 Bad Frame flag set in E\_CalcRange (rem)**

Not used.

**-50028 Geopotential Ht >max rel hum ht**

The geopotential height is more than the maximum height for relative humidity. The relative humidity is set to zero.

**-50029 ROT file structure is empty**

This occurs when ROT matrix file structure is not loaded from control file. Need to check if control file contains ANC24 input file.

**-50030 Time not within vals in ROT file structur**

This occurs when data time is not within time range in the ROT file structure. Need to check if correct start/stop times are entered in control file for the ANC24 files.

**-50031 Error reading recs in ROT file**

This indicates a corrupt ROT file.

**-50032 Invalid input POD value in c\_calcsplc**

This indicates that data could not be geolocated because the POD value is invalid.

**-50033 Error reading fine Surface Type file**

An error has occurred reading the ANC27\_00 file. This indicates a corrupt 2min x 2min ANC27 file.

**-50034 Error reading coarse Surface Type file**

An error has occurred reading the ANC27\_01 file. This indicates a corrupt 1deg x 1deg ANC27 file.

**-50035 LAT/LON out of bounds in coarse surf type**

The latitude/longitude is not within the lat/lon boundaries. This indicates that data is suspect.

**-50036 LAT/LON out of bounds in fine surf type**

The latitude/longitude is not within the lat/lon boundaries. This indicates that data is suspect.

**-50037 Fine surface type grid index out of bounds**

This indicates that data is suspect.

## D.5 HP Runtime Error Codes

This section provides a list of HP runtime error codes. These codes are taken directly from *HP Fortran 90 Programmers Reference; Product Number: B3909DB; Fortran 90 Compiler for HP-UX; Document Number: B3908-90002; October 1998*.

Error No.	Error Message	Description	Action
900	ERROR IN FORMAT	FORMAT statement syntax contains an error.	Refer to the syntax for "FORMAT" on page 330. Also see Chapter 8, "I/O and file handling," on page 171 for the syntax of the format specification and edit descriptors.
901	NEGATIVE UNIT NUMBER SPECIFIED	Unit number was not greater than or equal to zero.	Use a non-negative unit number.
902	FORMATTED I/O ATTEMPTED ON UNFORMATTED FILE	Formatted I/O was attempted on a file opened for unformatted I/O.	Open the file for formatted I/O or perform unformatted I/O on this file. <sup>9</sup>
903	UNFORMATTED I/O ATTEMPTED ON FORMATTED FILE	Unformatted I/O was attempted on a file opened for formatted I/O.	Open the file for unformatted I/O or perform formatted I/O on this file.
904	DIRECT I/O ATTEMPTED ON SEQUENTIAL FILE	Direct operation attempted on sequential file, direct operation attempted on opened file connected to a terminal.	Use sequential operations on this file, open file for direct access, or do not do direct I/O on a file connected to a terminal.

Error No.	Error Message	Description	Action
905	ERROR IN LIST-DIRECTED READ OF LOGICAL DATA	Found repeat value, but no asterisk. First character after optional decimal point was not T or F.	Change input data to correspond to syntax expected by list-directed input of logicals, or use input statement that corresponds to syntax of input data.
907	ERROR IN LIST-DIRECTED READ OF CHARACTER DATA	Found repeat value, but no asterisk. Characters not delimited by quotation marks.	Change input data to correspond to syntax expected by list-directed input of characters, or use input statement that corresponds to syntax of input data.
908	COULD NOT OPEN FILE SPECIFIED	Tried to open a file that the system would not allow for one of the following reasons: access to the file was denied by the file system due to access restriction; the named file does not exist; or the type of access request is impossible.	Correct the pathname to open the intended file.
909	SEQUENTIAL I/O ATTEMPTED ON DIRECT ACCESS FILE	Attempted a BACKSPACE, REWIND, or ENDFILE on a terminal or other device for which these operations are not defined.	Do not use the BACKSPACE, REWIND, and ENDFILE statements.
910	ACCESS PAST END OF RECORD ATTEMPTED	Tried to do I/O on record of a file past beginning or end of record.	Perform I/O operation within bounds of the record, or increase record length.
912	ERROR IN LIST I/O READ OF COMPLEX DATA	While reading complex data, one of the following problems has occurred: no left parenthesis and no repeat value; repeat value was found but no asterisk; or no closing right parenthesis.	Change input data to correspond to syntax expected by list-directed input of complex numbers, or use input statement corresponding to syntax of input data.

Error No.	Error Message	Description	Action
913	OUT OF FREE SPACE	Library cannot allocate an I/O block (from an OPEN statement), parse array (for formats assembled at run-time), file name string (from OPEN) characters from list-directed read, or file buffer. The program may be trying to overwrite a shared memory segment defined by another process.	Allocate more free space in the heap area, open fewer files, use FORMAT statements in place of assembling formats at run time in character arrays, or reduce the maximum size of file records.
914	ACCESS OF UNCONNECTED UNIT ATTEMPTED	Unit specified in I/O statement has not previously been connected to anything.	Connect unit using the OPEN statement before attempting I/O on it, or perform I/O on another, already connected, unit.
915	READ UNEXPECTED CHARACTER	Read a character that is not admissible for the type of conversion being performed. Input value was too large for the type of the variable.	Remove from input data any characters that are illegal in integers or real numbers.
916	ERROR IN READ OF LOGICAL DATA	An illegal character was read when logical data was expected.	Change input data to correspond to syntax expected when reading logical data or use input statement corresponding to syntax of input data.
917	OPEN WITH NAMED SCRATCH FILE ATTEMPTED	Executed OPEN statement with STATUS='SCRATCH', but also named the file. Scratch files must not be named.	Either remove the FILE= specifier, or open the file with a status other than STATUS='SCRATCH'.
918	OPEN OF EXISTING FILE WITH STATUS='NEW' ATTEMPTED	Executed OPEN statement with STATUS='NEW', but file already exists.	Either remove the STATUS= specifier from the OPEN statement, or use the STATUS='OLD'; STATUS='UNKNOWN'; or STATUS='REPLACE' specifier.
920	OPEN OF FILE CONNECTED TO DIFFERENT UNIT ATTEMPTED	You attempted to open a file that is already open with a different unit number.	Close the file with the current unit number before attempting to open it with a different unit number.

Error No.	Error Message	Description	Action
921	UNFORMATTED OPEN WITH BLANK SPECIFIER ATTEMPTED	OPEN statement specified FORM='UNFORMATTE D' and BLANK=xx.	Either use FORM='FOR- MATTED' or remove BLANK=xx.
922	READ ON ILLEGAL RECORD ATTEMPTED	Attempted to read a record of a formatted or unformatted direct file that is beyond the current end-of-file.	Read records that are within the bounds of the file.
923	OPEN WITH ILLE- GAL FORM SPECI- FIER ATTEMPTED	FORM= specified string other than 'FORMATTED' or 'UNFORMATTED'.	Use either 'FORMATTED' or 'UNFORMATTED' for the FORM= specifier in an OPEN statement.
924	CLOSE OF SCRATCH FILE WITH STATUS='KEEP' ATTEMPTED	The file specified in the CLOSE statement was previ- ously opened with 'SCRATCH' specified in the STATUS= specifier.	Open the file with a STA- TUS= , specifying a string other than 'SCRATCH' or do not specify STA- TUS='KEEP' in the CLOSE statement for this scratch file.
925	OPEN WITH ILLE- GAL STATUS SPECI- FIER ATTEMPTED	STATUS= specified string other than 'OLD' 'NEW' 'UNKNOWN' 'REPLACE' or 'SCRATCH'.	Use 'OLD', 'NEW', 'UNKNOWN', 'REPLACE' or 'SCRATCH' for the STATUS= specifier in OPEN statement.
926	CLOSE WITH ILLE- GAL STATUS SPECI- FIER ATTEMPTED	STATUS= specified string other than 'KEEP' or 'DELETE'.	Use 'KEEP' or 'DELETE' for the STATUS= specifier in a CLOSE statement.
927	OPEN WITH ILLE- GAL ACCESS SPEC- IFIER ATTEMPTED	ACCESS= specified string other than 'SEQUENTIAL' or 'DIRECT'.	Use 'SEQUENTIAL' or 'DIRECT' for the ACCESS= specifier in an OPEN statement.
929	OPEN OF DIRECT FILE WITH NO RECL SPECIFIER ATTEMPTED	OPEN statement has ACCESS='DIRECT', but no RECL= specifier.	Add RECL= specifier to OPEN statement, or specify ACCESS= 'SEQUENTIAL'.
930	OPEN WITH RECL LESS THAN 1 ATTEMPTED	RECL= specifier in OPEN statement was less than or equal to zero.	Specify a positive number for RECL= specifier in OPEN statement.
931	OPEN WITH ILLE- GAL BLANK SPECI- FIER ATTEMPTED	BLANK= specified string other than 'NULL' or 'ZERO'	Use 'NULL' or 'ZERO' for BLANK= specifier in OPEN statement.

Error No.	Error Message	Description	Action
933	END (OR BEGIN) OF FILE WITH NO END=x SPECIFIER	End-of-file mark read by a READ statement with no END= specifier to indicate label to which to jump.	Use the END= specifier to handle EOF, or check logic.
937	ILLEGAL RECORD NUMBER SPECIFIED	A record number less than one was specified for direct I/O.	Use record numbers greater than zero.
942	ERROR IN LIST-DIRECTED READ - CHARACTER DATA READ FOR ASSIGNMENT TO NON-CHARACTER VARIABLE	A character string was read for a numerical or logical variable.	Check input data and input variable type.
944	RECORD TOO LONG IN DIRECT UNFORMATTED I/O	Output requested is too long for specified (or pre-existing) record length.	Make the number of bytes output by WRITE less than or equal to the file record size.
945	ERROR IN FORMATTED I/O	More bytes of I/O were requested than exist in the current record.	Match the format to the data record.
953	NO REPEATABLE EDIT DESCRIPTOR IN FORMAT STRING	No format descriptor was found to match I/O list items.	Add at least one repeatable edit descriptor to the format statement.
956	FILE SYSTEM ERROR	The file system returned an error status during an I/O operation.	See the associated file system error message.
957	FORMAT DESCRIPTOR INCOMPATIBLE WITH NUMERIC ITEM IN I/O LIST	A numeric item in the I/O list was matched with a non-numeric edit descriptor.	Match format descriptors to I/O list.
958	FORMAT DESCRIPTOR INCOMPATIBLE WITH CHARACTER ITEM IN I/O LIST	A character item in the I/O list was matched with an edit descriptor other than A or R.	Match format descriptors to I/O list.
959	FORMAT DESCRIPTOR INCOMPATIBLE WITH LOGICAL ITEM IN I/O LIST	A logical item in the I/O list was matched with a edit descriptor other than L.	Match format descriptors to I/O list.
973	RECORD LENGTH DIFFERENT IN SUBSEQUENT OPEN	Record length specified in second OPEN conflicted with the value as opened.	Only BLANK=, DELIM=, and PAD= specifiers may be changed by a redundant OPEN.

Error No.	Error Message	Description	Action
974	RECORD ACCESSED PAST END OF INTERNAL FILE RECORD (VARIABLE)	An attempt was made to transfer more characters than internal file length.	Match READ or WRITE statement with internal file size.
975	ILLEGAL NEW FILE NUMBER REQUESTED IN FSET FUNCTION	The file number requested to be set was not a legal file system file number.	Check that the OPEN succeeded and the file number is correct.
976	UNEXPECTED CHARACTER IN "NAMELIST" READ	An illegal character was found in namelist-directed input.	Be sure input data conforms to the syntax rules for namelist-directed input, or remove illegal character from data.
977	ILLEGAL SUB-SCRIPT OR SUB-STRING IN "NAMELIST" READ	An invalid subscript or substring specifier was found in namelist-directed input. Possible causes include bad syntax, subscript/substring component out-of-bounds, wrong number of subscripts and substring on non-character variable.	Check input data for syntax errors. Be sure subscript/substring specifiers are correct for data type. Specify only array elements within the bounds of the array being read.
978	TOO MANY VALUES IN "NAMELIST" READ	Too many input values were found during a namelist-directed READ. This message will be generated by attempts to fill variables beyond their memory limits.	Supply only as many values as the length of the array.
979	VARIABLE NOT IN NAMELIST GROUP	A variable name was encountered in the input stream that was not declared as part of the current namelist group.	Read only the variables in this namelist.
980	NAMELIST I/O ATTEMPTED ON UNFORMATTED FILE	An illegal namelist-directed I/O operation was attempted on an unformatted (binary) file.	Specify FORM='FORMATTED' in OPEN statement, or use namelist-directed I/O only on formatted files.
1010	OPEN WITH ILLEGAL PAD SPECIFIER ATTEMPTED	An attempt was made to open a file with an illegal value specified for the PAD= specifier.	Specify either PAD='YES' or PAD='NO'.
1011	OPEN WITH ILLEGAL POSITION SPECIFIER ATTEMPTED	An attempt was made to open a file with an illegal value specified for the POSITION= specifier.	Specify POSITION='ASIS', POSITION='REWIND' or POSITION='APPEND'.

Error No.	Error Message	Description	Action
1012	OPEN WITH ILLEGAL DELIM SPECIFIER ATTEMPTED	An attempt was made to open a file with an illegal value specified for the DELIM= specifier.	Specify DELIM= 'APOSTROPHE', DELIM='QUOTE' or DELIM='NONE'.
1013	OPEN WITH ILLEGAL ACTION SPECIFIER ATTEMPTED	An attempt was made to open a file with an illegal value specified for the ACTION= specifier.	Specify ACTION='READ', ACTION='WRITE' or ACTION='READWRITE'.

## Abbreviations & Acronyms

ALT	designation for the EOS-Altimeter spacecraft series
DAAC	Distributed Active Archive Center
EDOS	EOS Data and Operations System
EOC	EOS Operating Center
EOS	NASA Earth Observing System Mission Program
EOSDIS	Earth Observing System Data and Information System
GDS	GLAS Ground Data System
GLAS	Geoscience Laser Altimeter System instrument or investigation
GPS	Global Positioning System
GSFC	NASA Goddard Space Flight Center at Greenbelt, Maryland
GSFC/WFF	NASA Goddard Space Flight Center/Wallops Flight Facility at Wallops Island, Virginia
ID	Identification
IEEE	Institute for Electronics and Electrical Engineering
IST	GLAS Instrument Support Terminal
LASER	Light Amplification by Stimulated Emission of Radiation
LIDAR	Light Detection and Ranging
N/A	Not (/) Applicable
NASA	National Aeronautics and Space Administration
NOAA	National Oceanic and Atmospheric Administration
POD	Precision Orbit Determination
SCF	GLAS investigation Science Computing Facility and workstation(s)
SDPS	Science Data Processing Segment
TBD	to be determined, to be done, or to be developed
UNIX	the operating system jointly developed by the AT&T Bell Laboratories and the University of California-Berkeley System Division



# Glossary

aggregate	A collection, assemblage, or grouping of distinct data parts together to make a whole. It is generally used to indicate the grouping of GLAS data items, arrays, elements, and EOS parameters into a data record. For example, the collection of Level 1B EOS Data Parameters gathered to form a one-second Level 1B data record. It could be used to represent groupings of various GLAS data entities such as data items aggregated as an array, data items and arrays aggregated into a GLAS Data Element, GLAS Data Elements aggregated as an EOS Data Parameter, or EOS Data Parameters aggregated into a Data Product record.
array	An ordered arrangement of homogenous data items that may either be synchronous or asynchronous. An array of data items usually implies the ability to access individual data items or members of the array by an index. An array of GLAS data items might represent the three coordinates of a georeference location, a collection of values at a rate, or a collection of values describing an altimeter waveform.
file	A collection of data stored as records and terminated by a physical or logical end-of-file (EOF) marker. The term usually applies to the collection within a storage device or storage media such as a disk file or a tape file. Loosely employed it is used to indicate a collection of GLAS data records without a standard label. For the Level 1A Data Product, the file would constitute the collection of one-second Level 1A data records generated in the SDPS working storage for a single pass.
header	A text and/or binary label or information record, record set, or block, prefacing a data record, record set, or a file. A header usually contains identifying or descriptive information, and may sometimes be embedded within a record rather than attached as a prefix.
item	Specifically, a data item. A discrete, non-decomposable unit of data, usually a single word or value in a data record, or a single value from a data array. The representation of a single GLAS data value within a data array or a GLAS Data Element.
label	The text and/or binary information records, record set, block, header, or headers prefacing a data file or linked to a data file sufficient to form a labeled data product. A standard label may imply a standard data product. A label may consist of a single header as well as multiple headers and markers depending on the defining authority.
Level 0	The level designation applied to an EOS data product that consists of raw instrument data, recorded at the original resolution, in time order, with any duplicate or redundant data packets removed.
Level 1A	The level designation applied to an EOS data product that consists of reconstructed, unprocessed Level 0 instrument data, recorded at the full resolution with time referenced data records, in time order. The data are annotated with ancillary information including radiometric and geometric calibration coefficients, and georeferencing parameter data (i.e., ephemeris data). The included, computed coefficients and parameter data have not however been applied to correct the Level 0 instrument data contents.

Level 1B	The level designation applied to an EOS data product that consists of Level 1A data that have been radiometrically corrected, processed from raw data into sensor data units, and have been geolocated according to applied georeferencing data.
Level 2	The level designation applied to an EOS data product that consists of derived geophysical data values, recorded at the same resolution, time order, and geo-reference location as the Level 1A or Level 1B data.
Level 3	The level designation applied to an EOS data product that consists of geophysical data values derived from Level 1 or Level 2 data, recorded at a temporally or spatially resampled resolution.
Level 4	The level designation applied to an EOS data product that consists of data from modeled output or resultant analysis of lower level data that are not directly derived by the GLAS instrument and supplemental sensors.
metadata	The textual information supplied as supplemental, descriptive information to a data product. It may consist of fixed or variable length records of ASCII data describing files, records, parameters, elements, items, formats, etc., that may serve as catalog, data base, keyword/value, header, or label data. This data may be parsable and searchable by some tool or utility program.
orbit	The passage of time and spacecraft travel signifying a complete journey around a celestial or terrestrial body. For GLAS and the EOS ALT-L spacecraft each orbit starts at the time when the spacecraft is on the equator traveling toward the North Pole, continues through the equator crossing as the spacecraft ground track moves toward the South Pole, and terminates when the spacecraft has reached the equator moving northward from the South Polar region.
model	A graphical representation of a system.
module	A collection of program statements with four basic attributes: input and output, function, mechanics and internal data.
parameter	Specifically, an EOS Data Parameter. This is a defining, controlling, or constraining data unit associated with a EOS science community approved algorithm. It is identified by an EOS Parameter Number and Parameter Name. An EOS Data Parameter within the GLAS Data Product is composed of one or more GLAS Data Elements
pass	A sub-segment of an orbit, it may consist of the ascending or descending portion of an orbit (e.g., a descending pass would consist of the ground track segment beginning with the northernmost point of travel through the following southernmost point of travel), or the segment above or below the equator; for GLAS the pass is identified as either the northern or southern hemisphere portion of the ground track on any orbit
PDL	Program Design Language (Pseudocode). A language tool used for module programming and specification. It is at a higher level than any existing compilable language.
process	An activity on a dataflow diagram that transforms input data flow(s) into output data flow(s).

product	Specifically, the Data Product or the EOS Data Product. This is implicitly the labeled data product or the data product as produced by software on the SDPS or SCF. A GLAS data product refers to the data file or record collection either prefaced with a product label or standard formatted data label or linked to a product label or standard formatted data label file. Loosely used, it may indicate a single pass file aggregation, or the entire set of product files contained in a data repository.
program	The smallest set of computer instructions that can be executed as a stand-alone unit
record	A specific organization or aggregate of data items. It represents the collection of EOS Data Parameters within a given time interval, such as a one-second data record. It is the first level decomposition of a product file.
Scenario	A single execution path for a process.
Standard Data Product	Specifically, a GLAS Standard Data Product. It represents an EOS ALT-L/ GLAS Data Product produced on the EOSDIS SDPS for GLAS data product generation or within the GLAS Science Computing Facility using EOS science community approved algorithms. It is routinely produced and is intended to be archived in the EOSDIS data repository for EOS user community-wide access and retrieval.
State Transition Diagram	Graphical representation of one or more scenarios.
Stub	(alias dummy module) a primitive implementation of a subordinate module, which is normally used in the top-down testing of superordinate (higher) modules.
Structured Chart	A graphical tool for depicting the partitioning of a system into modules, the hierarchy and organization of those modules, and the communication interfaces between the modules.
Structured Design	The development of a blueprint of a computer system solution to a problem, having the same components and interrelationships among the components as the original problem has.
Subroutine	A program that is called by another program
variable	Usually a reference in a computer program to a storage location, i.e., a place to contain or hold the value of a data item.

